 
 
 
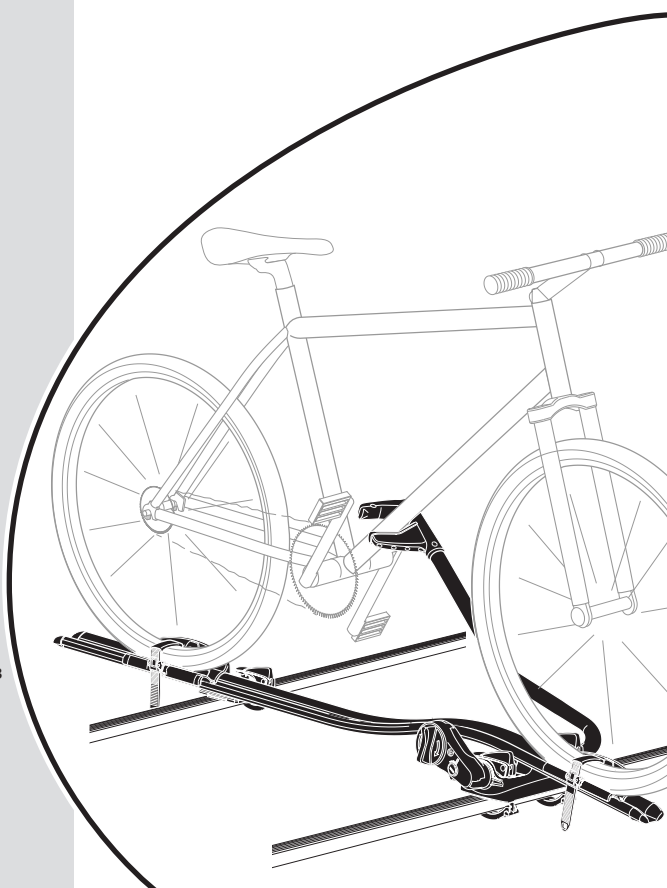 



PZ4AP-PR591-B0

GB	Fitting instructions	Bicycle holder
DE	Montageanleitung	Fahrradträger
FR	Instructions de montage	Porte-vélos
NL	Montage-instructies	Fietsendrager
IT	Istruzioni per il montaggio	Portabici
ES	Instrucciones de montaje	Portabici
PT	Instruções de Montagem	Suporte para bicicletas
SE	Monteringsavisning	Cykelhållare
NO	Monteringsinstruksjoner	Sykelholder
SF	Asennusohje	Polkupyöräteline
DK	Monteringsanvisning	Cykelholder
IS	Leiðbeiningar um festingu	Hjólagrind
EST	Paigaldusjuend	Jalgrattaraam
LV	Uzstādīšanas inormācija	Velosipēdu turētājs
LT	Tvirtinimo instrukcijos	Dviračių laikiklis
PL	Instrukcja montażu	Bagażnik rowerowy
CZ	Návod k montáži	Nosič jízdních kol
SK	Návod na montáž	Nosič bicyklov
SI	Navodila za pritrjevanje	Prtljažnik za kolo
HR	Upute za montažu	Nosač za bicikle
RS	Uputstva za montažu	Držač za bicikl
RO	Instrucțiuni de montare	Suport pentru bicicletă
HU	A felszerelés módja	Kerékpártartó
BU	Инструкции за монтаж	Приставка за велосипед
GR	Οδηγίες τοποθέτησης	Βάση για ποδήλατα
TR	Montaj talimatları	Bisiklet taşıyıcı
RU	Инструкции по установке	Кронштейн для велосипедов
IL	חוביח תוארוו	משנמ לאופניו



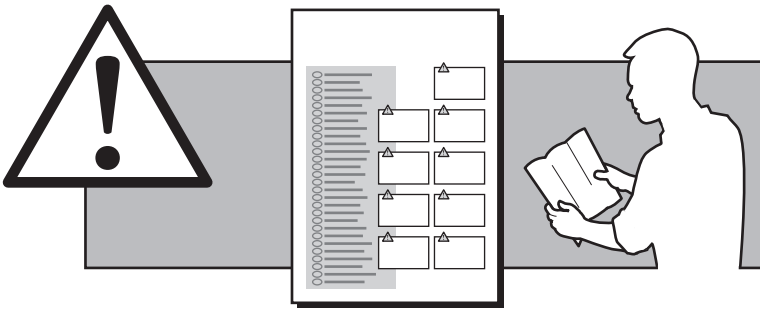

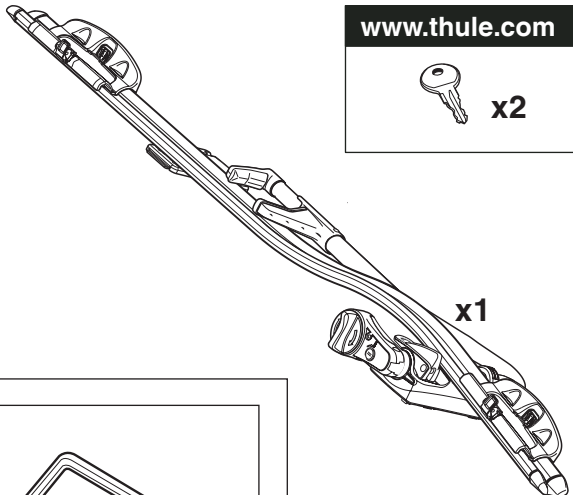


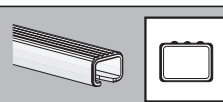
x1


www.thule.com




x2

PZ4AP-PR591-60




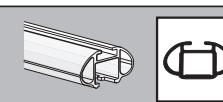

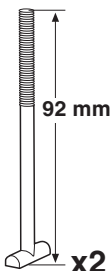


92 mm

x2

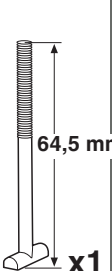


64,5 mm

x1

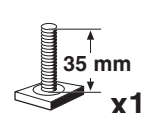


35 mm

x1

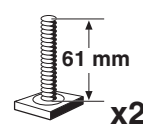


61 mm


x2




x3

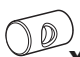


x3




x2

 
 


x2



x2

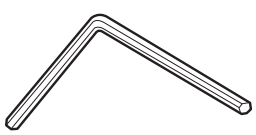

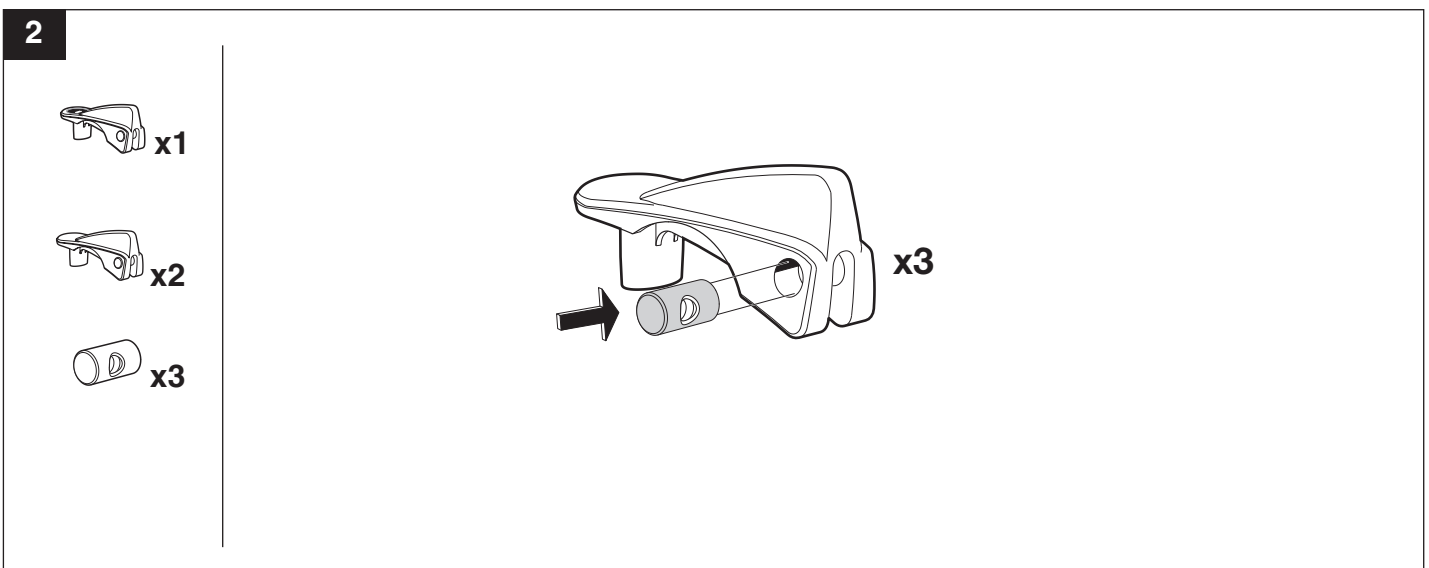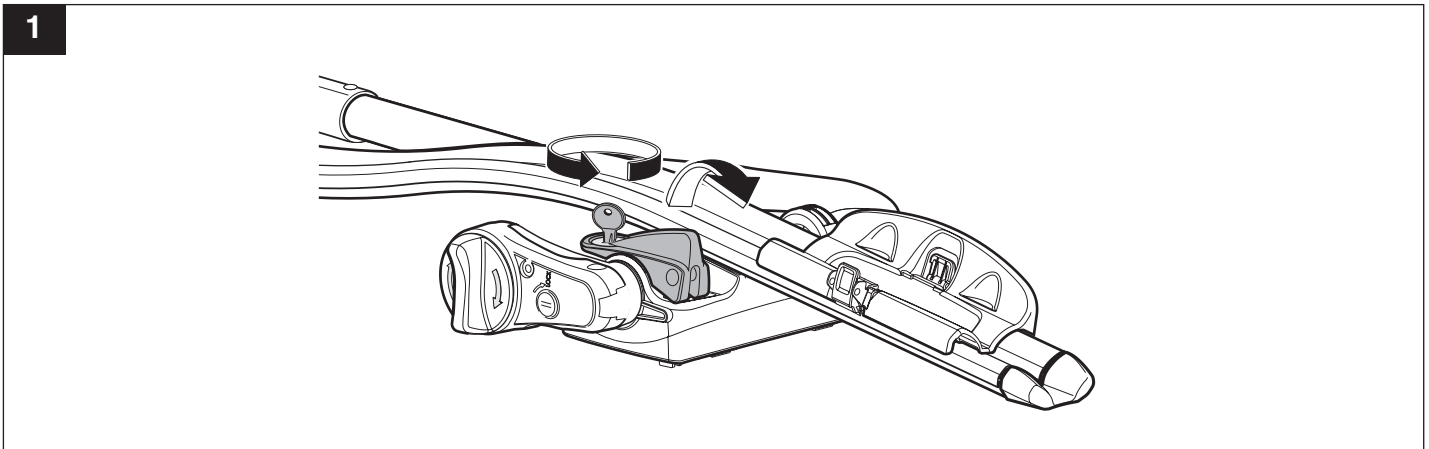



3

- x1
- x2
- 64,5 mm x1
- 92 mm x2

64,5 mm

92 mm

4

- x3
- x2
- x2

x3

x2

x2

5

1

2

 
3

1

2

3

click




3




x1



 
x2



x1

 


x2

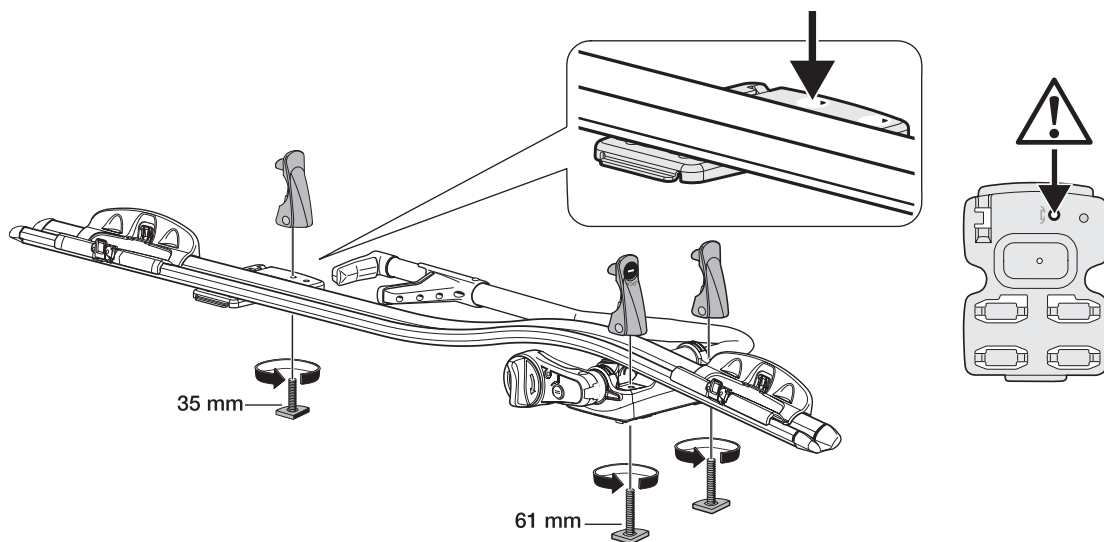 


4




 
x2








x2

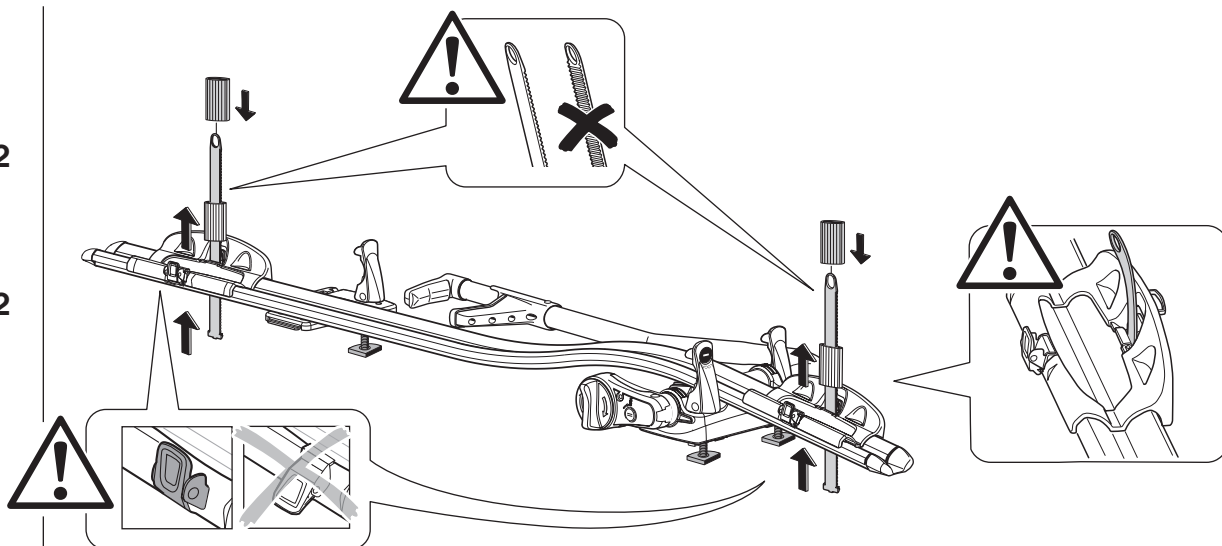 

5

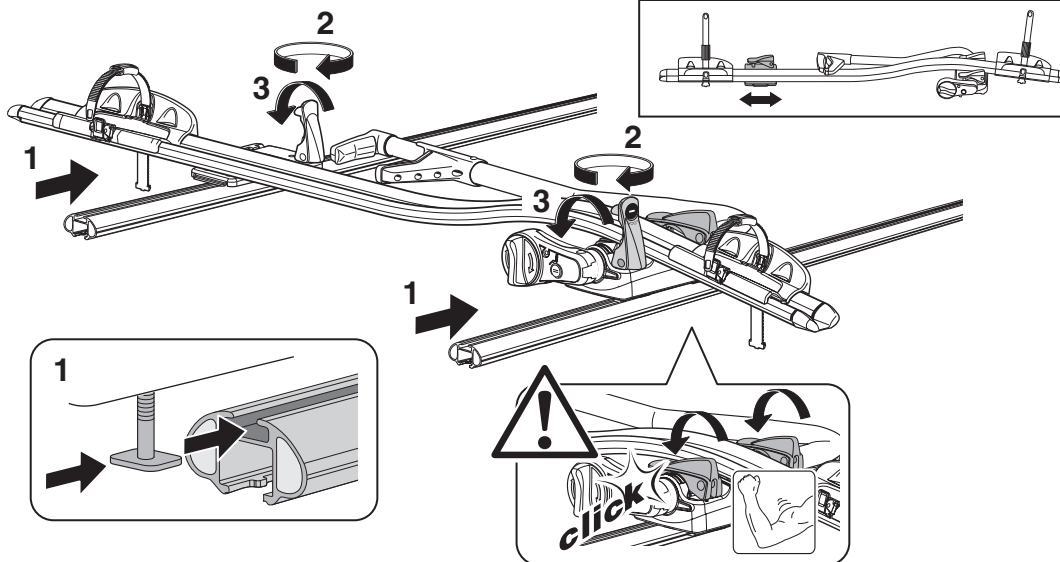  

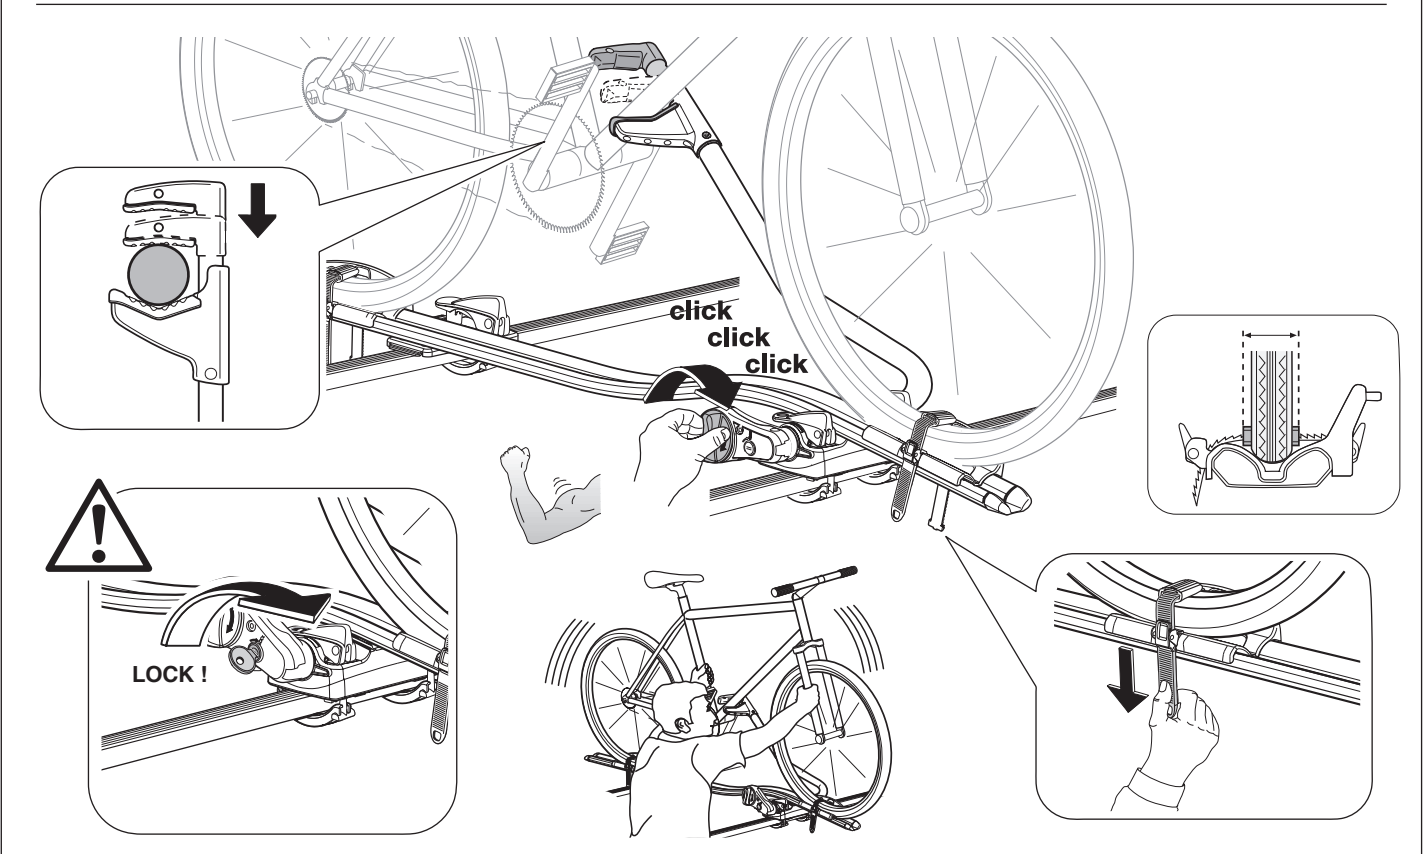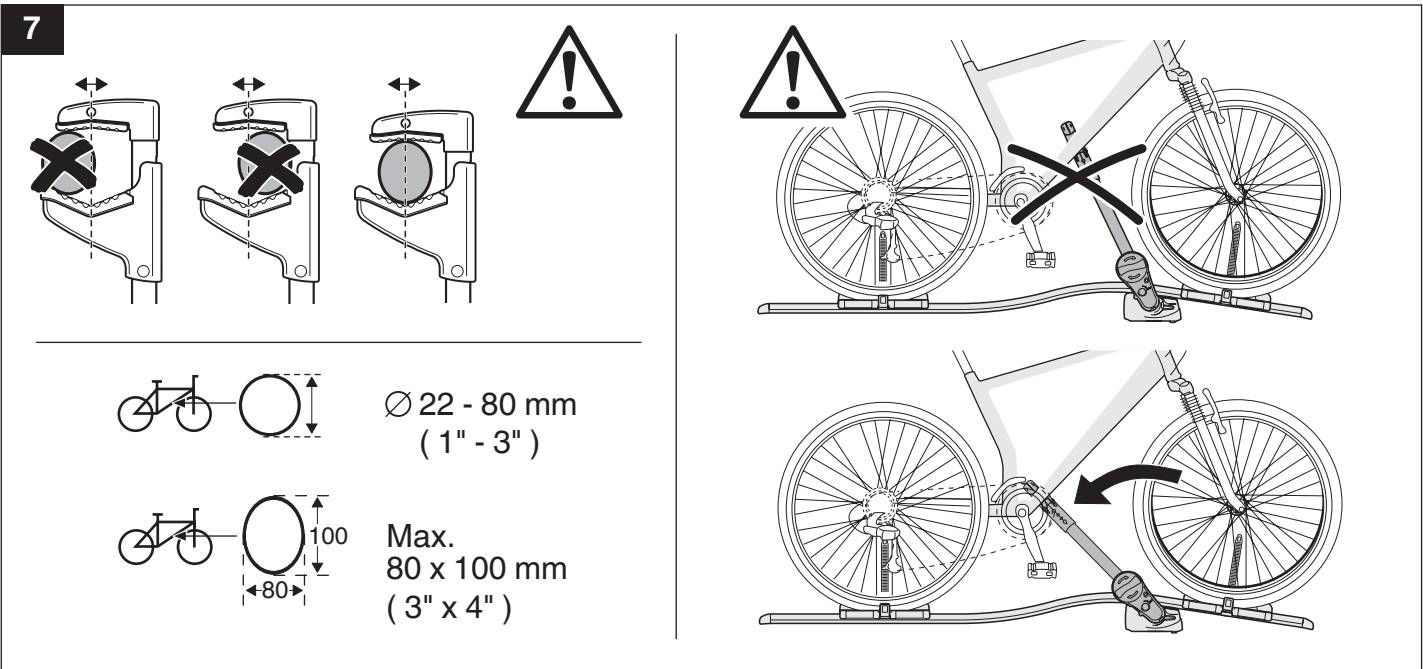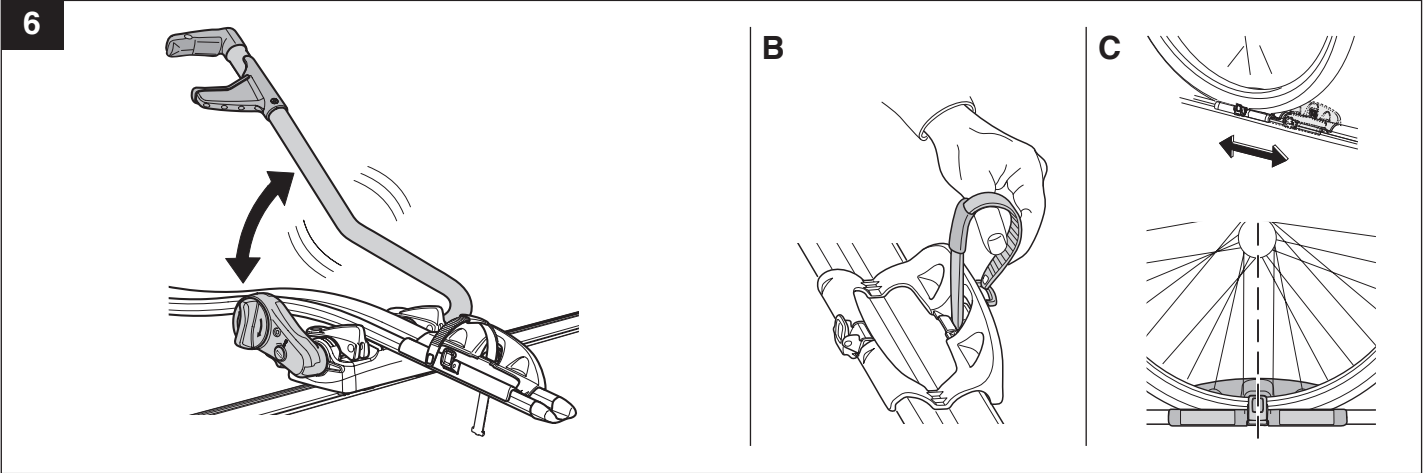   

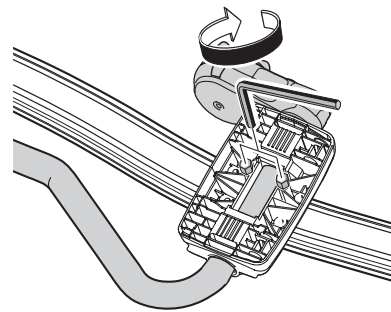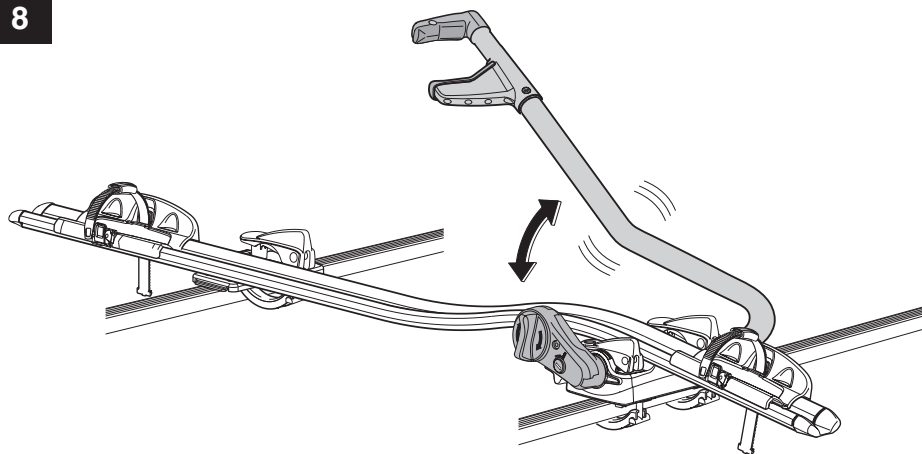  

GB Adjust the tightening torque.

DE Den vorschriftsmäßigen Anzug kontrollieren.

FR Régler le couple de serrage.

NL Draai alles nogmaals aan.

IT Regolare la coppia di serraggio.

ES Ajuste el apriete.

PT Ajuste o torque do aperto.

SE Justera åtdragningen.

NO Juster tilbaketrekingsmomentet.

SF Säädä kireyttä.

DK Juster tilspændingsmomentet.

IS Stillið herðinguna.

EST Reguleerige pingutusmomenti.

LV Pielāgojiet pievilkšanas spēku.

LT Reguliukite veržimo jėgą.

PL Ustaw właściwą siłę zacisku.

CZ Překontrolujte přitažení.

SK Skontrolujte utiahnutie.

SI Prilagodite čeljust vilicam kolesa.

HR Podešavanje priteznog momenta.

RS Podesite čekrk.

RO Reglați cuptul de strângere.

HU A rögzítónyomaték beállítása.

 
 
 
 
BU Регулирайте затягащия момент.

GR Προσαρμόστε τη ροπή σύσφιξης.

TR Sıkma torkunun ayarlanması.

RU Отрегулируйте крутящий момент затяжки.

IL כוון את חגורת ההידוק.

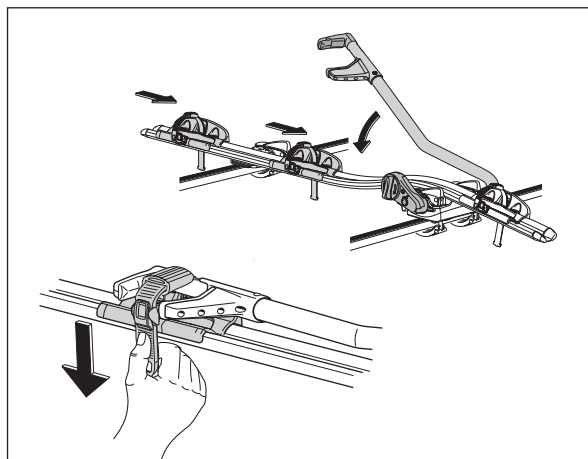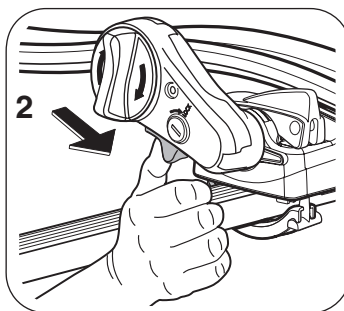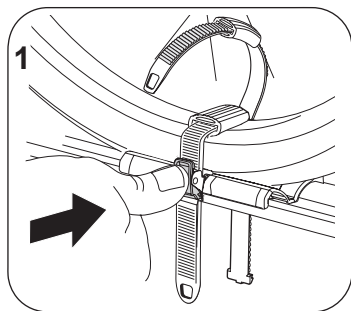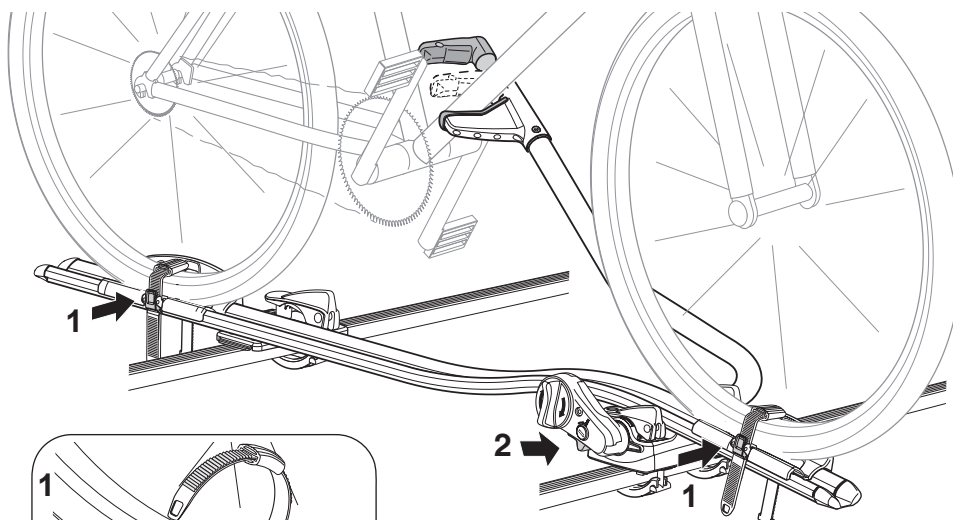

- GB** Removal
DE Demontieren
FR Démontage
NL Demontage
IT Rimozione
ES Remoção
PT Remoção
SE Demontering
NO Demontering
SF Irrotus
DK Afmontering
IS Að fjarlægja
EST Eemaldamine
LV Noņemšana
LT Nuėmimas
PL Wymontowywanie
CZ Demontáž
SK Demontáž
SI Odstranjevanje
HR Uklanjanje
RS Skidanje
RO Îndepărtare
HU Leszerelés
BU Демонтиране
GR Απομάκρυνση
TR Sökme
RU Снятие
IL הסרה

TIPS!

