

Rear Spoiler INSTALLATION INSTRUCTIONS ES 350 / 300(h)


Model year	2012/06
Vehicle code	U*F4**-****W
Part number	PT47A-33130-AA PT47A-33130 (Mylar Drill Template)

Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted
1	03.09.13	1		X		
1	03.09.13	3		X		
1	03.09.13	5	5	X		
1	03.09.13	5	6	X		
1	03.09.13	11	19	X		


PT47A-33130-AA

A

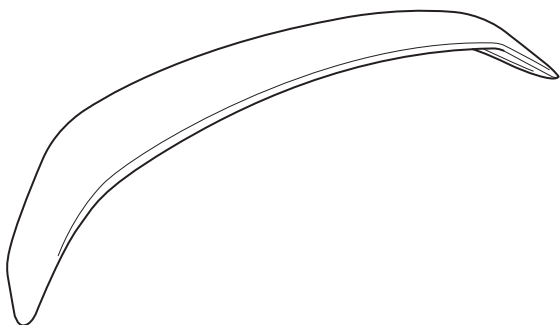

1x


B




4x

PT47A-33130







C

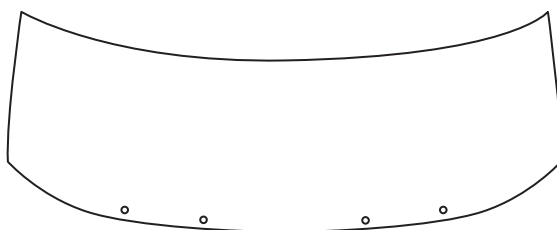


1x



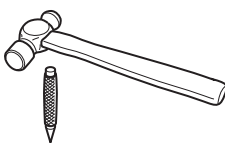





10 mm

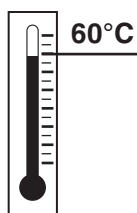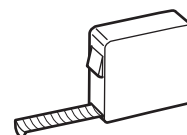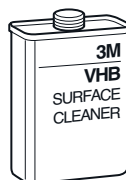
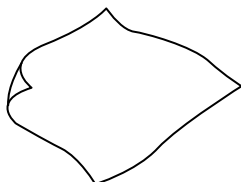
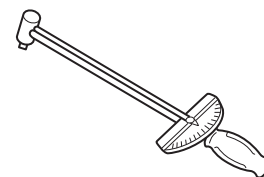




WÜRTH
08903081

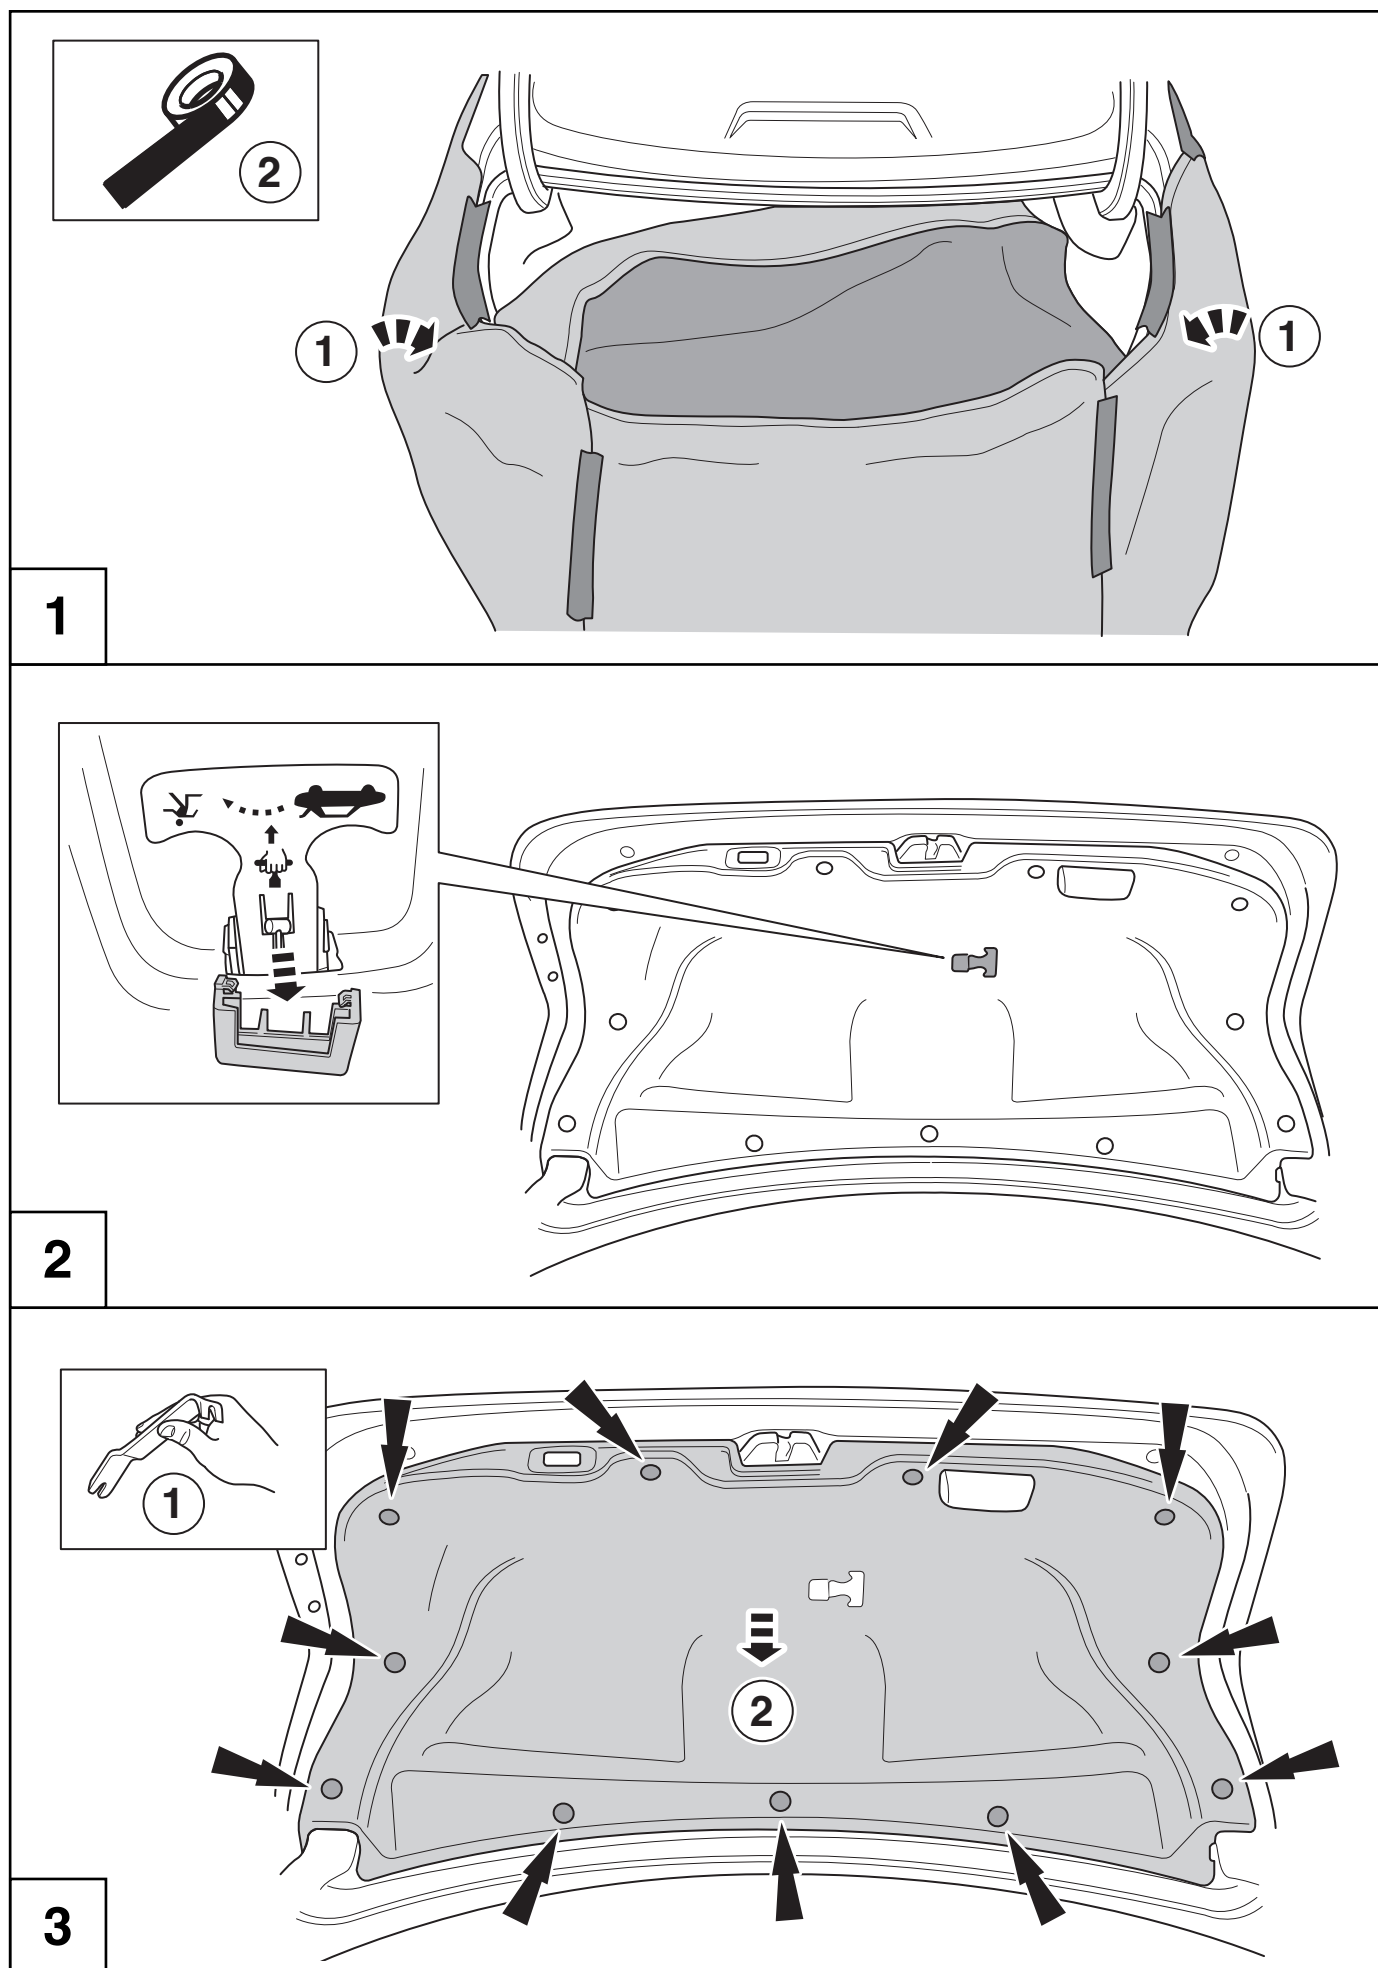

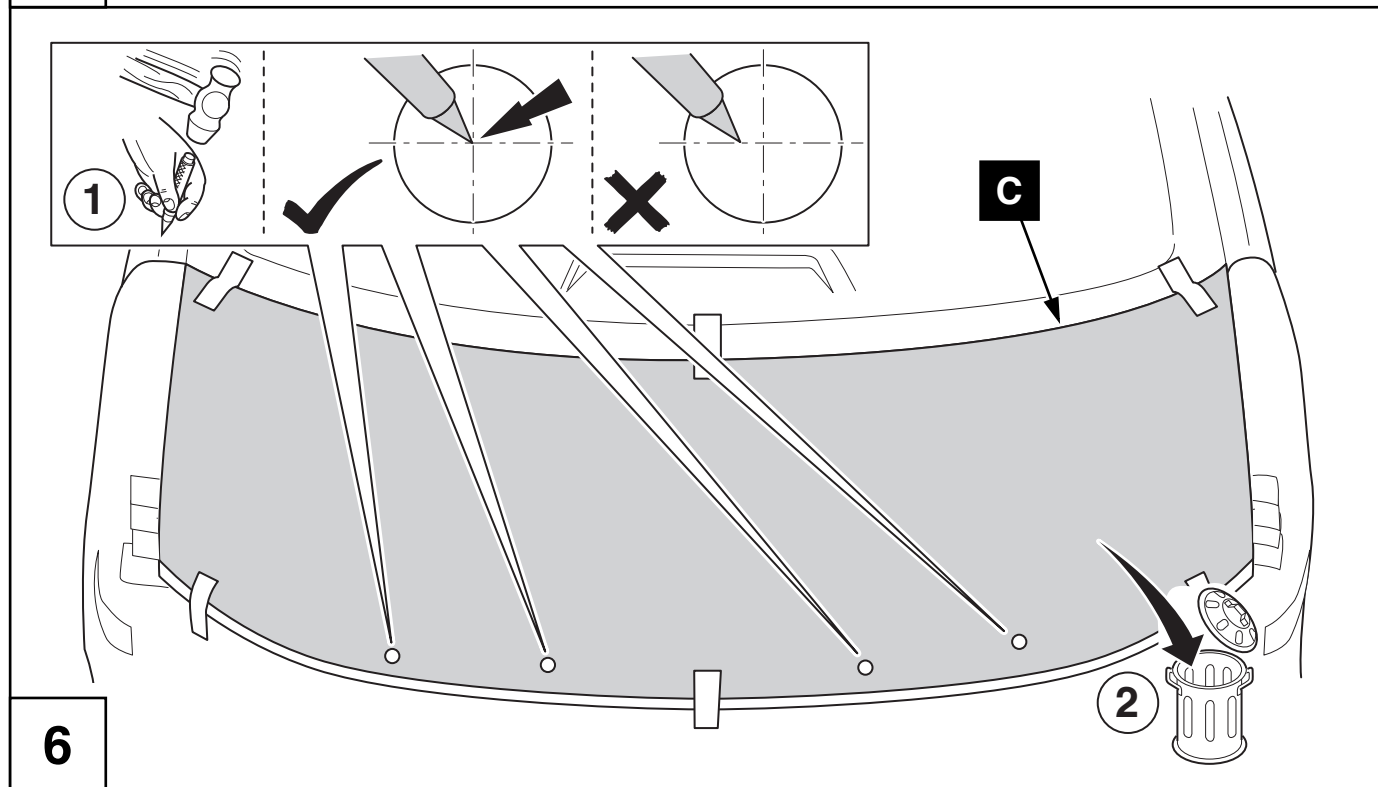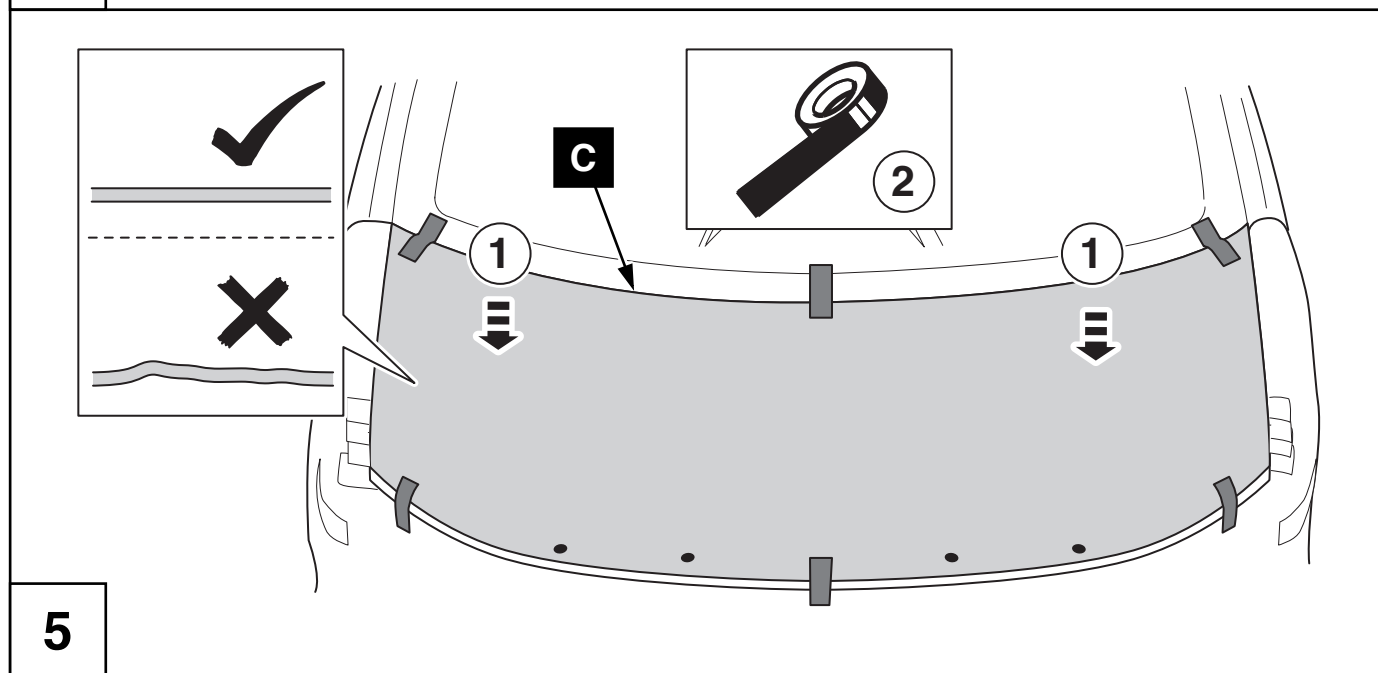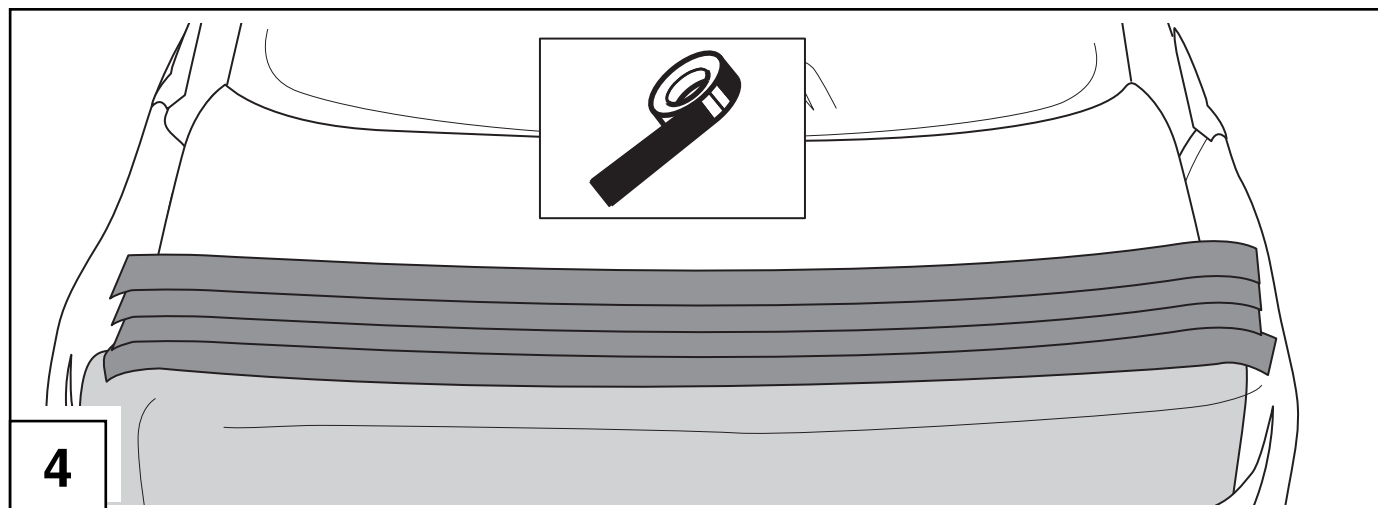


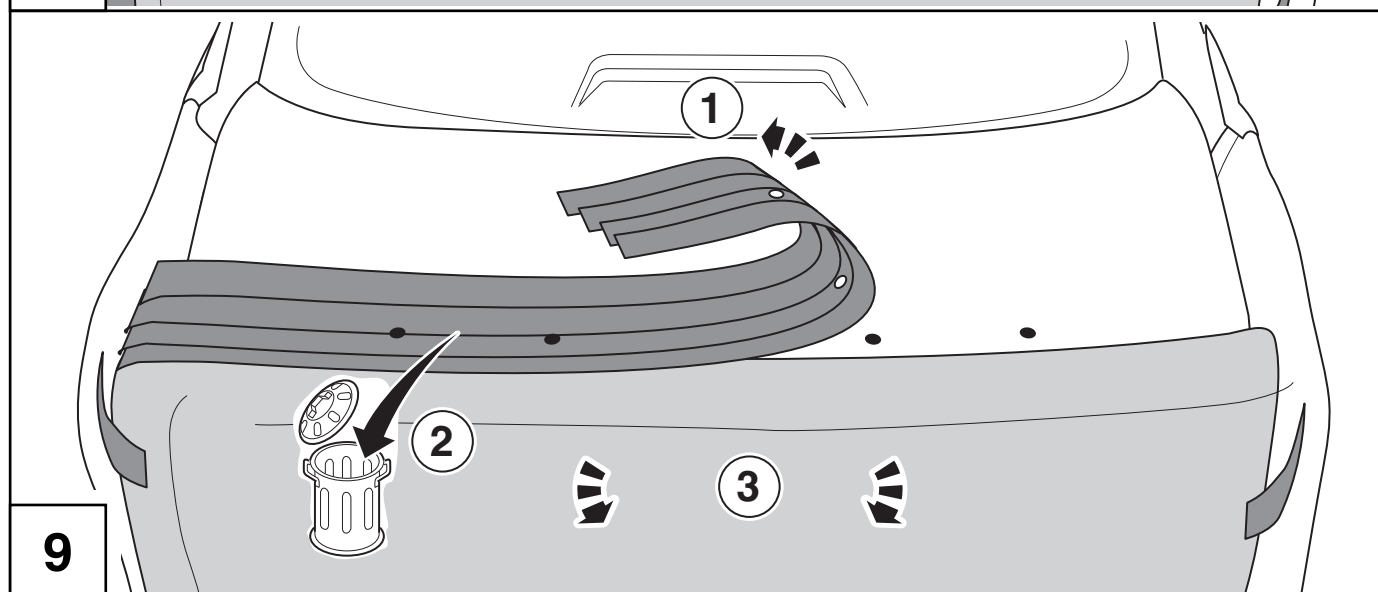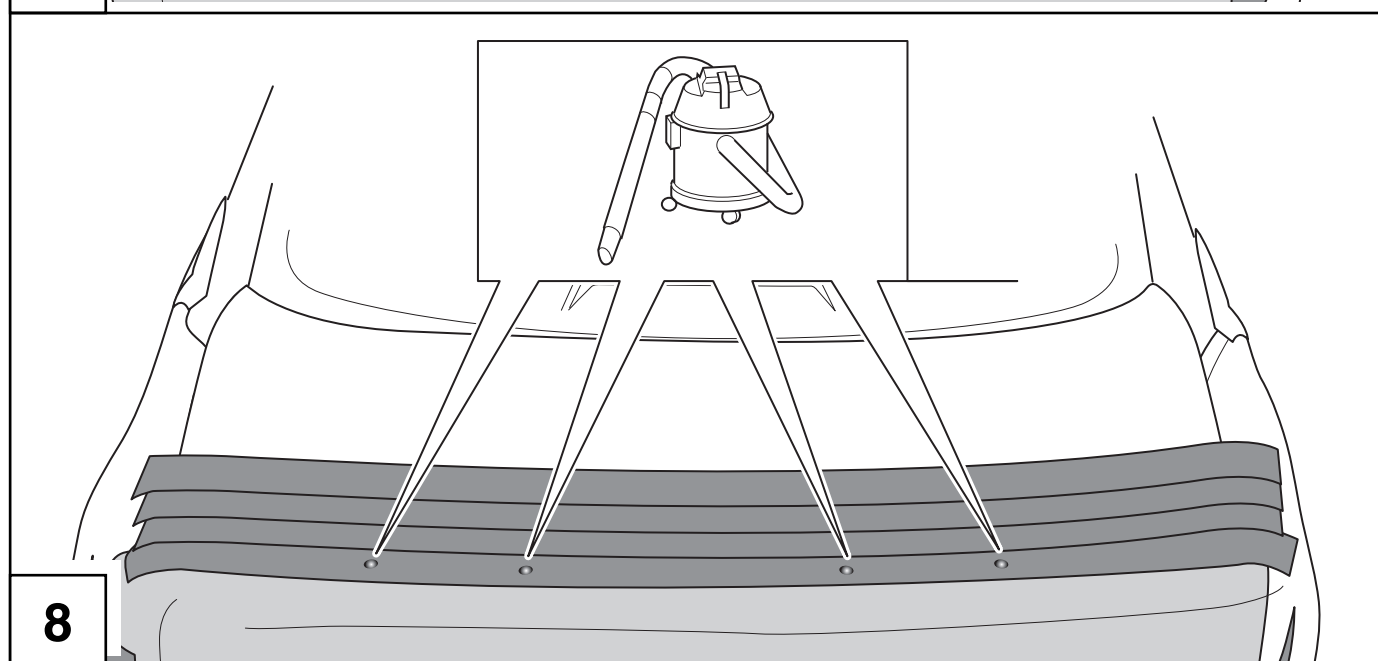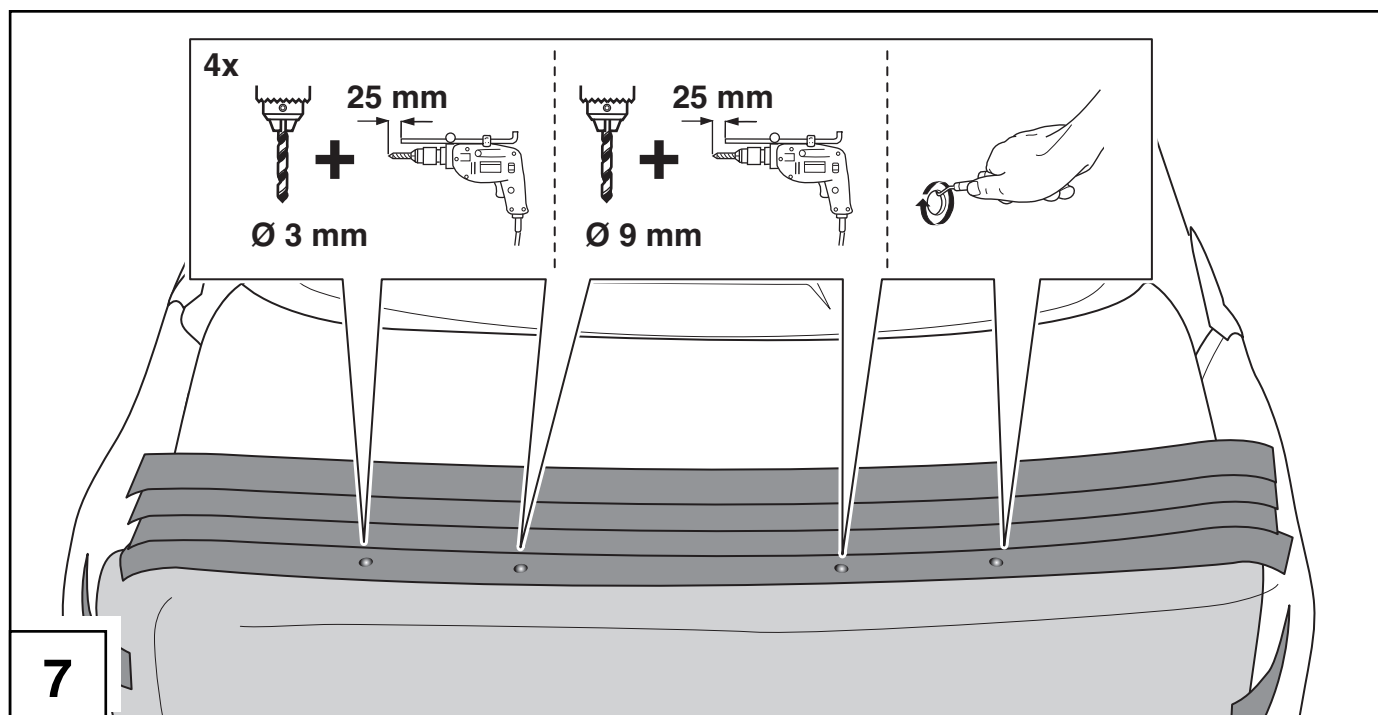

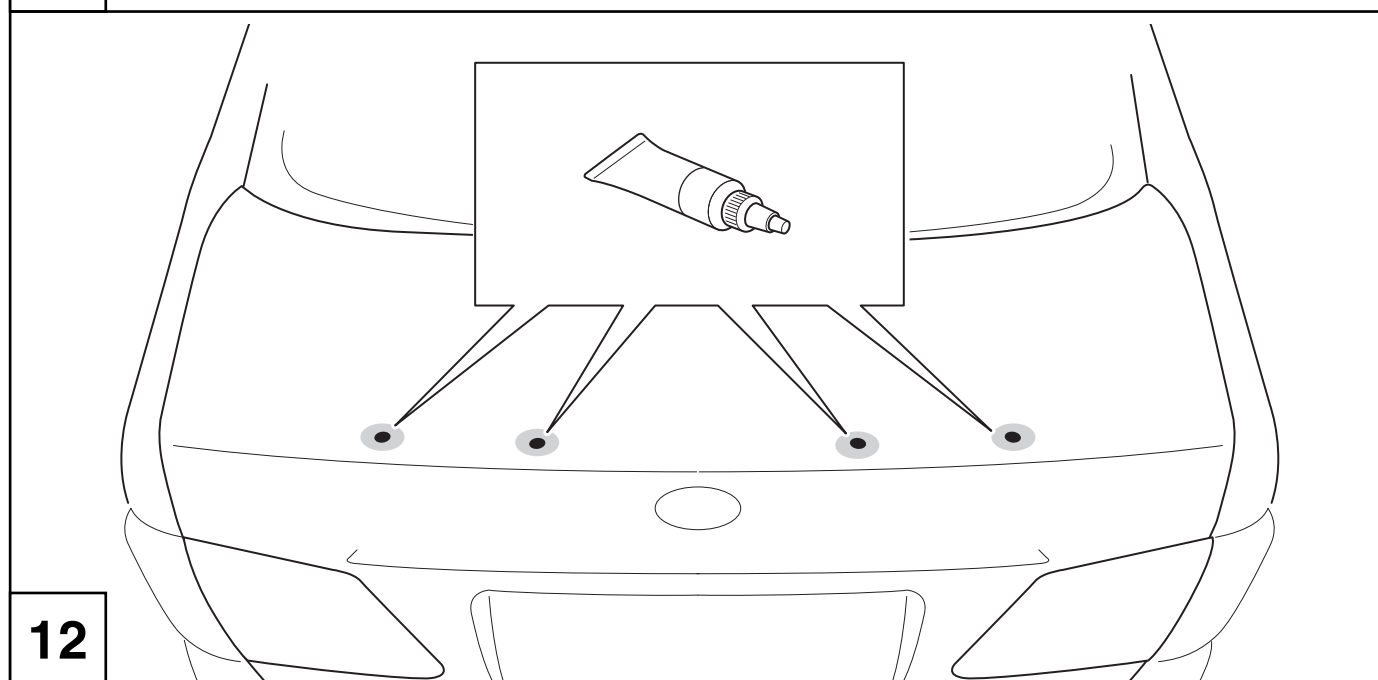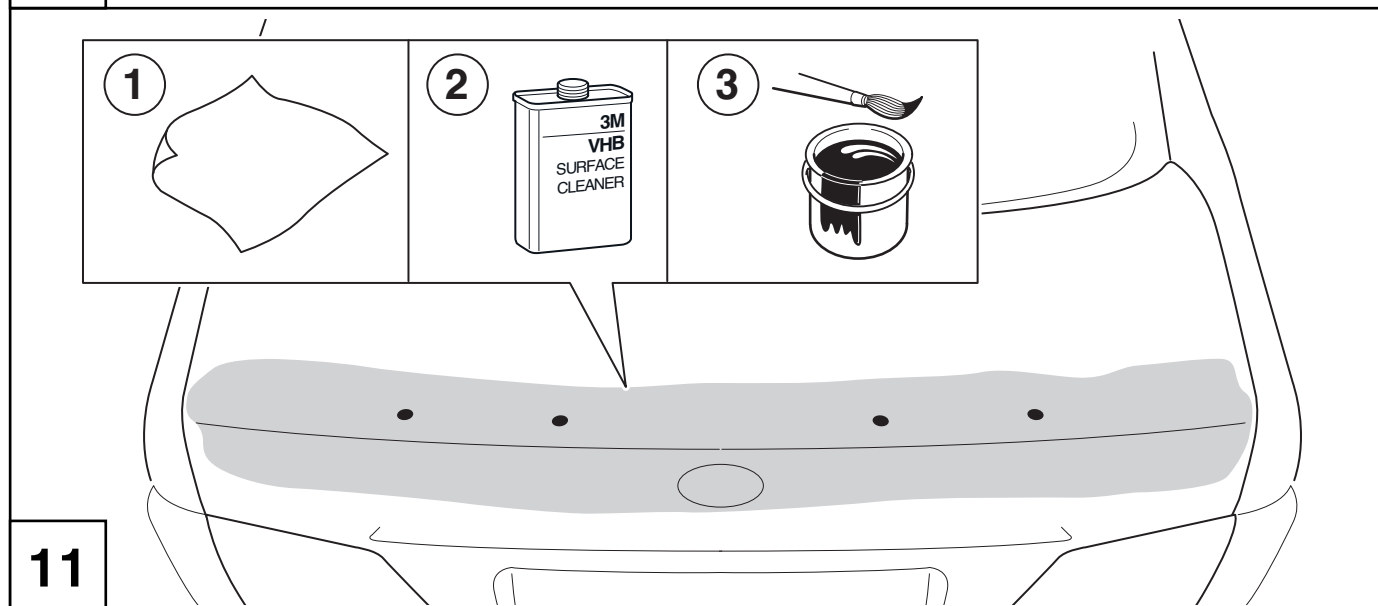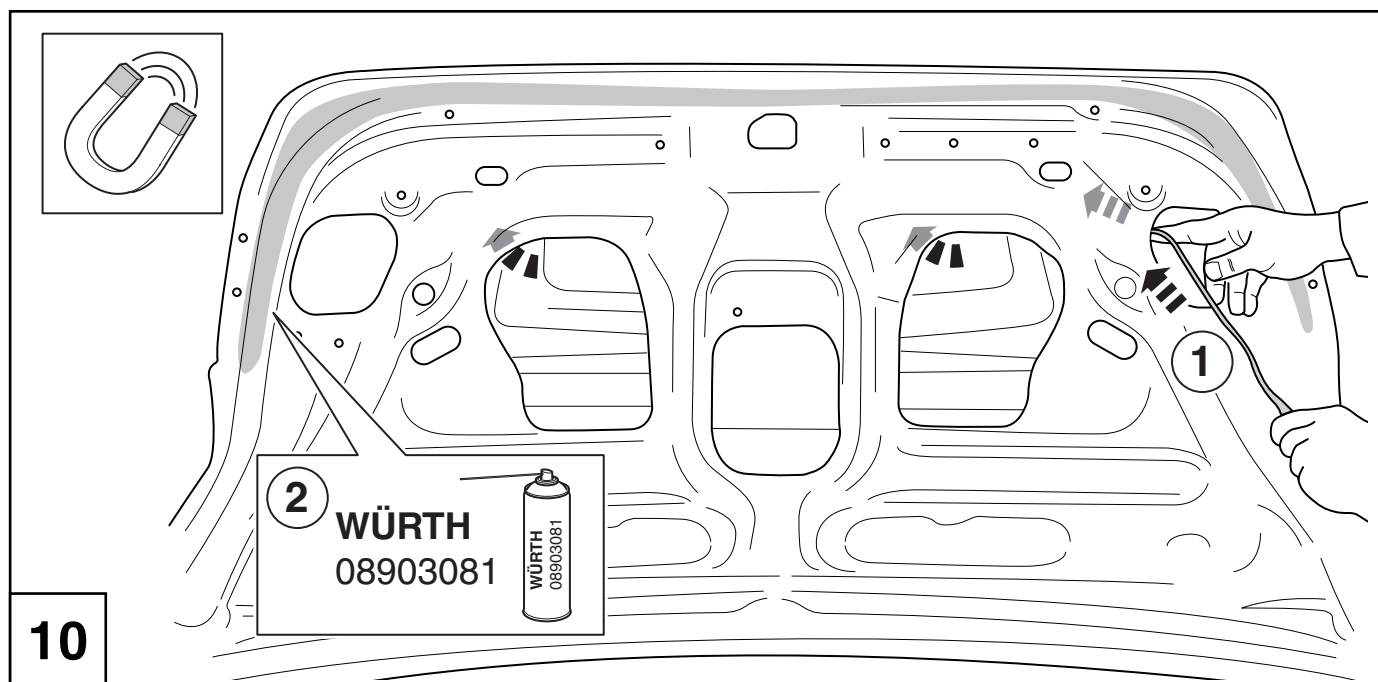


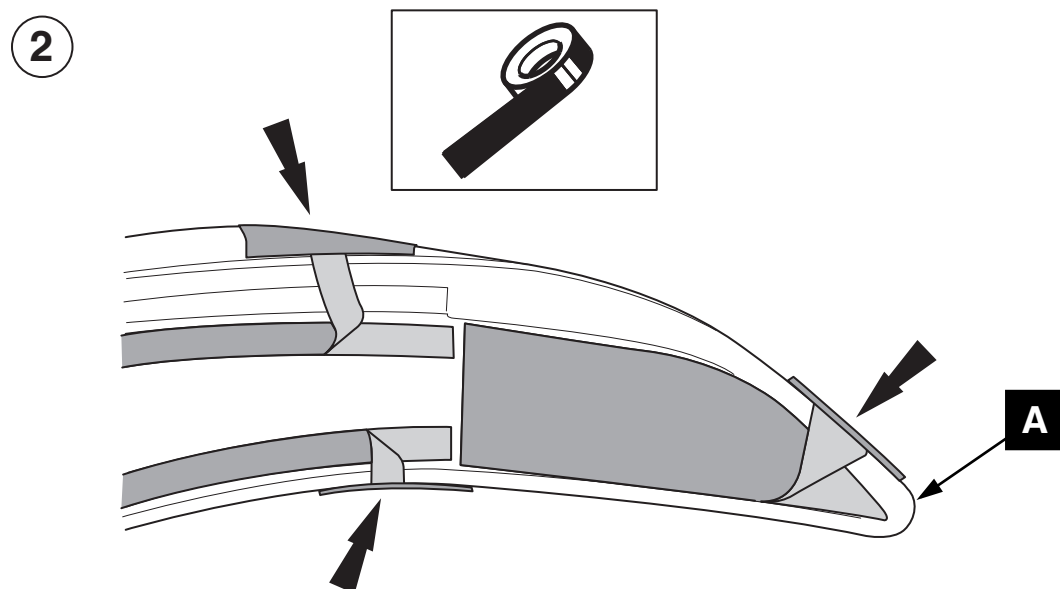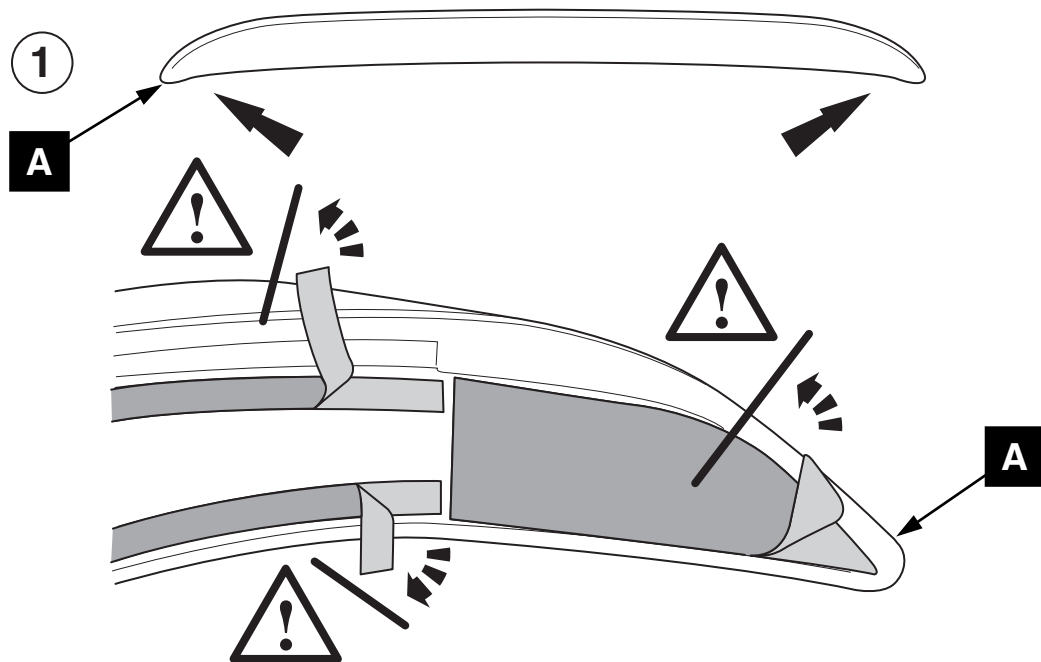


13

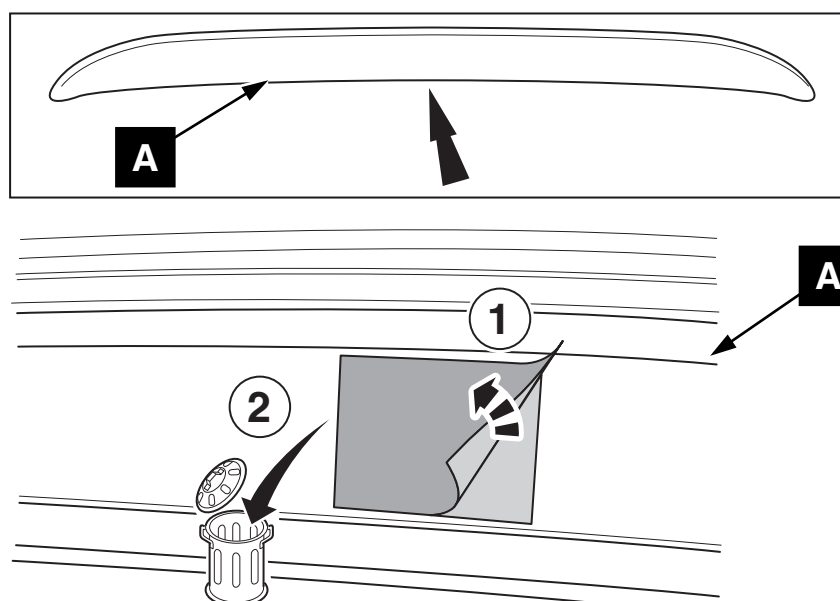


14

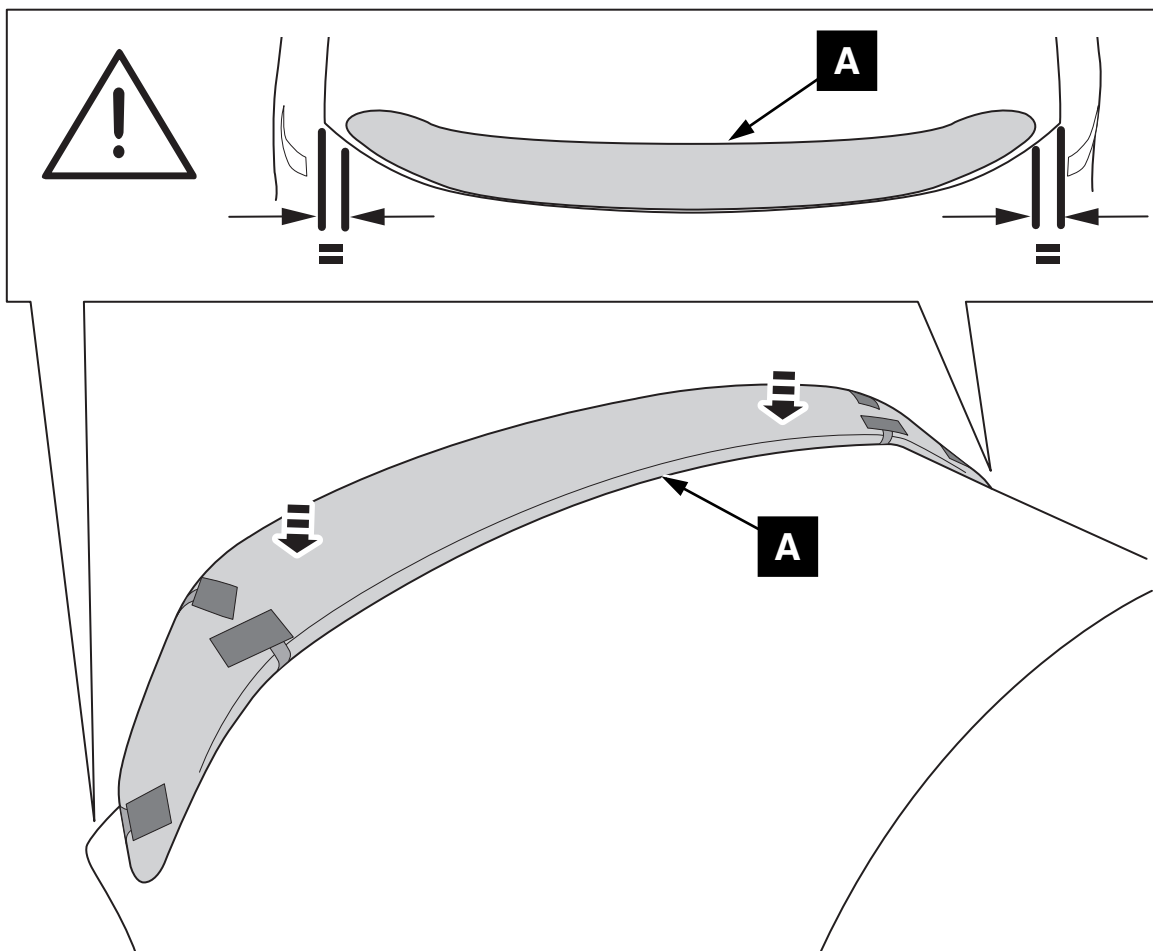


15

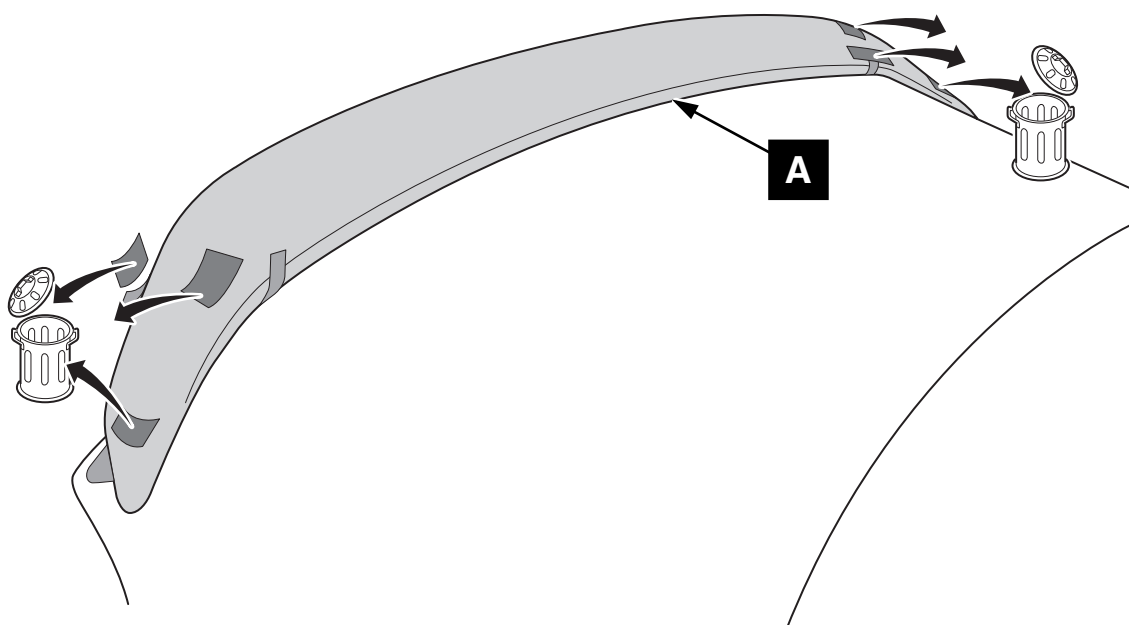



16

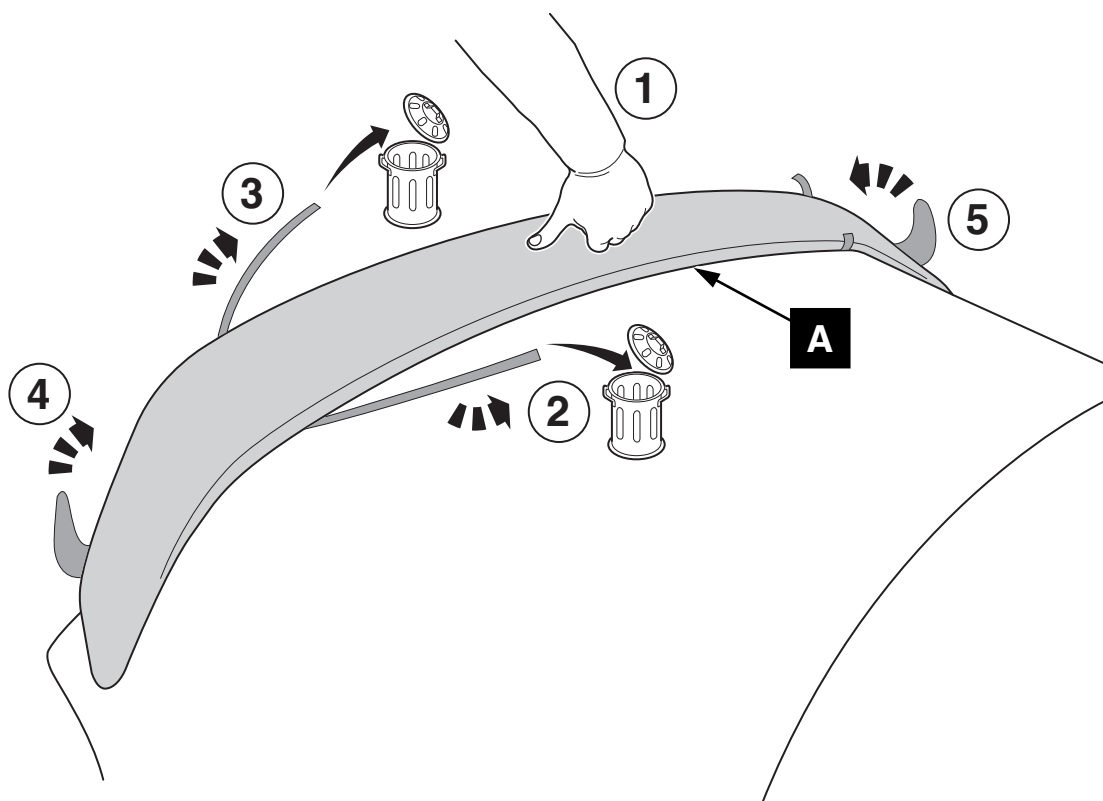


17

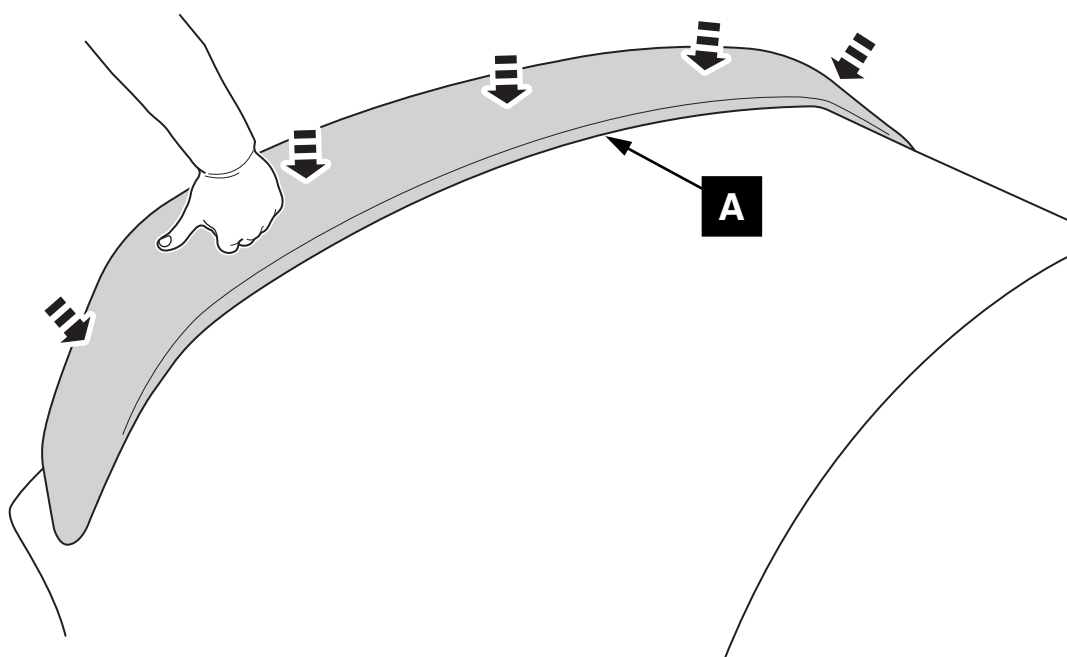

18

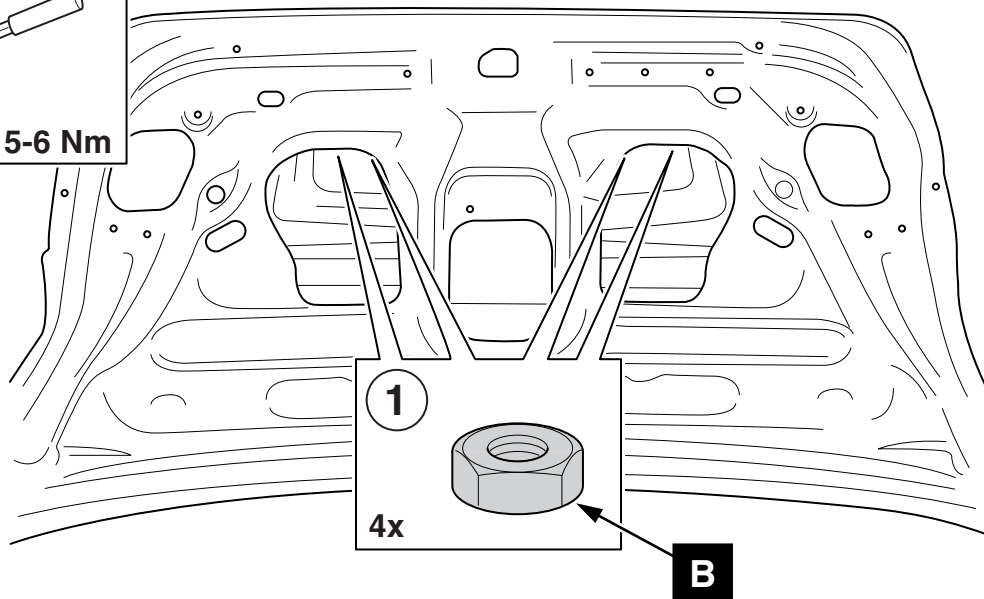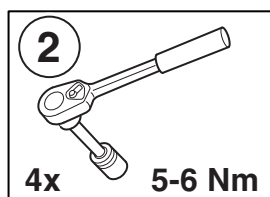

19

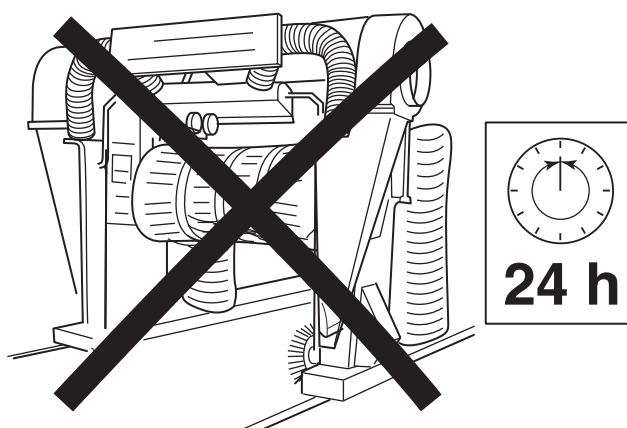

20