



Carbonlook Mirror Covers INSTALLATION INSTRUCTIONS CT 200h

Model year	2010/10, 2013/12
Vehicle code	ZWA10* - AHX*BW
Part number	PZ49J - Z0520-ZU (LHD) PZ49J - Z0521-ZU (RHD)



Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted
1	11.10.13	1		X		
1	11.10.13	3		X		
1	11.10.13	4	1, 2, 3	X		
1	11.10.13	5	4, 5, 6	X		
1	11.10.13	6			X	

A

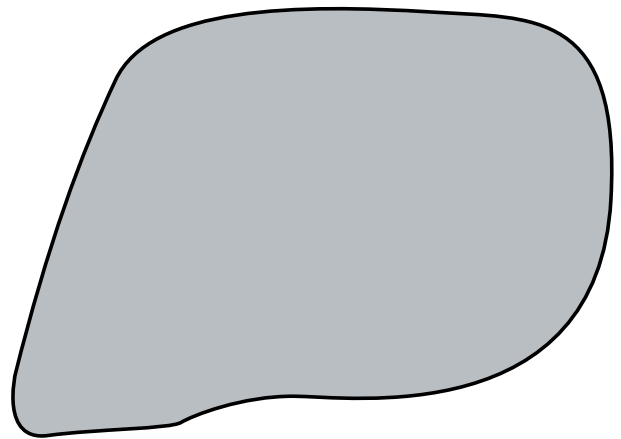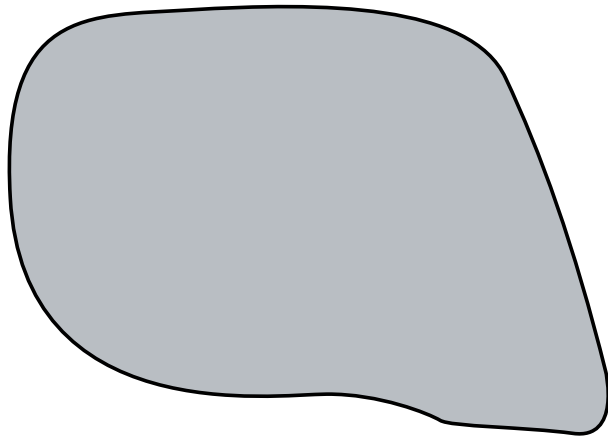

1x

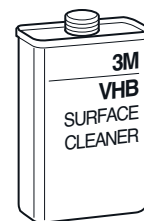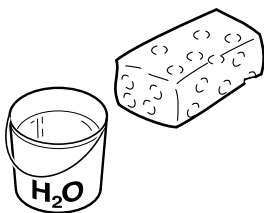






40°C

18°C



×

↑

✓

↓

×






✓





×


1


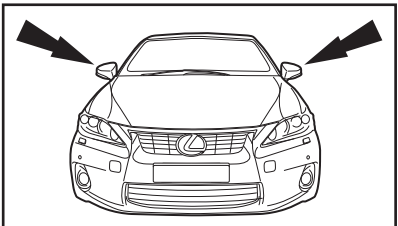
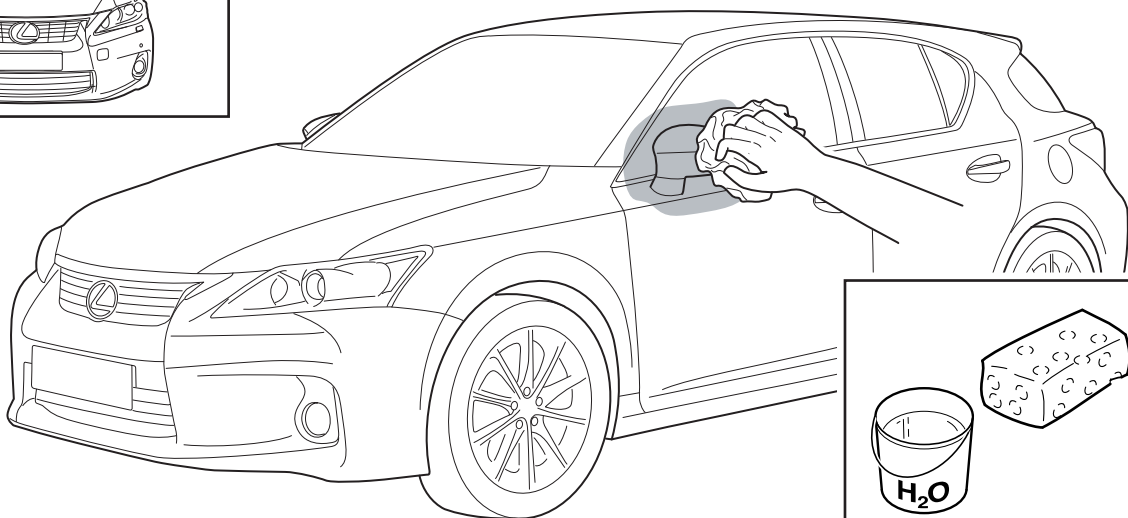


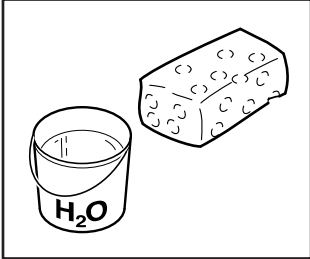2

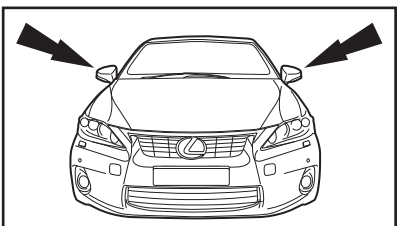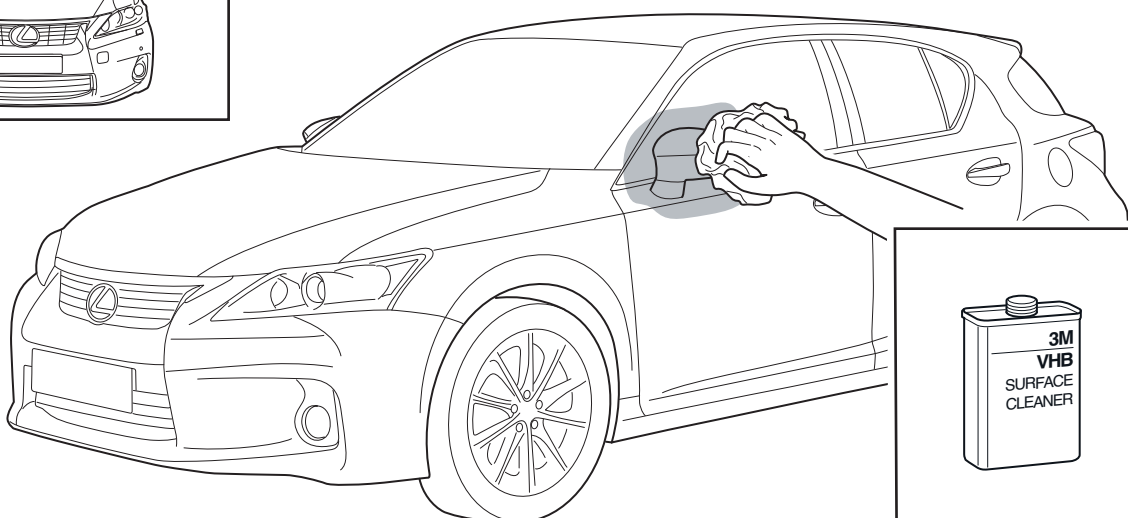

3






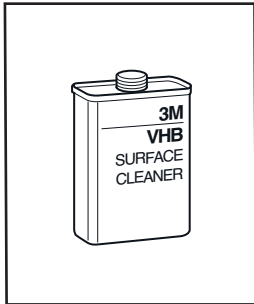


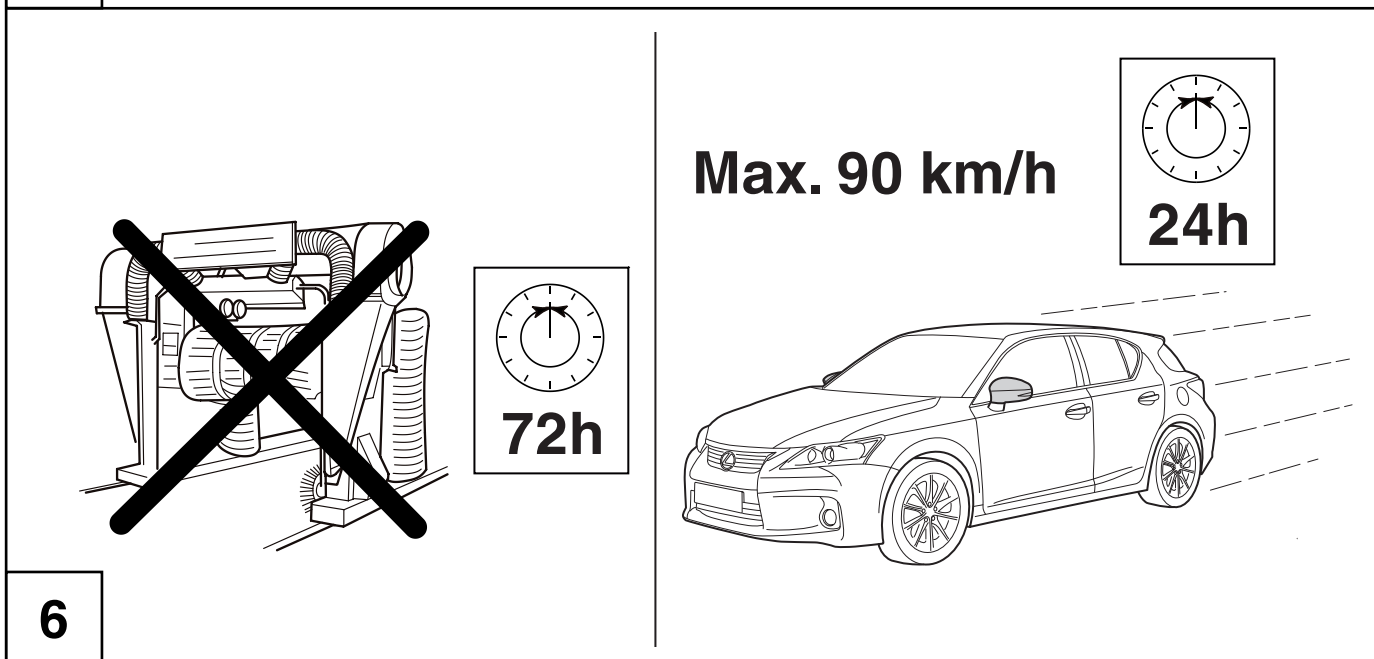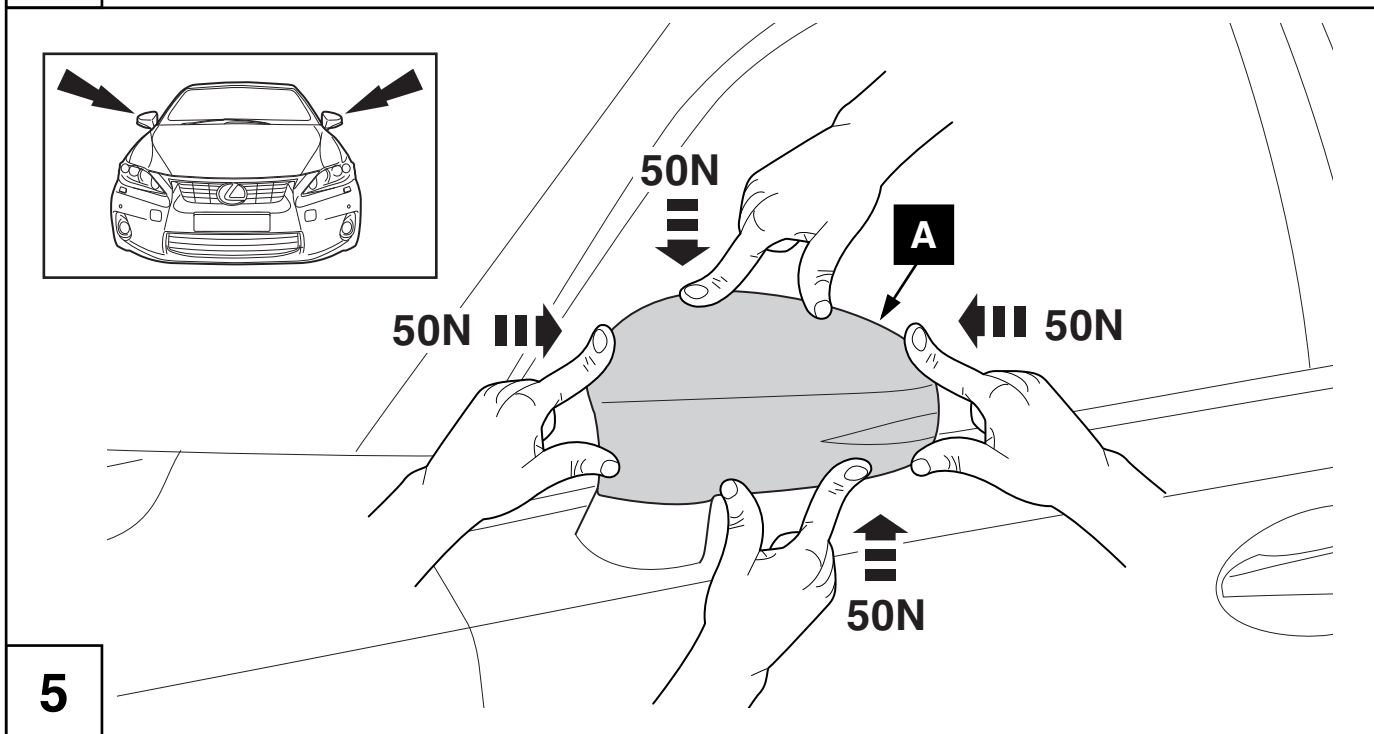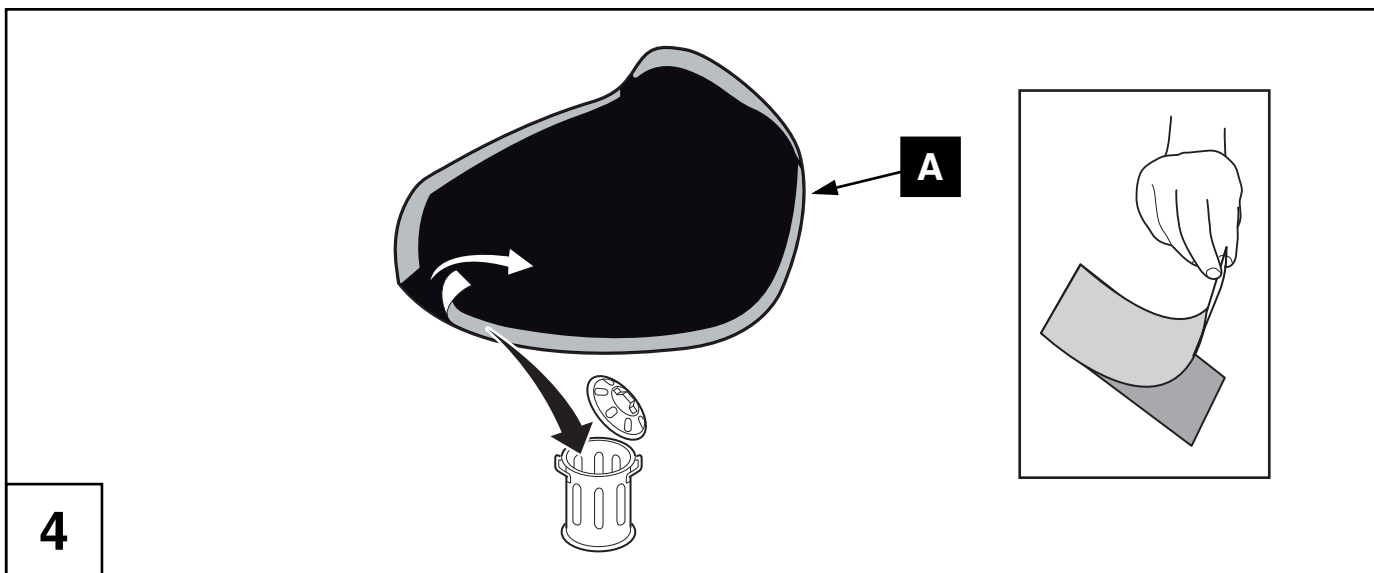CHECK SHEET

Model / Year Lexus CT 200h

Carbonlook
Mirror Covers

VIN n°

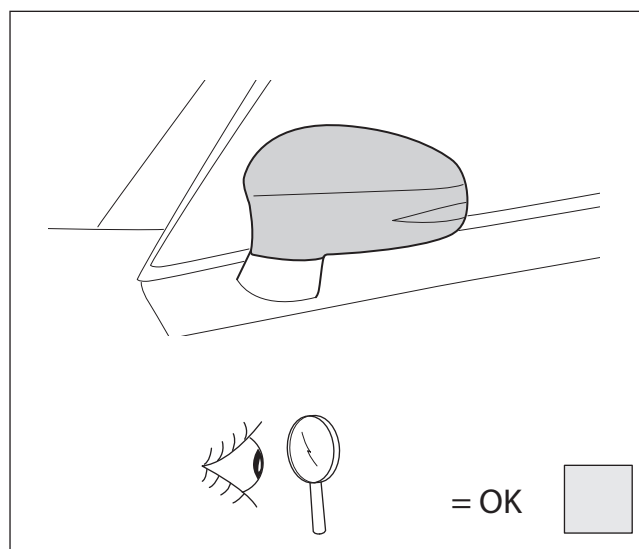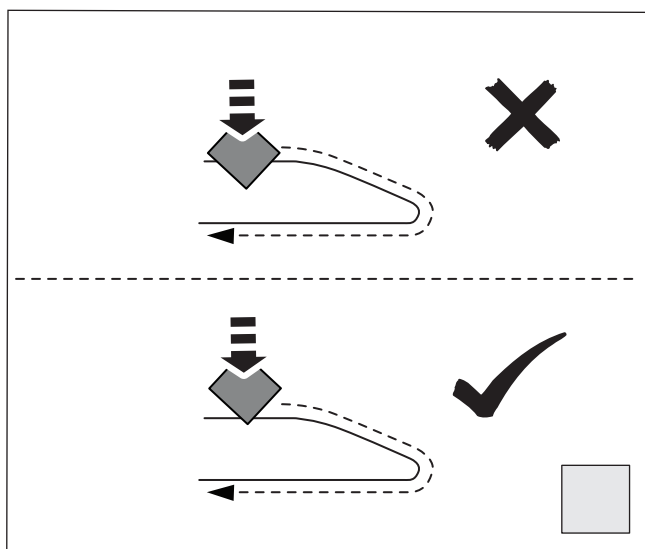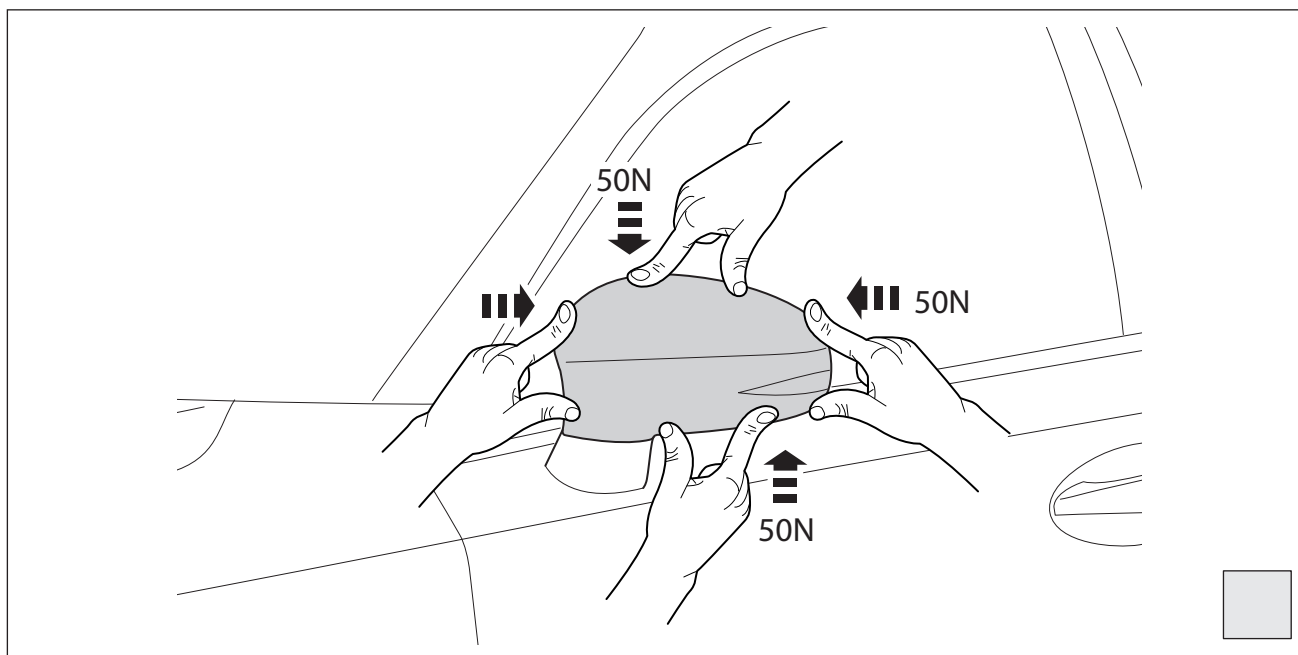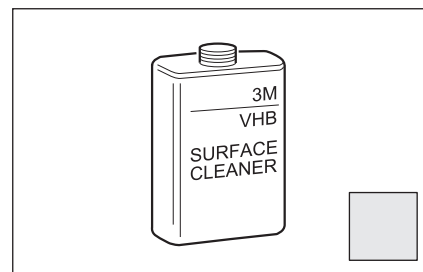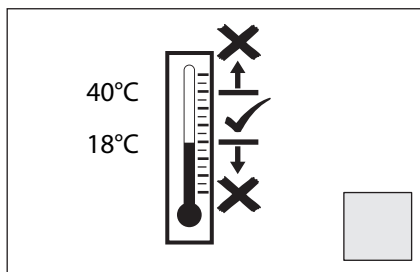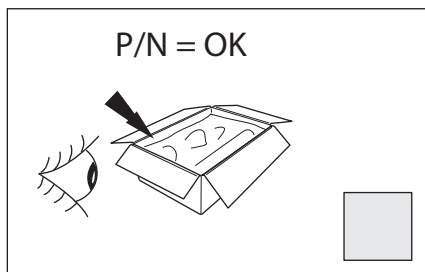

Installation Date:

. . / . . / . . .

Technician Name & Signature:

Stamp: