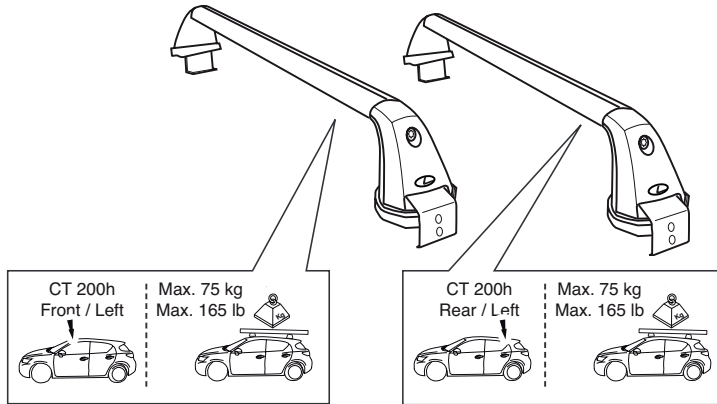
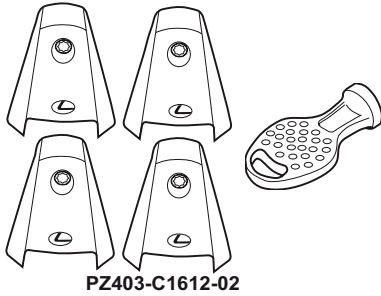


# Roof Rack INSTALLATION INSTRUCTIONS CT 200h


Model year	2010/10, 2013/12
Vehicle code	ZWA10* - AHX*BW
Part number	PZ403-Z0610-GA

# Revision Record


Rev. No.	Date	Page	Picture	Update	New	Deleted
1	16-06-2011	3	E	X		
1	16-06-2011	7	9	X		
1	16-06-2011	9	13	X		
2	11-08-2011	3	B-C-D-E-F	X		
3	07-02-2013	3	I		X	
3	07-02-2013	4			X	
4	30-05-2013	1-3-6	G-2-3	X		
5	25-11-2013	1	Model year	X		

**A****B**


1x

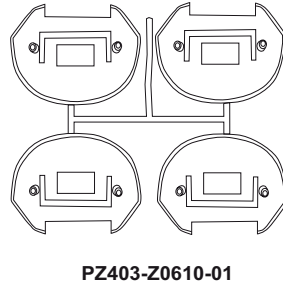**C**

1x

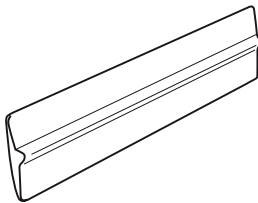**D**


3x

**E**


1x

**F**

1x

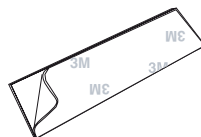**G**


4x

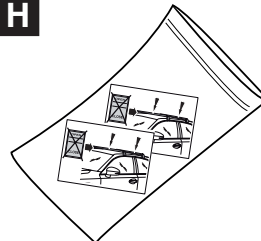**H**






1x





**I**

1x



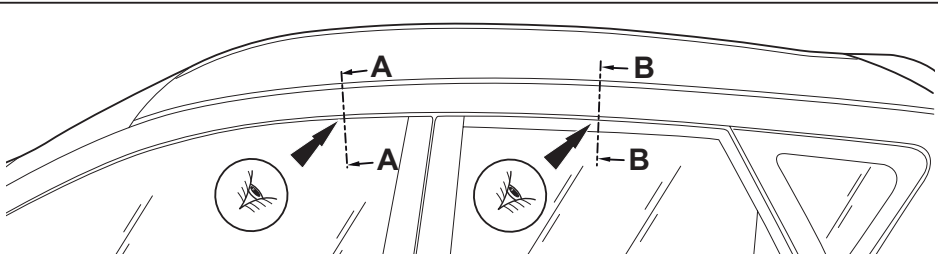




# CHECK GAP!

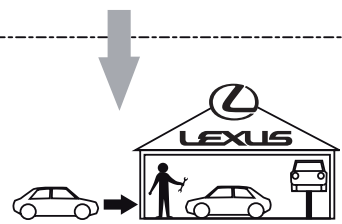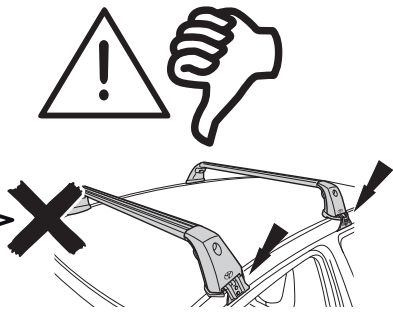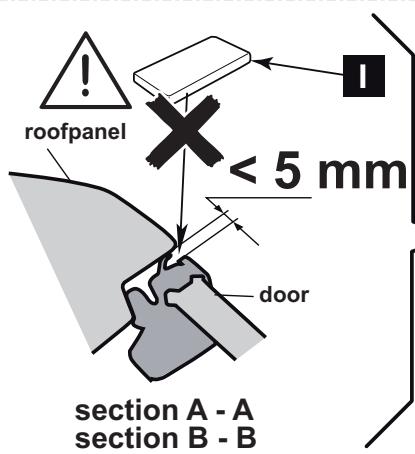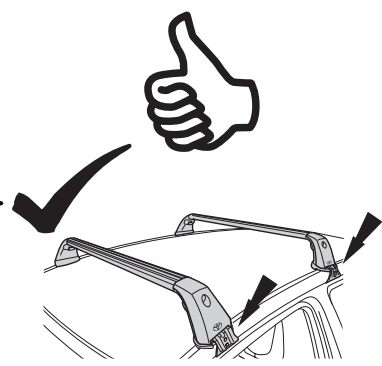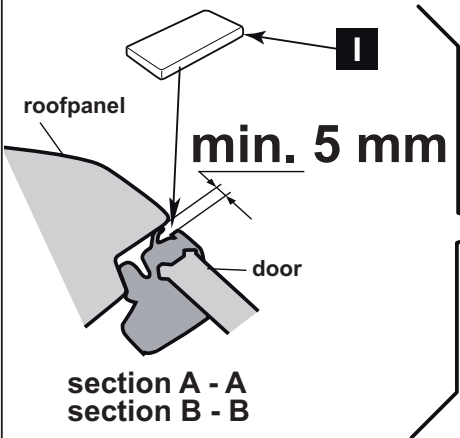

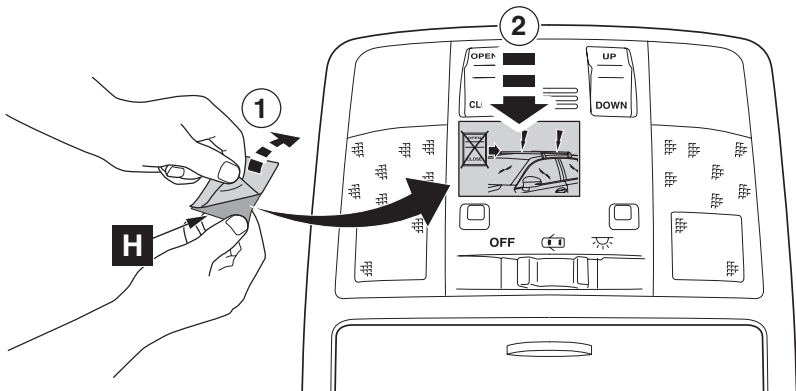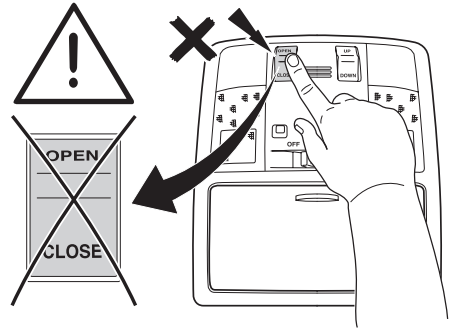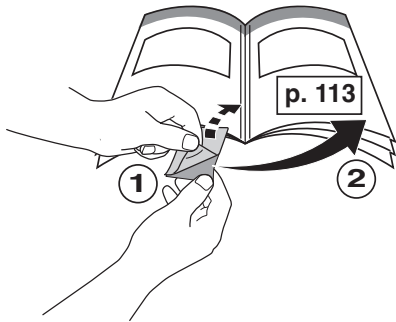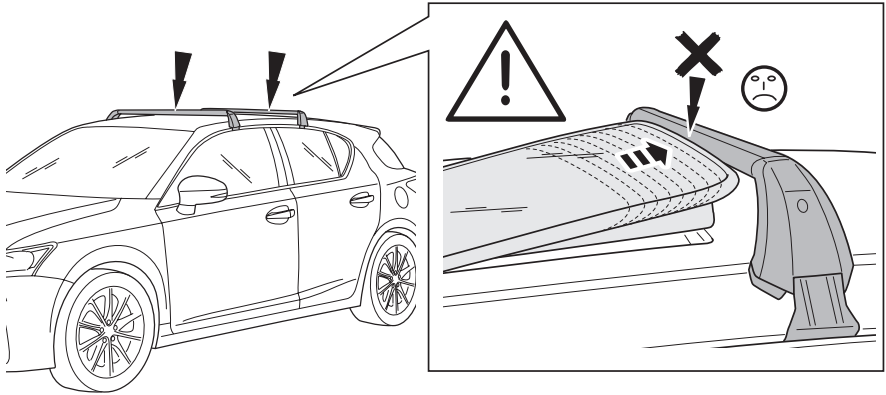


1

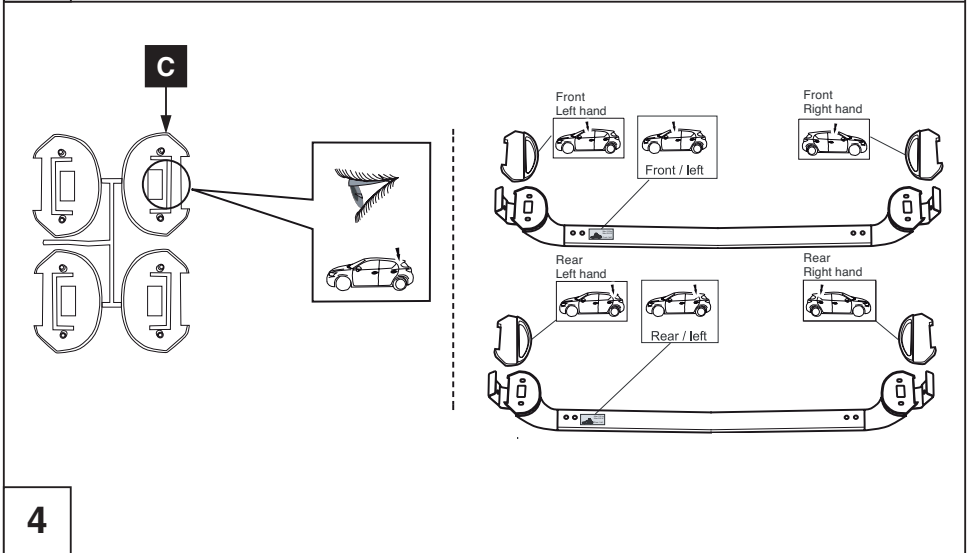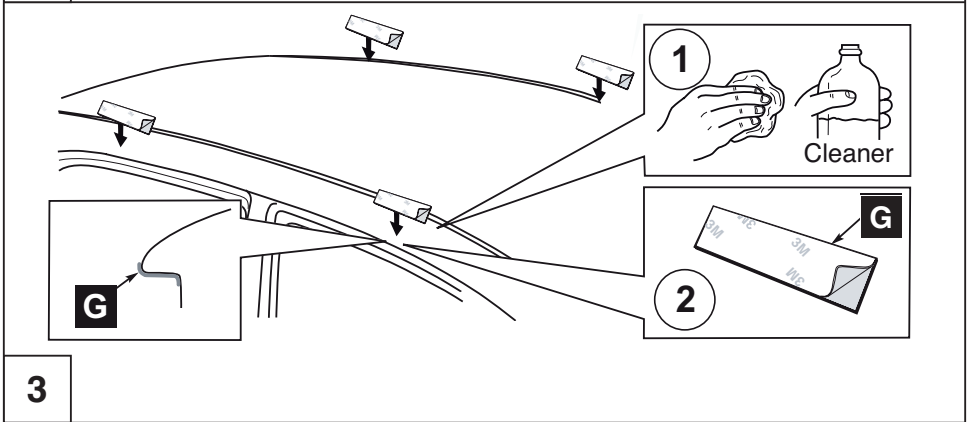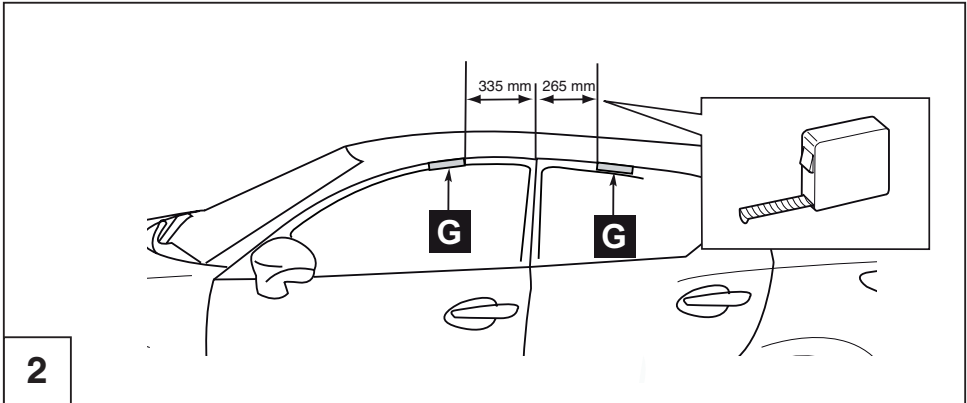


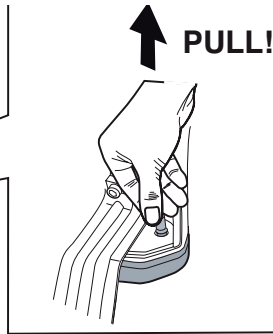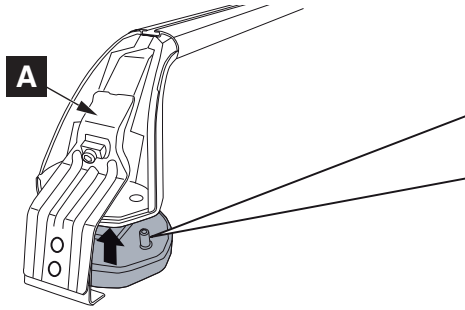


5

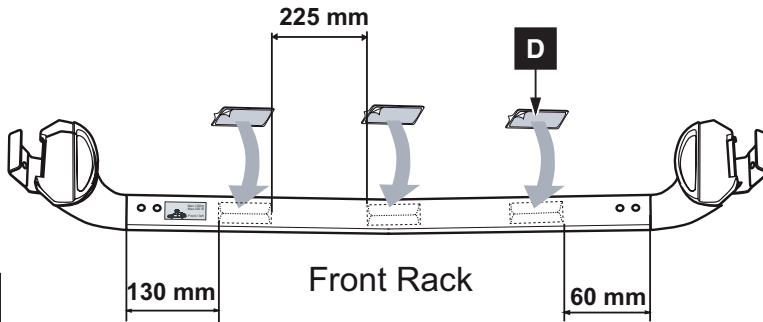



6

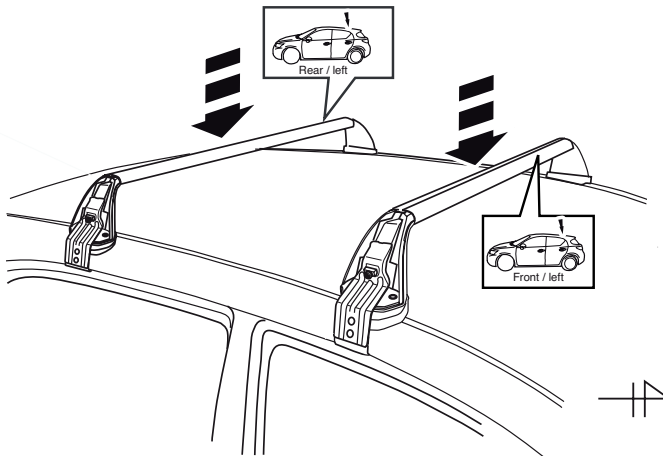

7

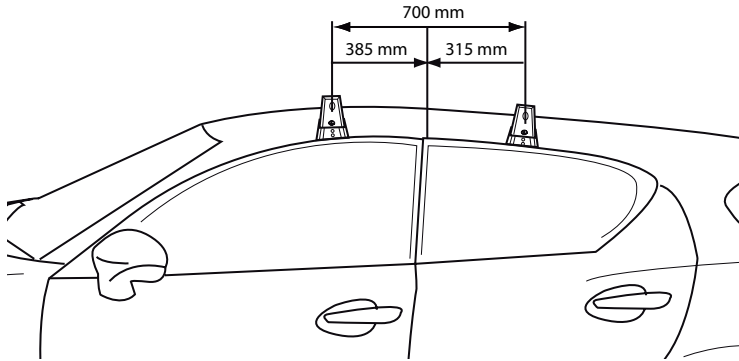

8

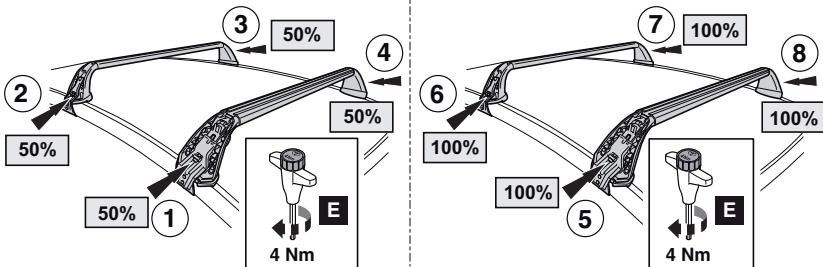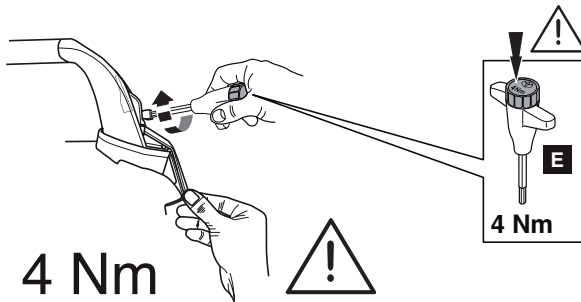

9



