

Wind Deflector INSTALLATION INSTRUCTIONS CT200h


Model year	2010/10, 2013/12
Vehicle code	ZWA10* - AHX*BW
Part number	08611-76810

Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted
1	30.10.13	ALL				

08611-76810

A


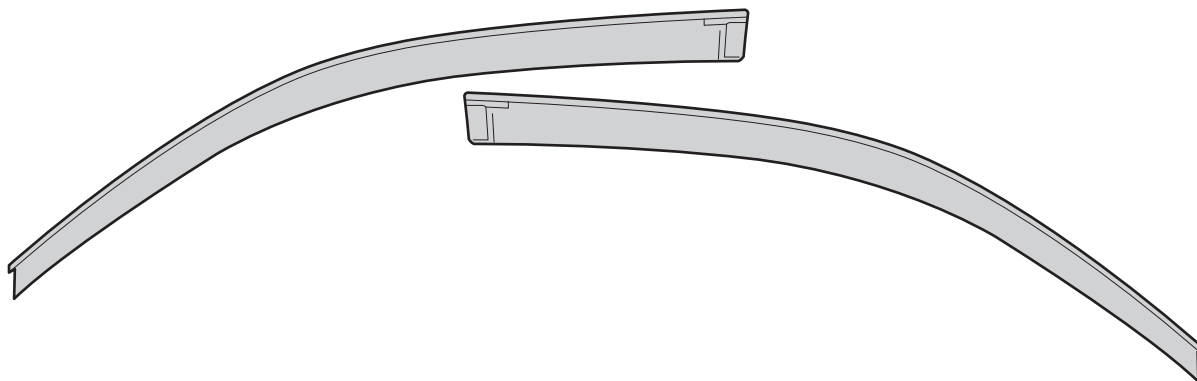



1x


B





1x

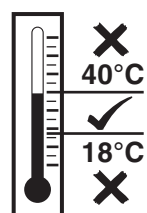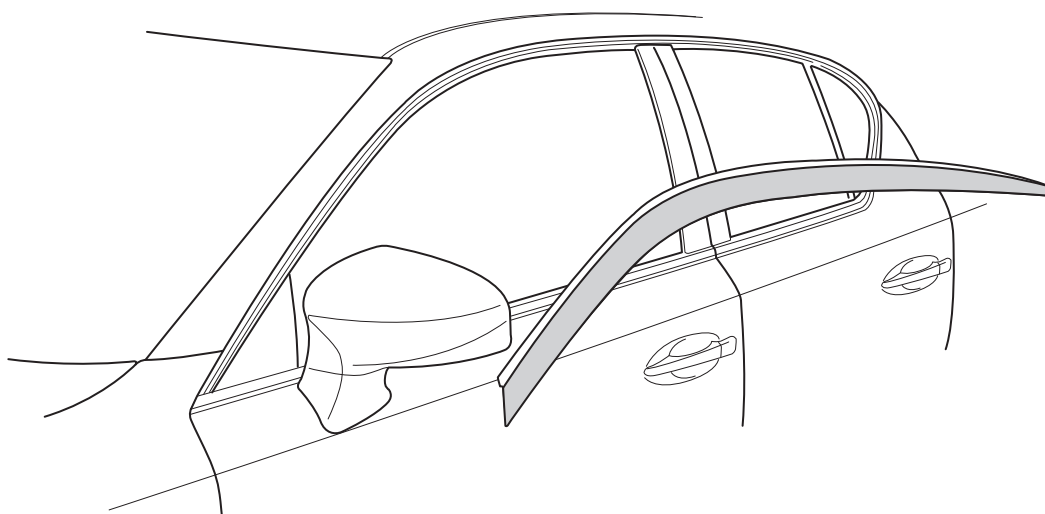


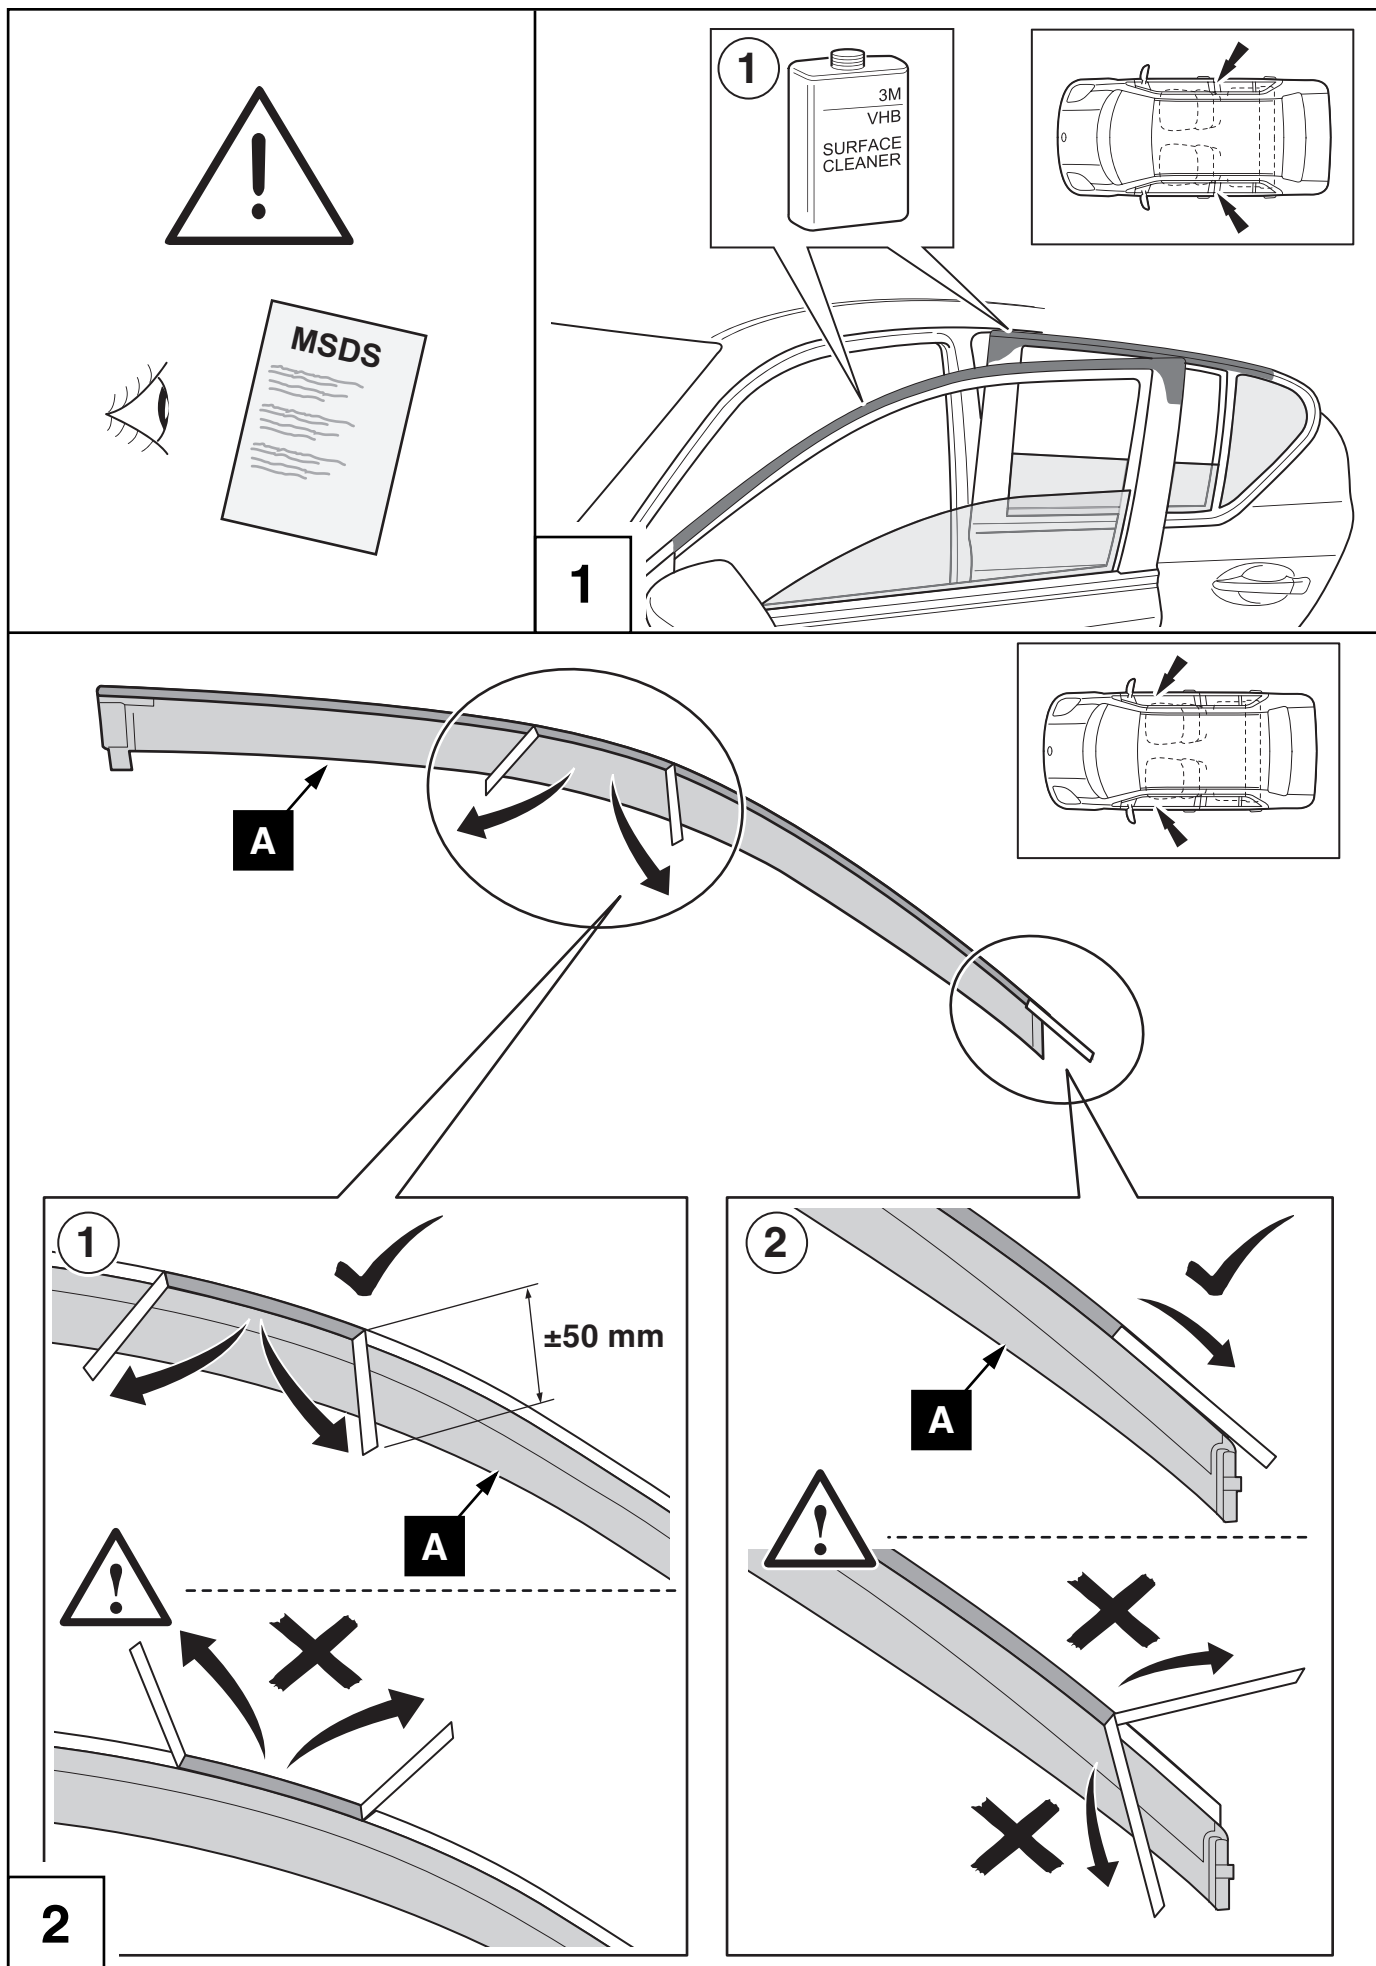


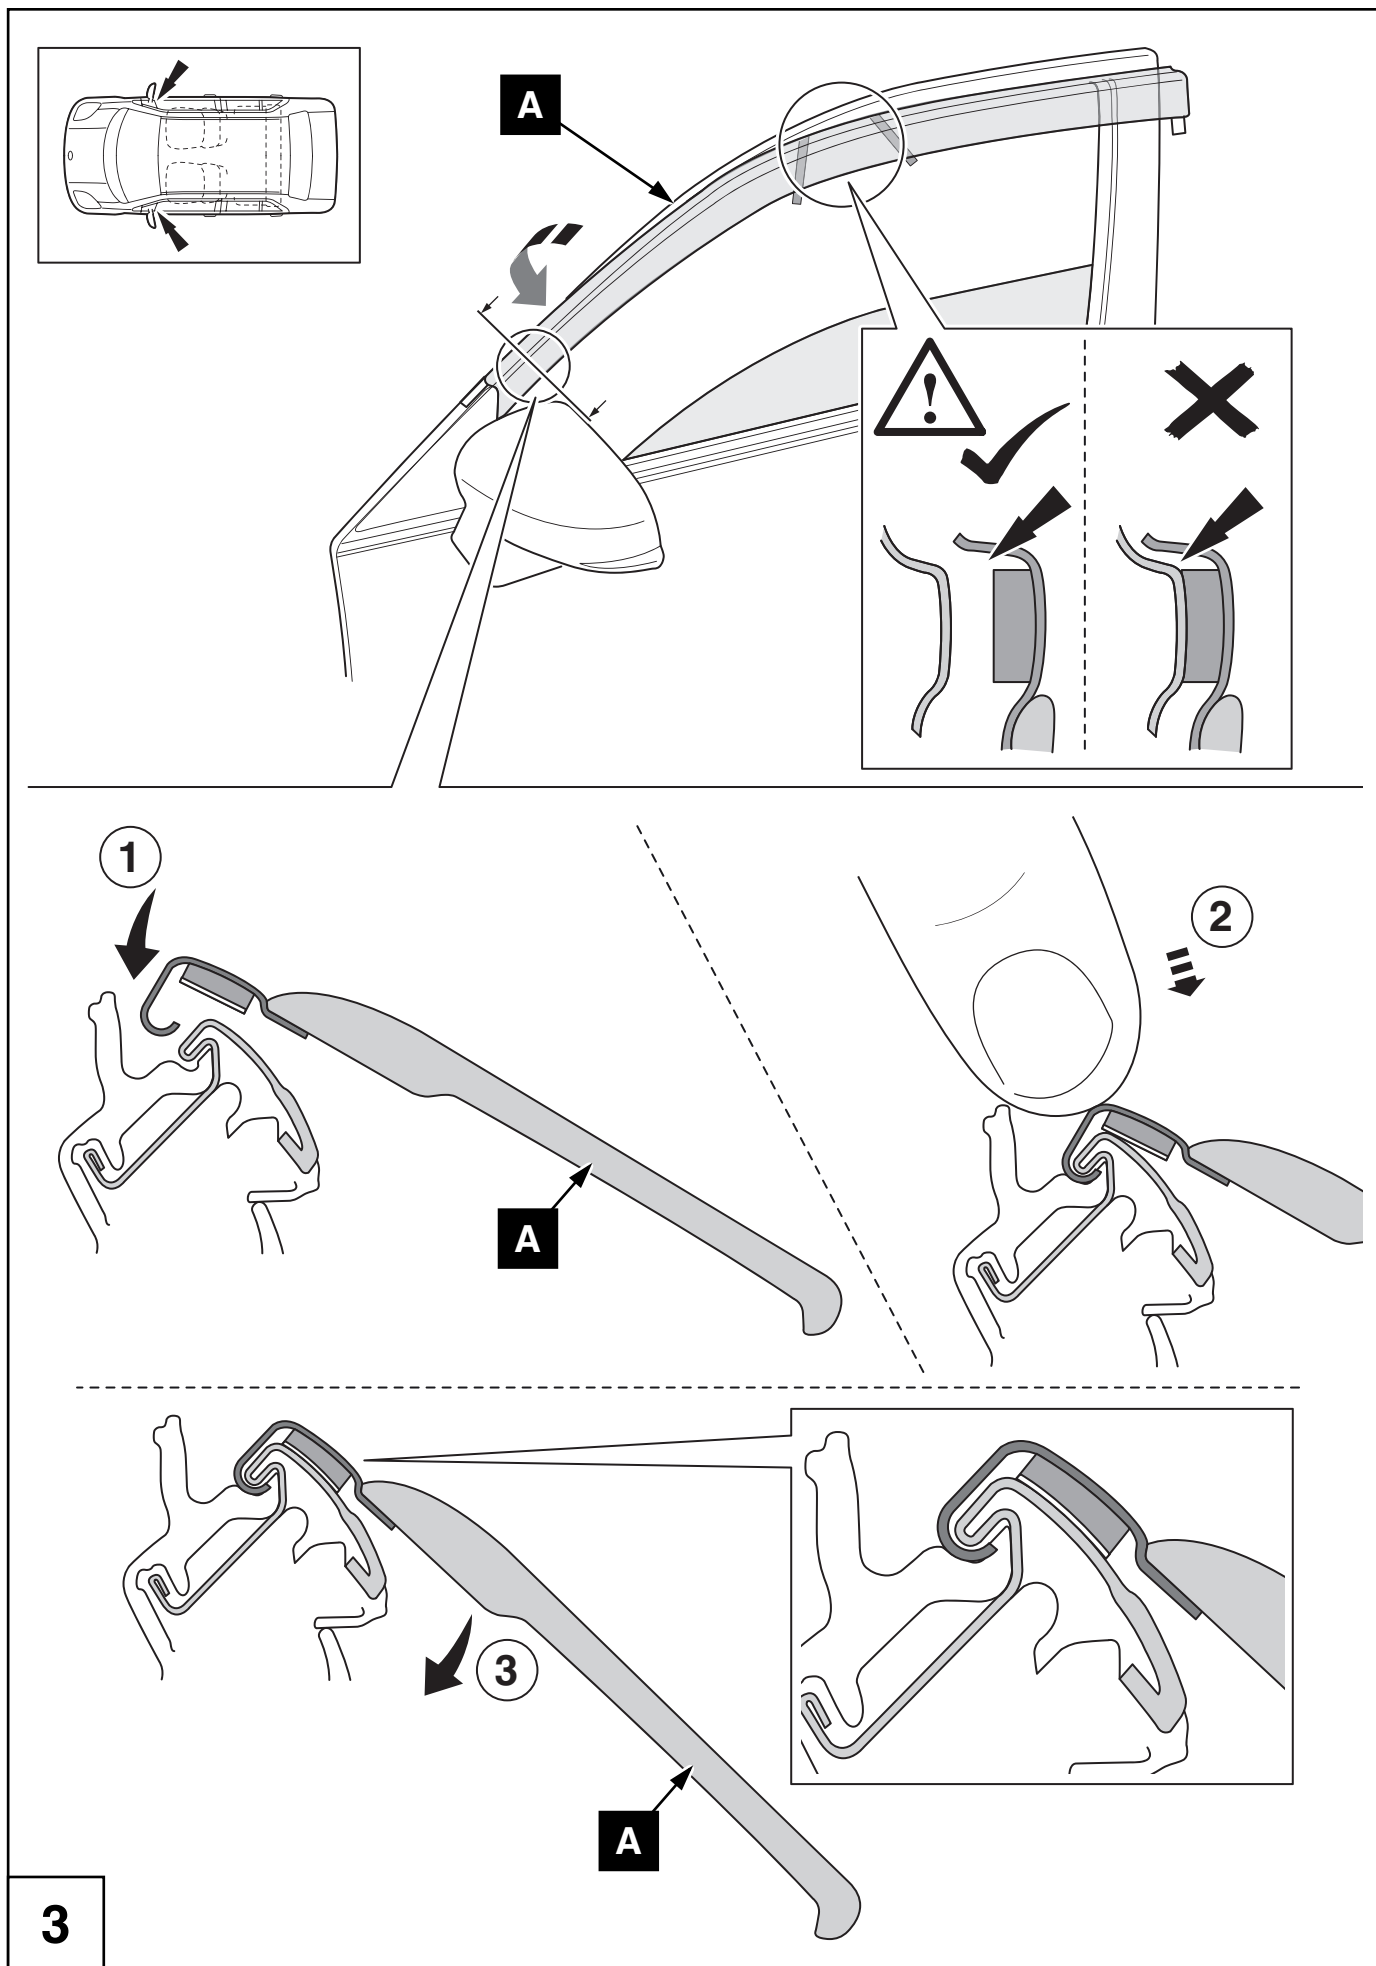

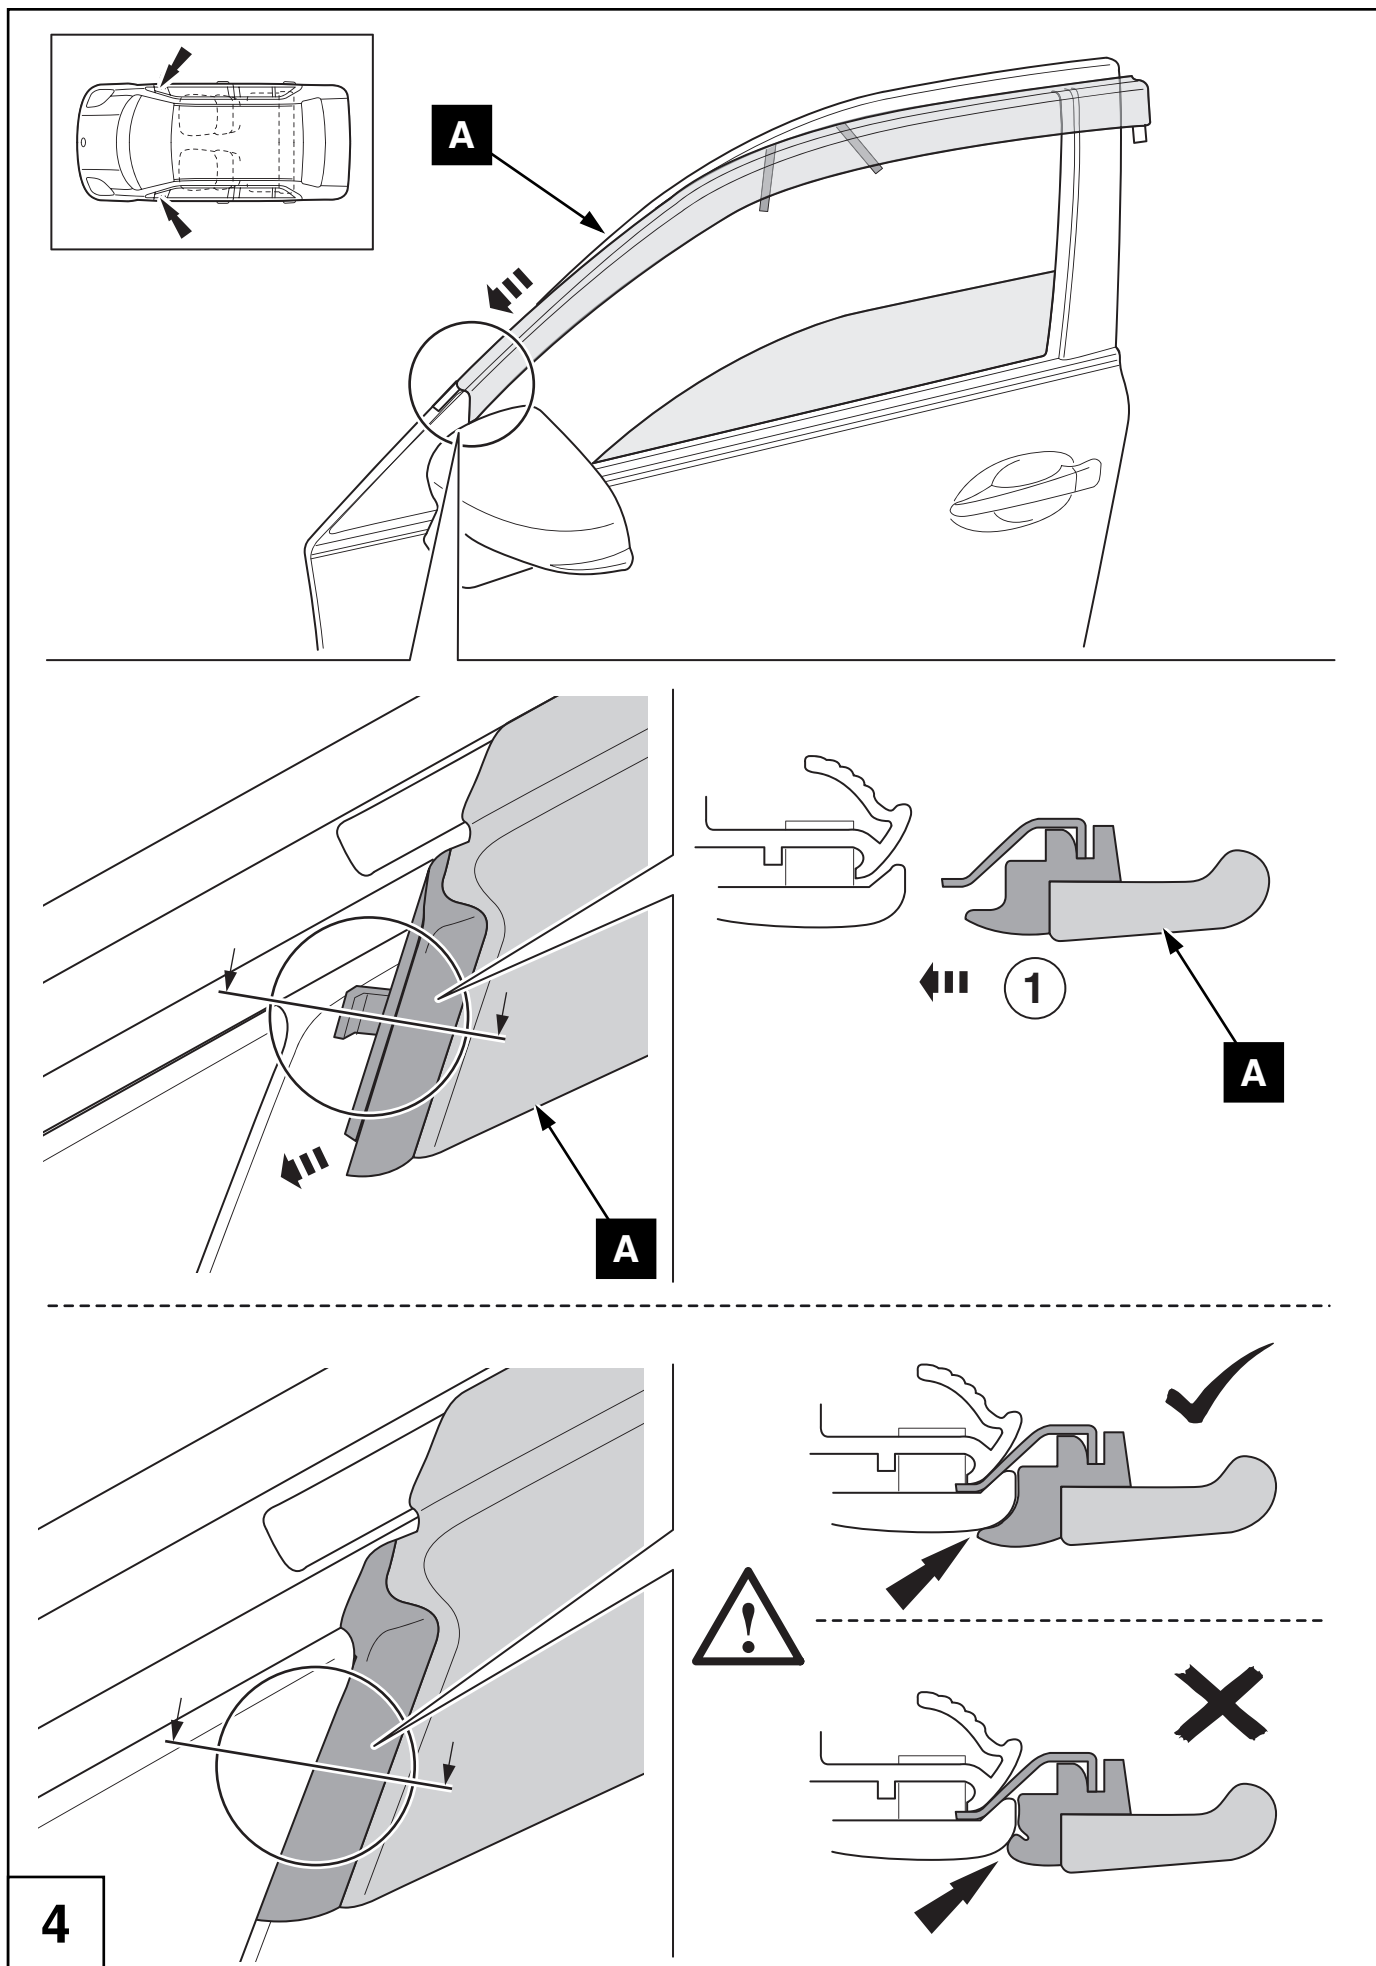


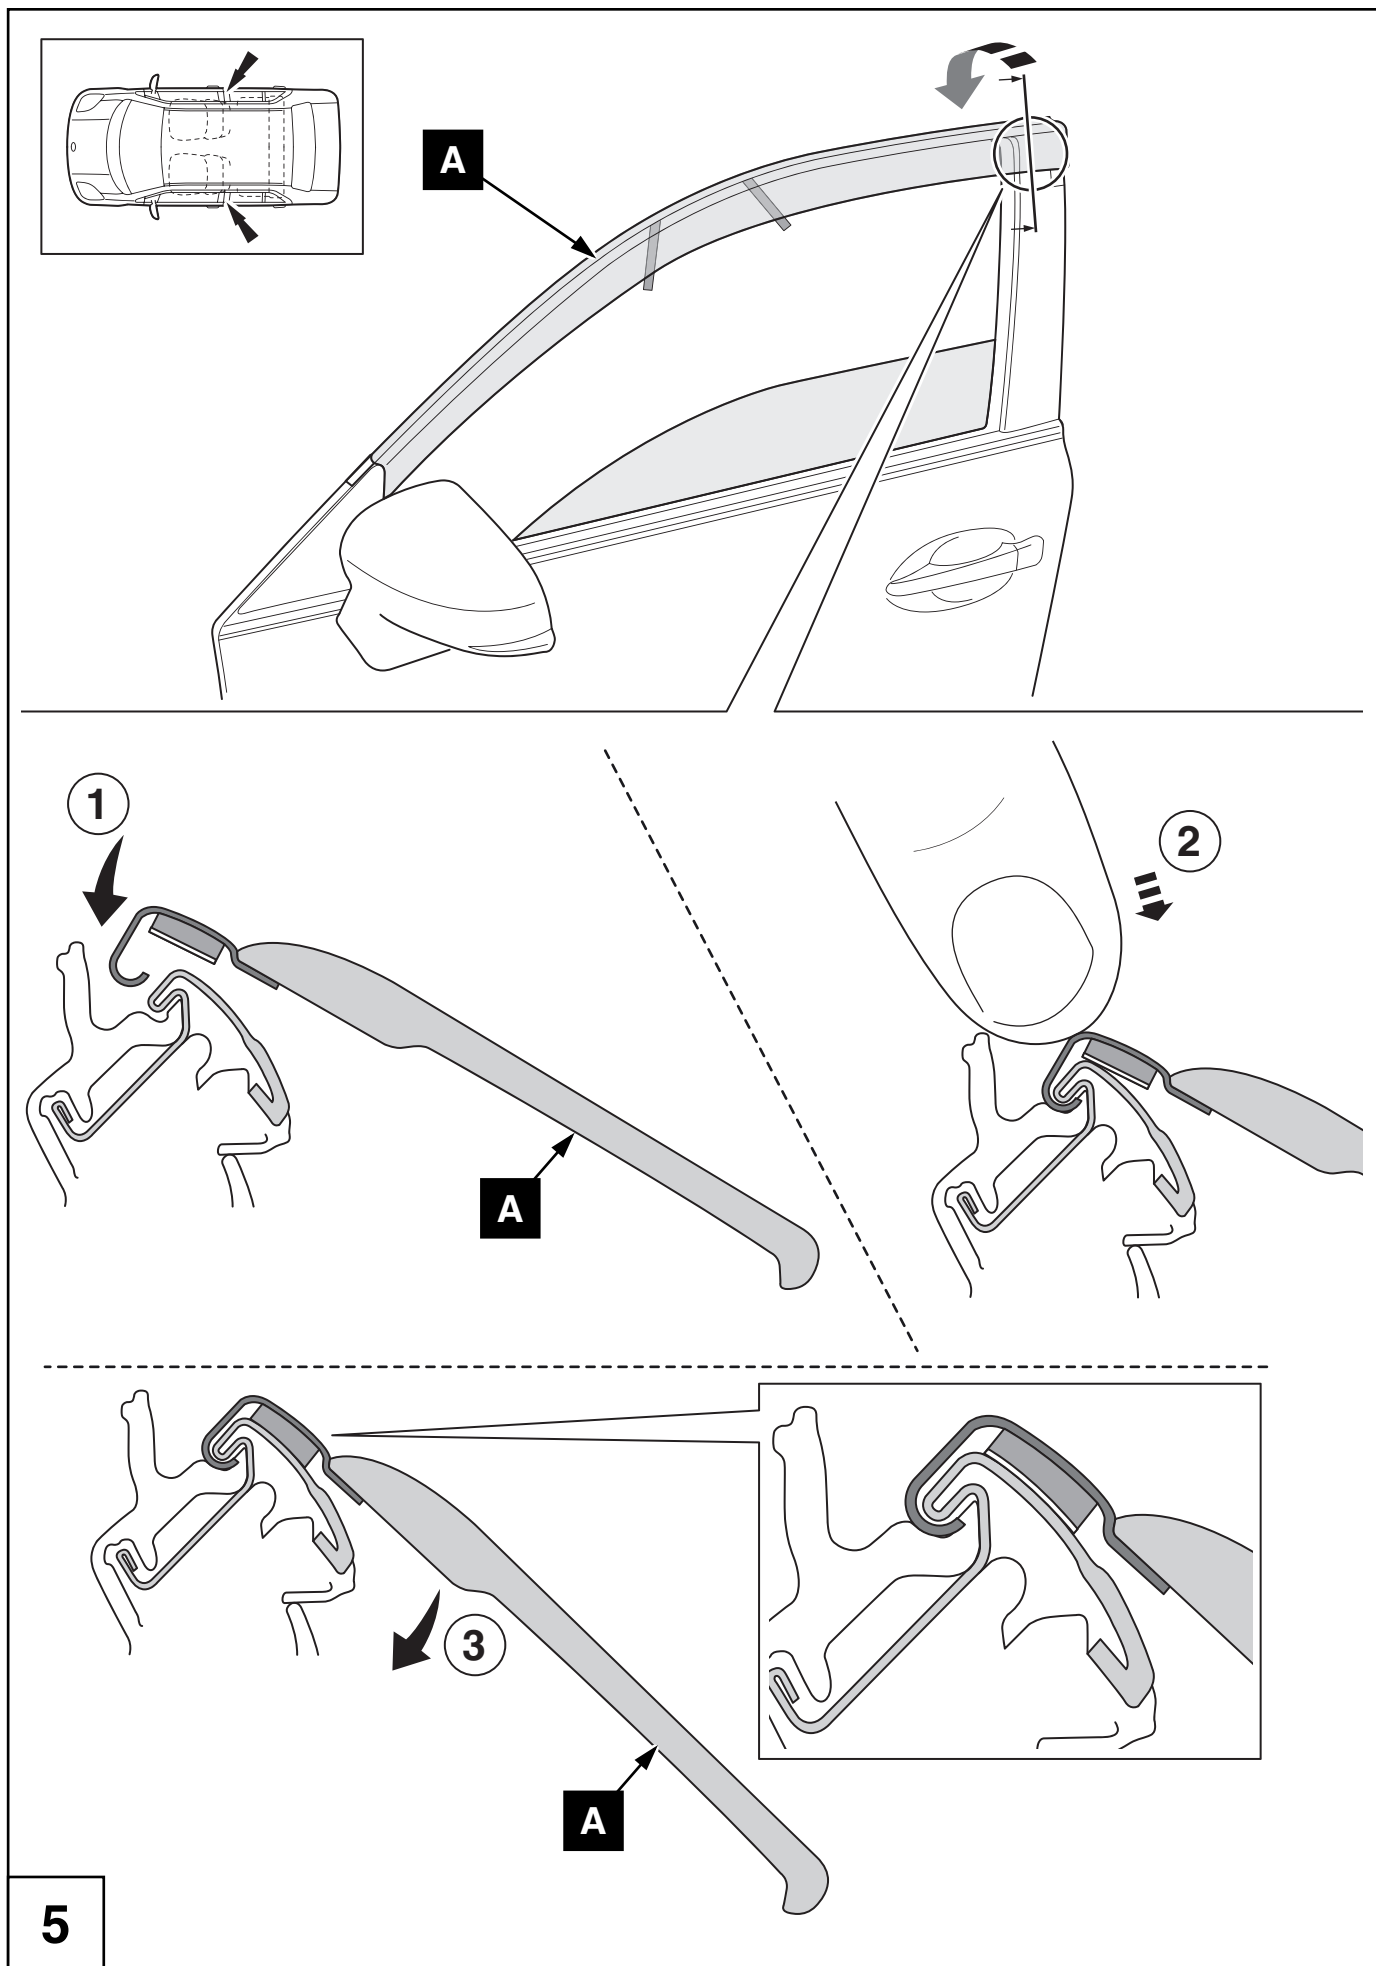

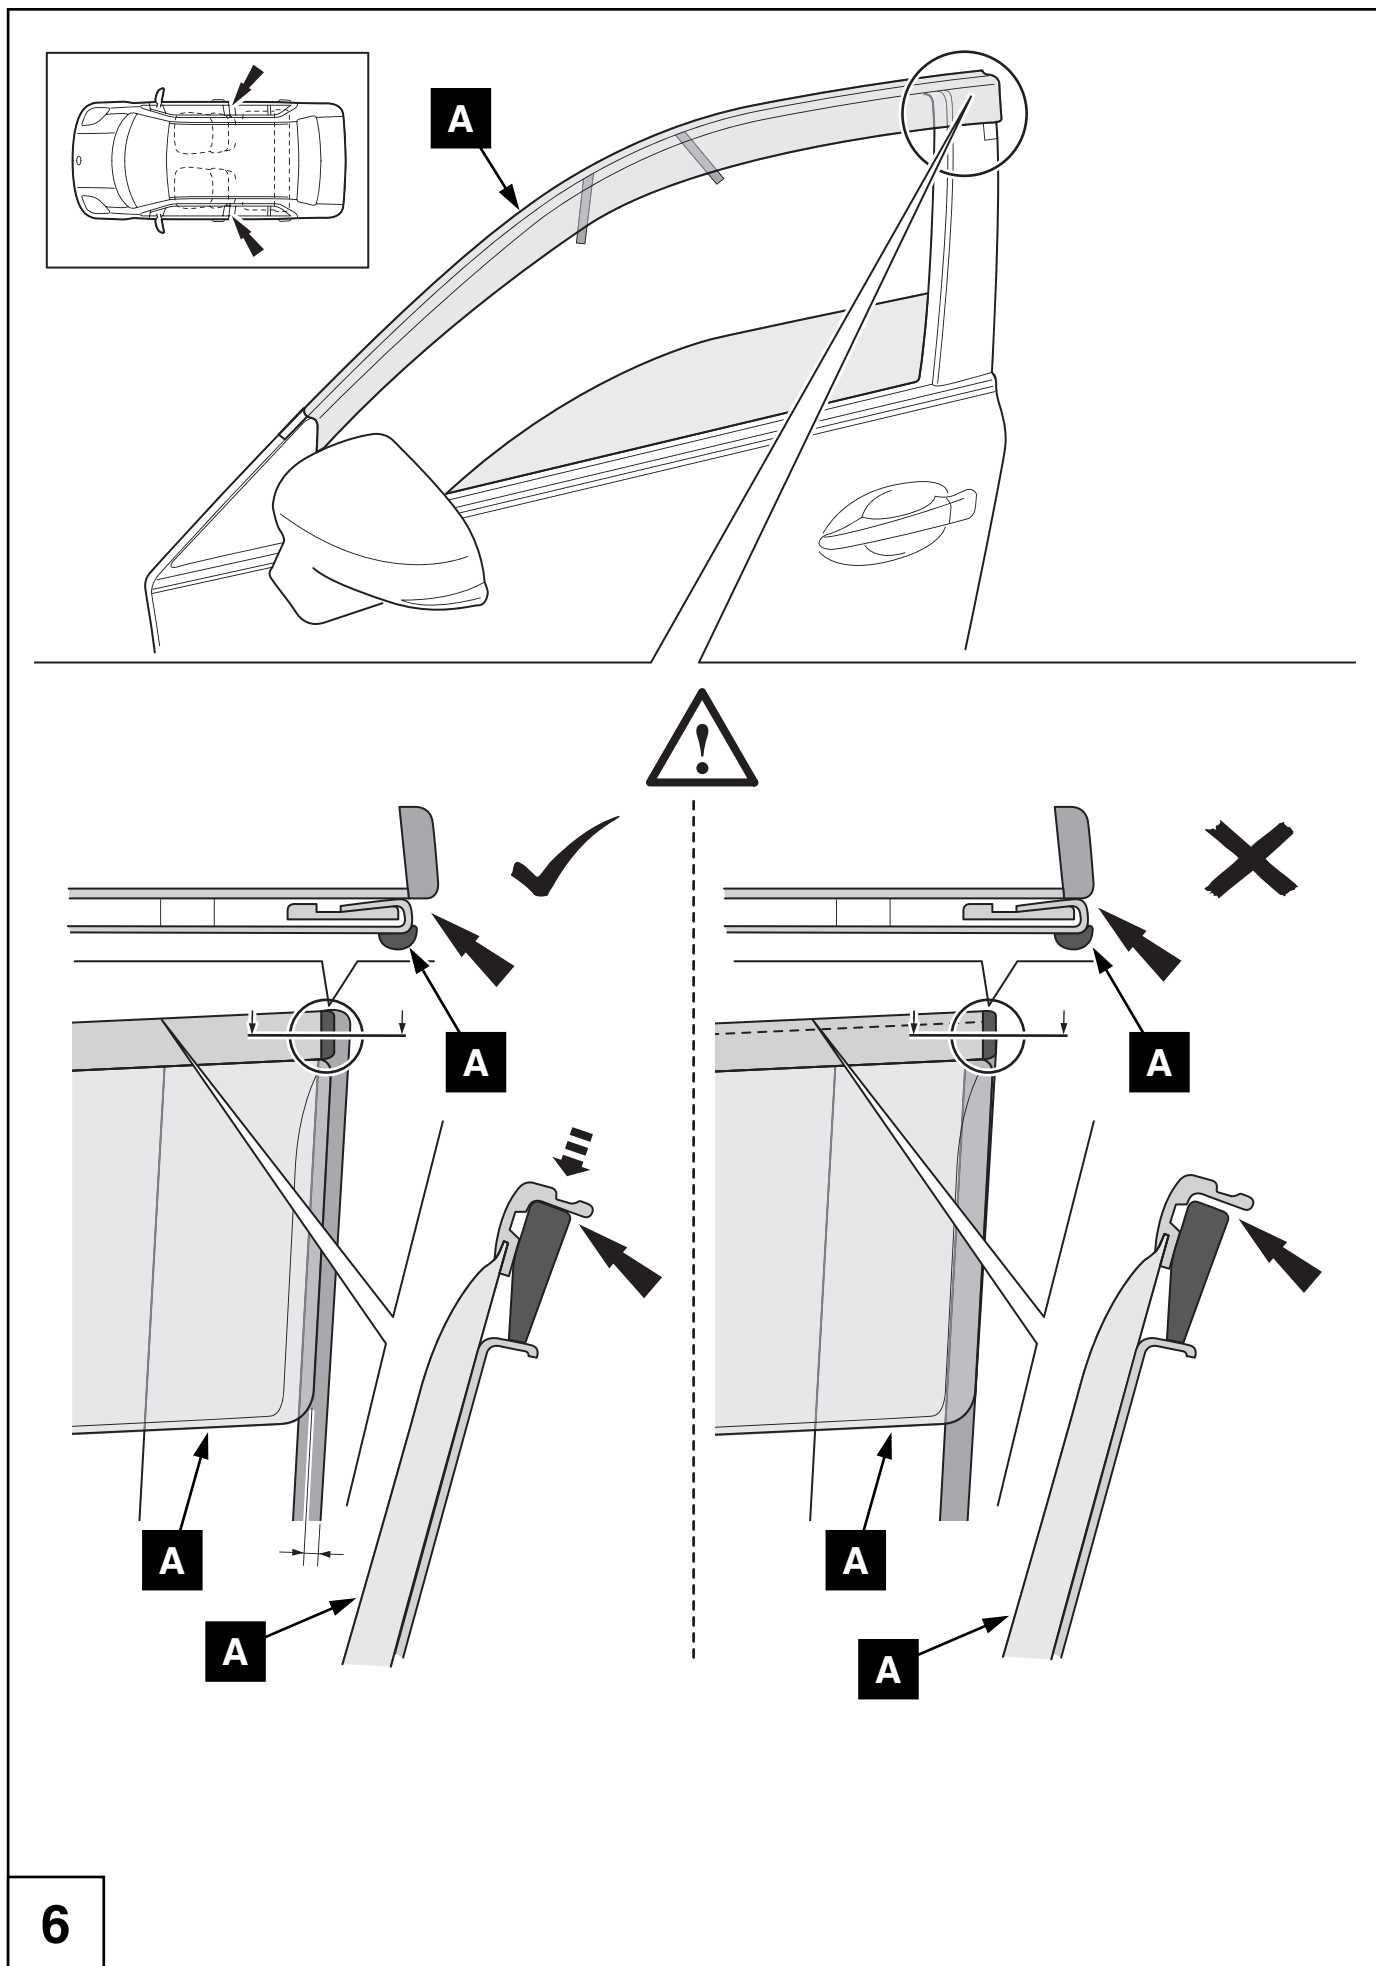


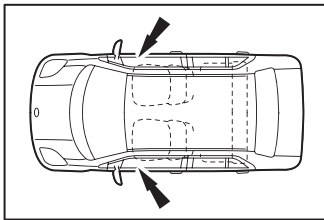


A

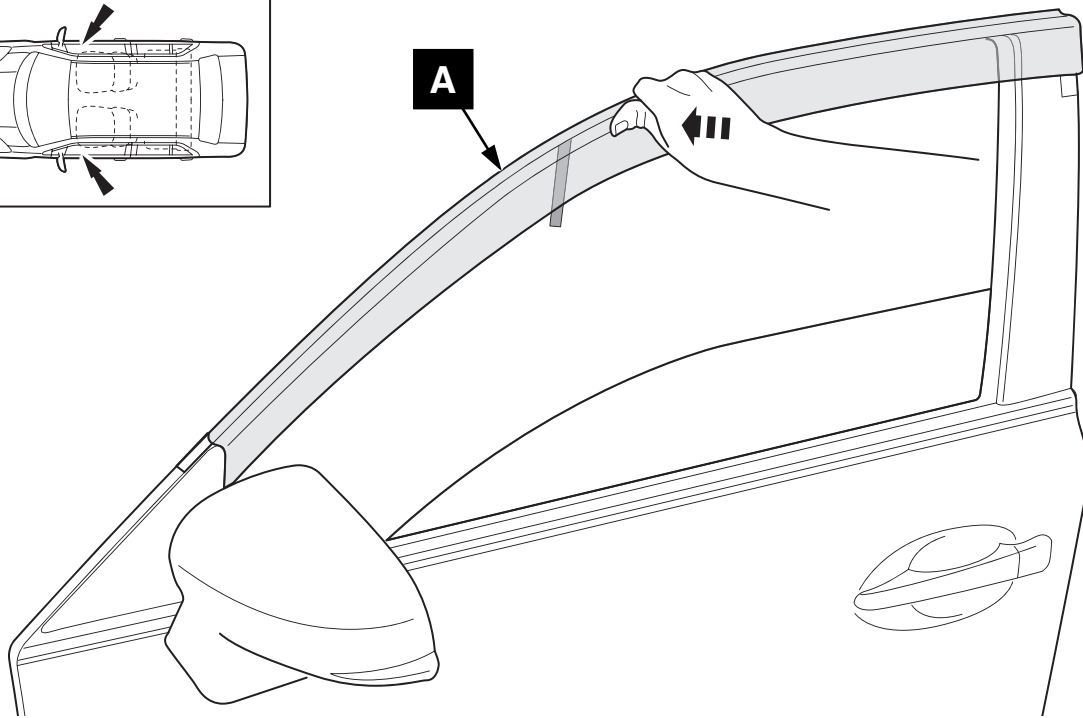

7

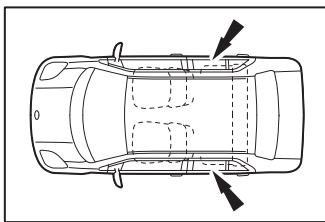


B

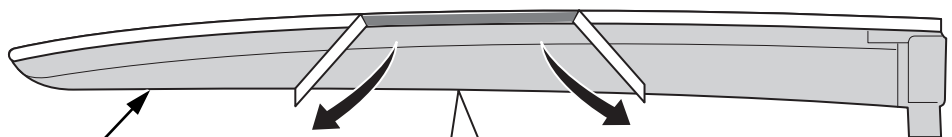


1




± 50 mm

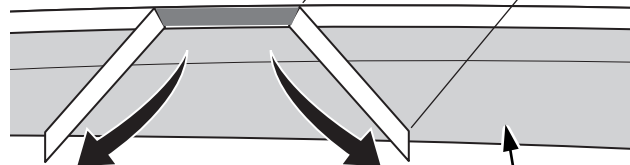


B




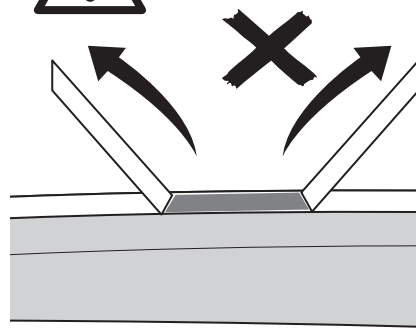


8


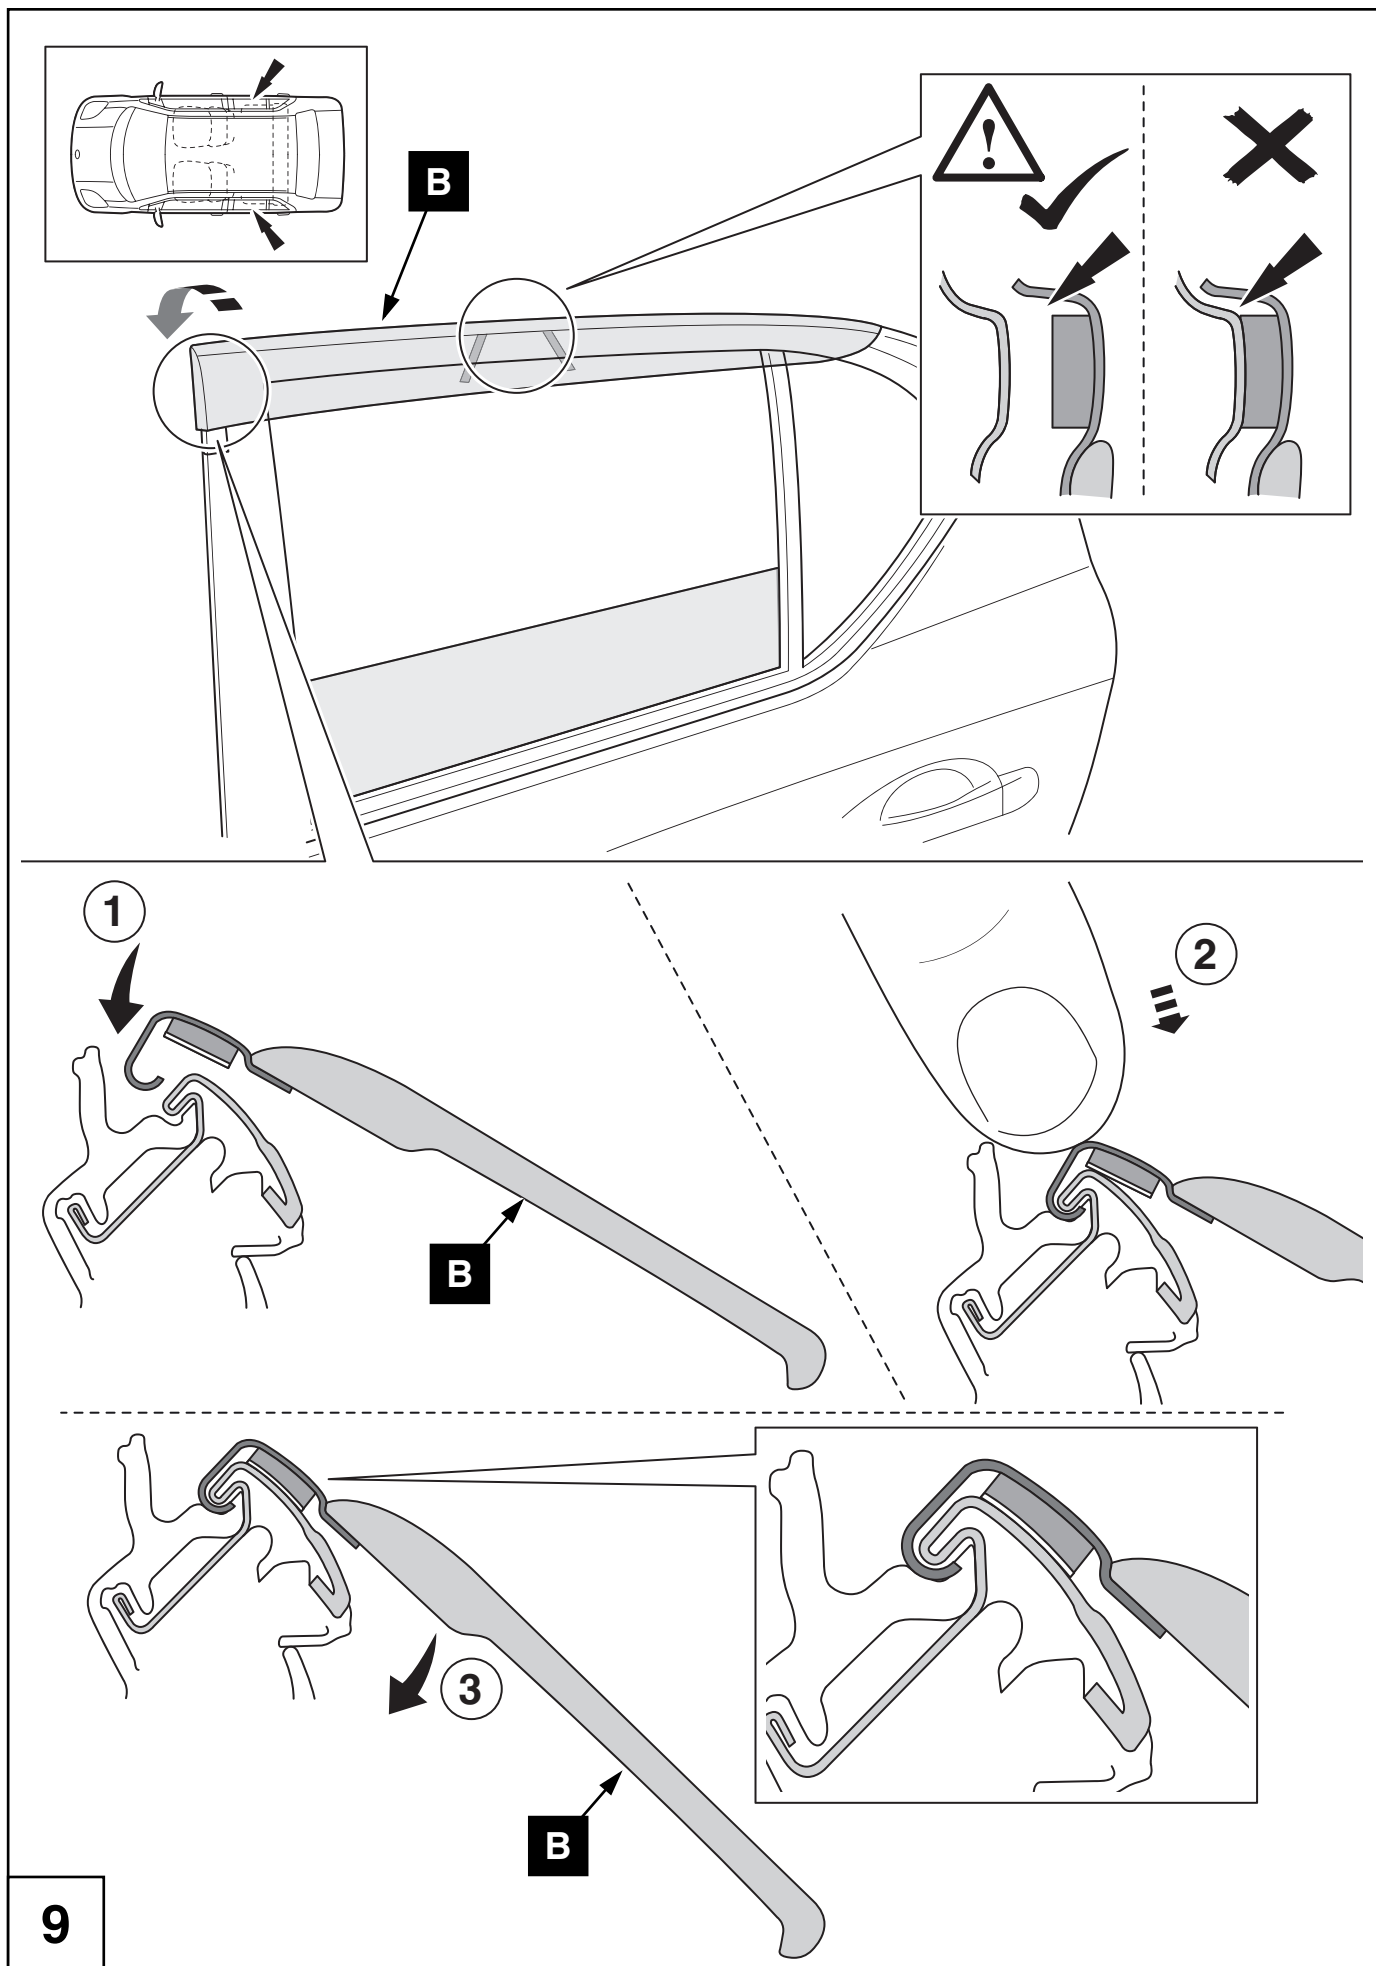



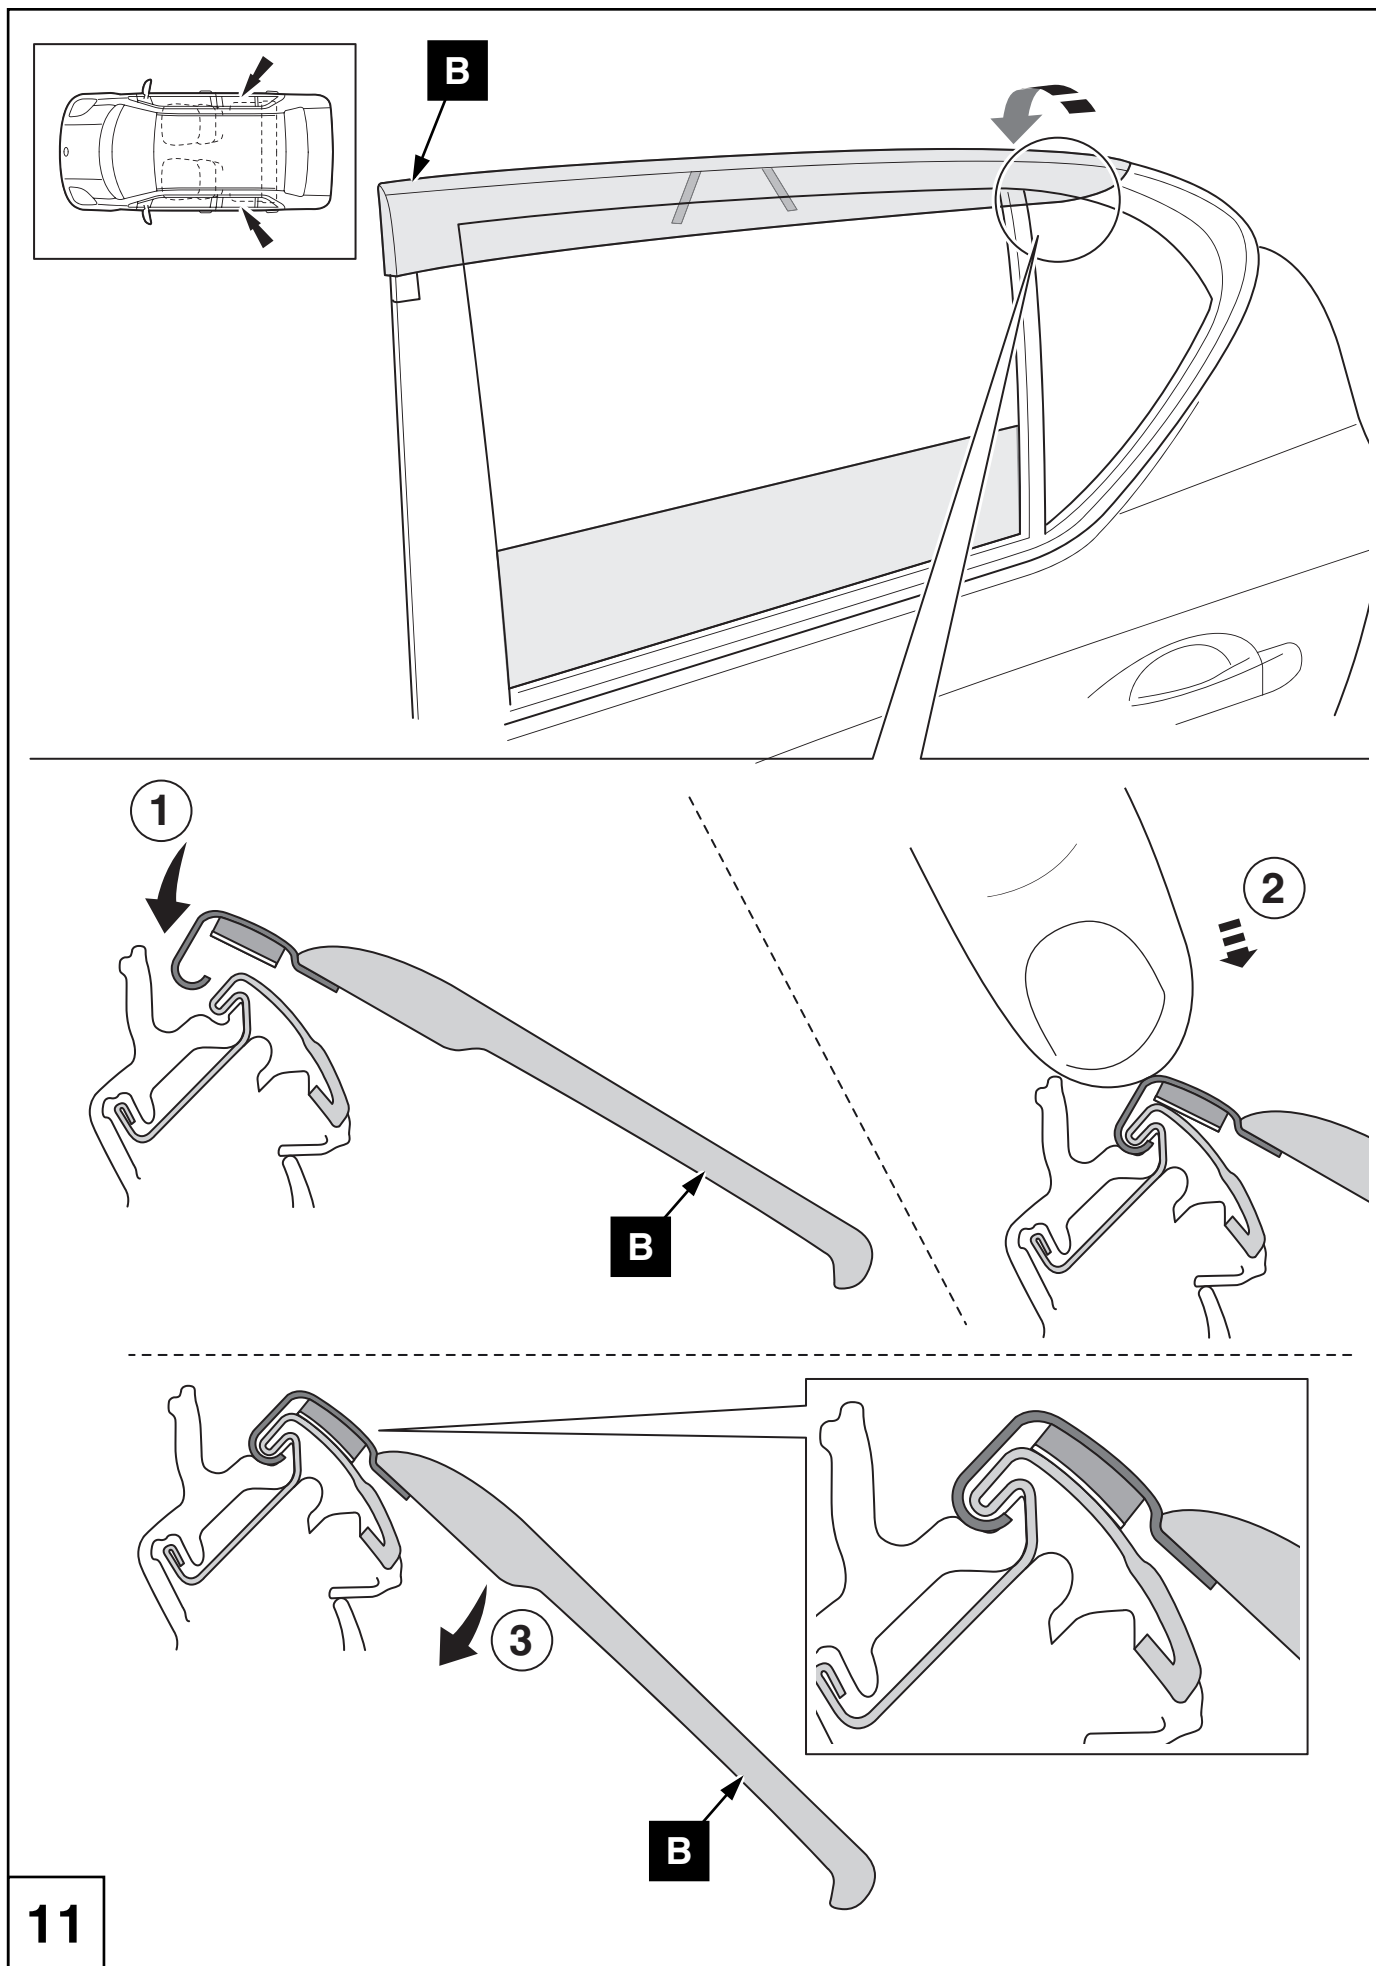





11

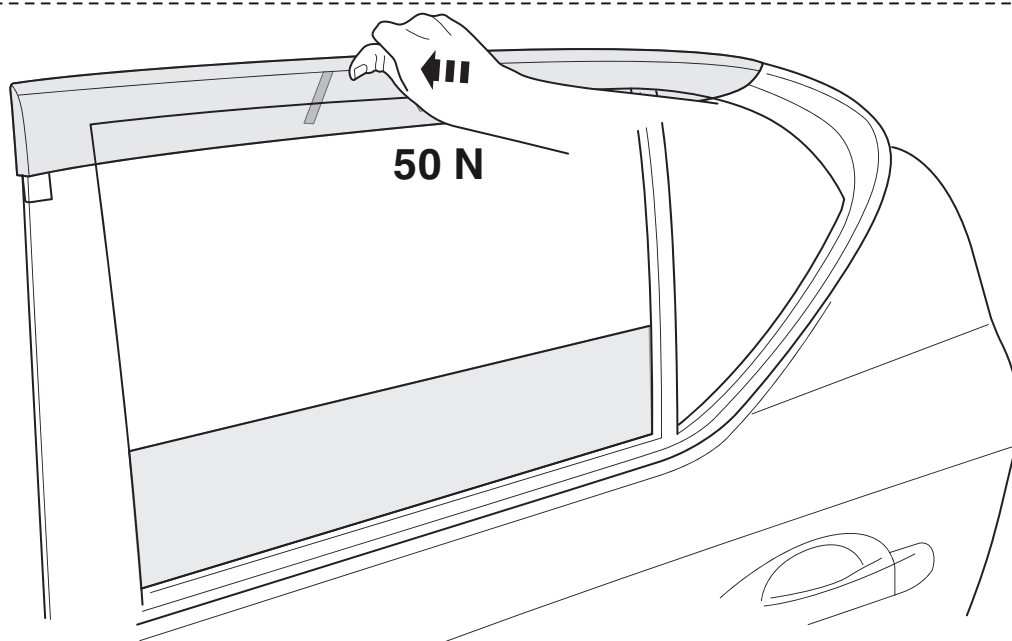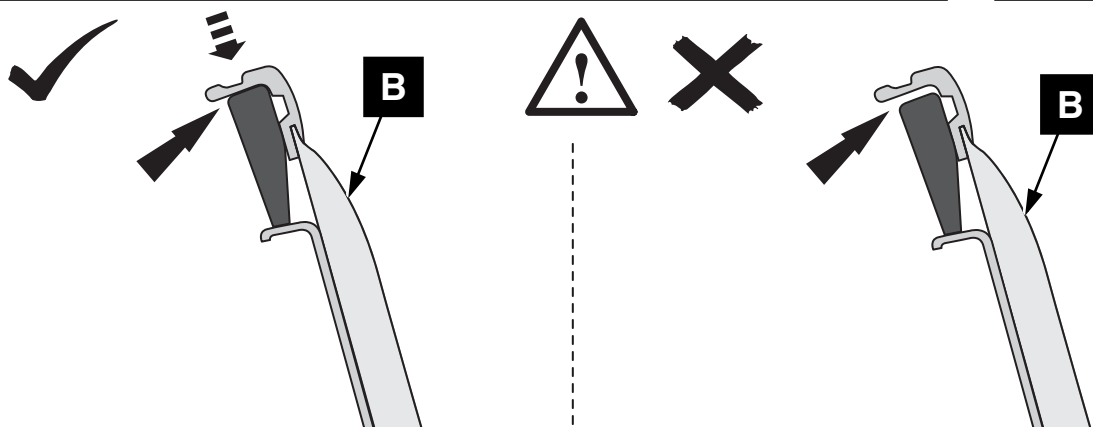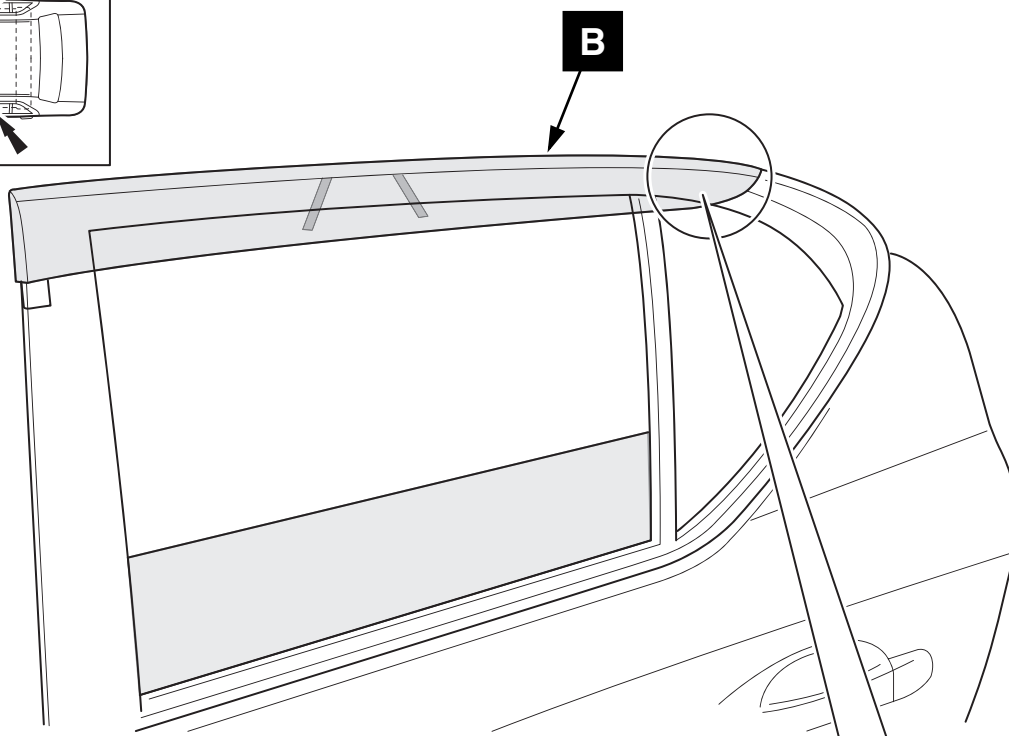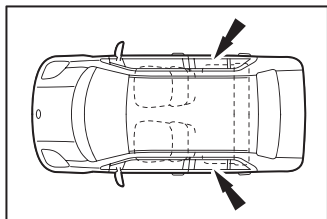

12

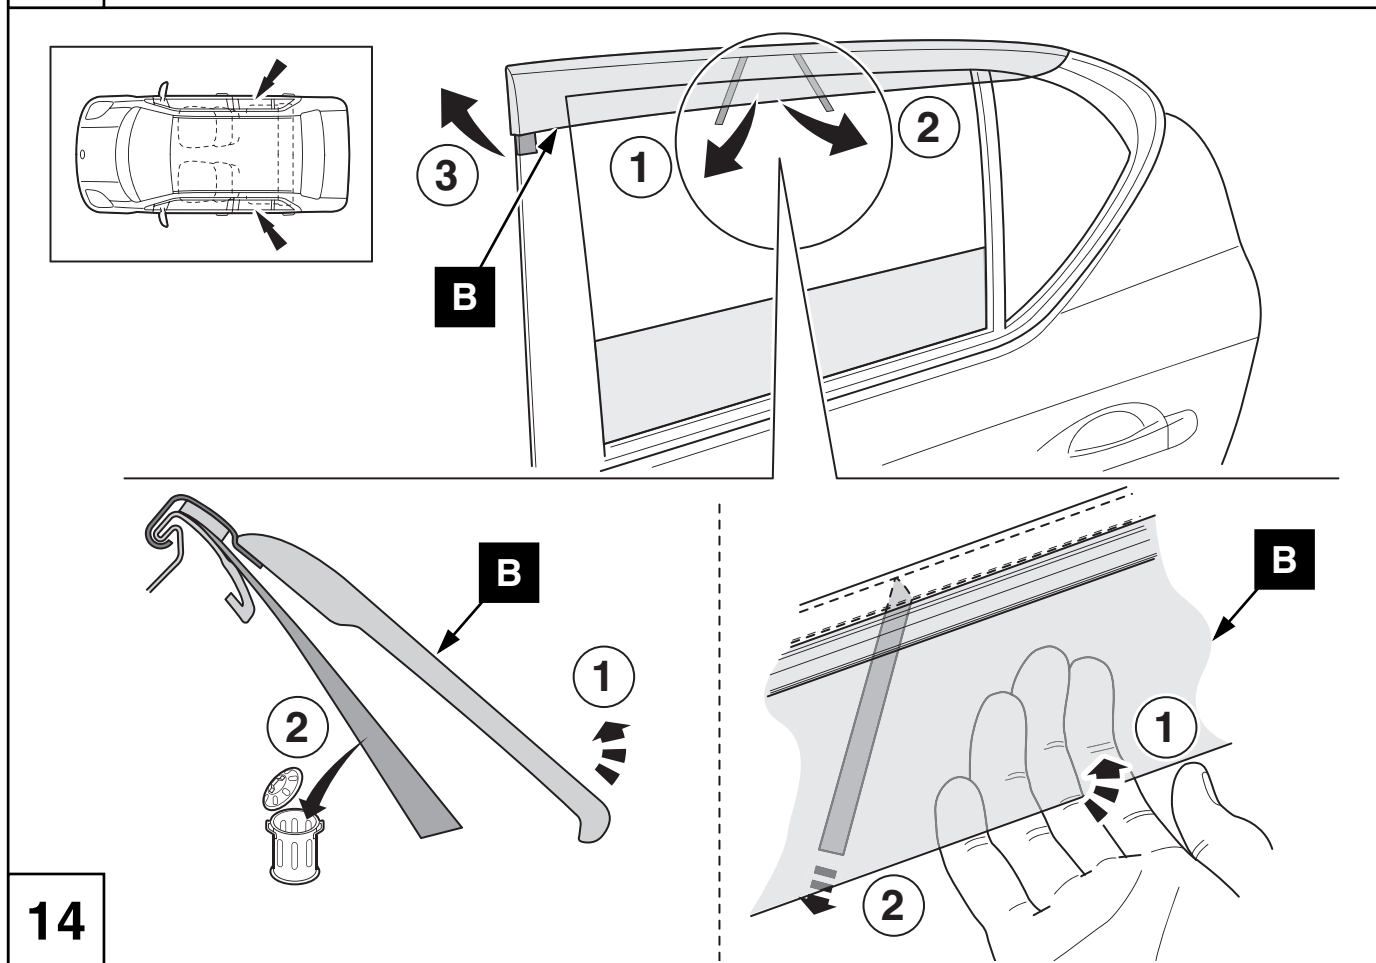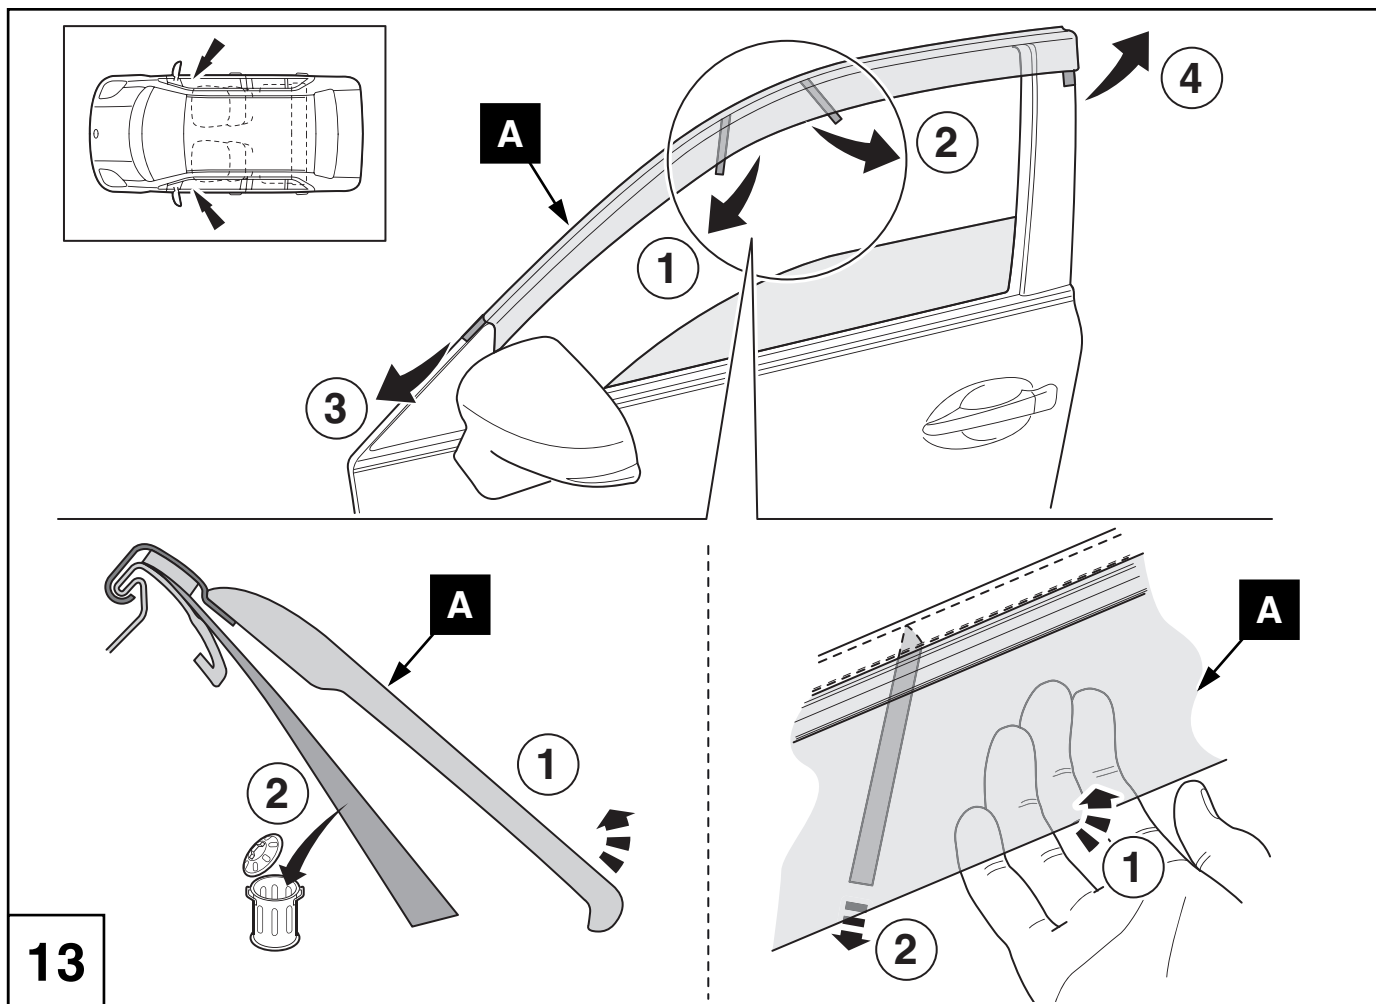

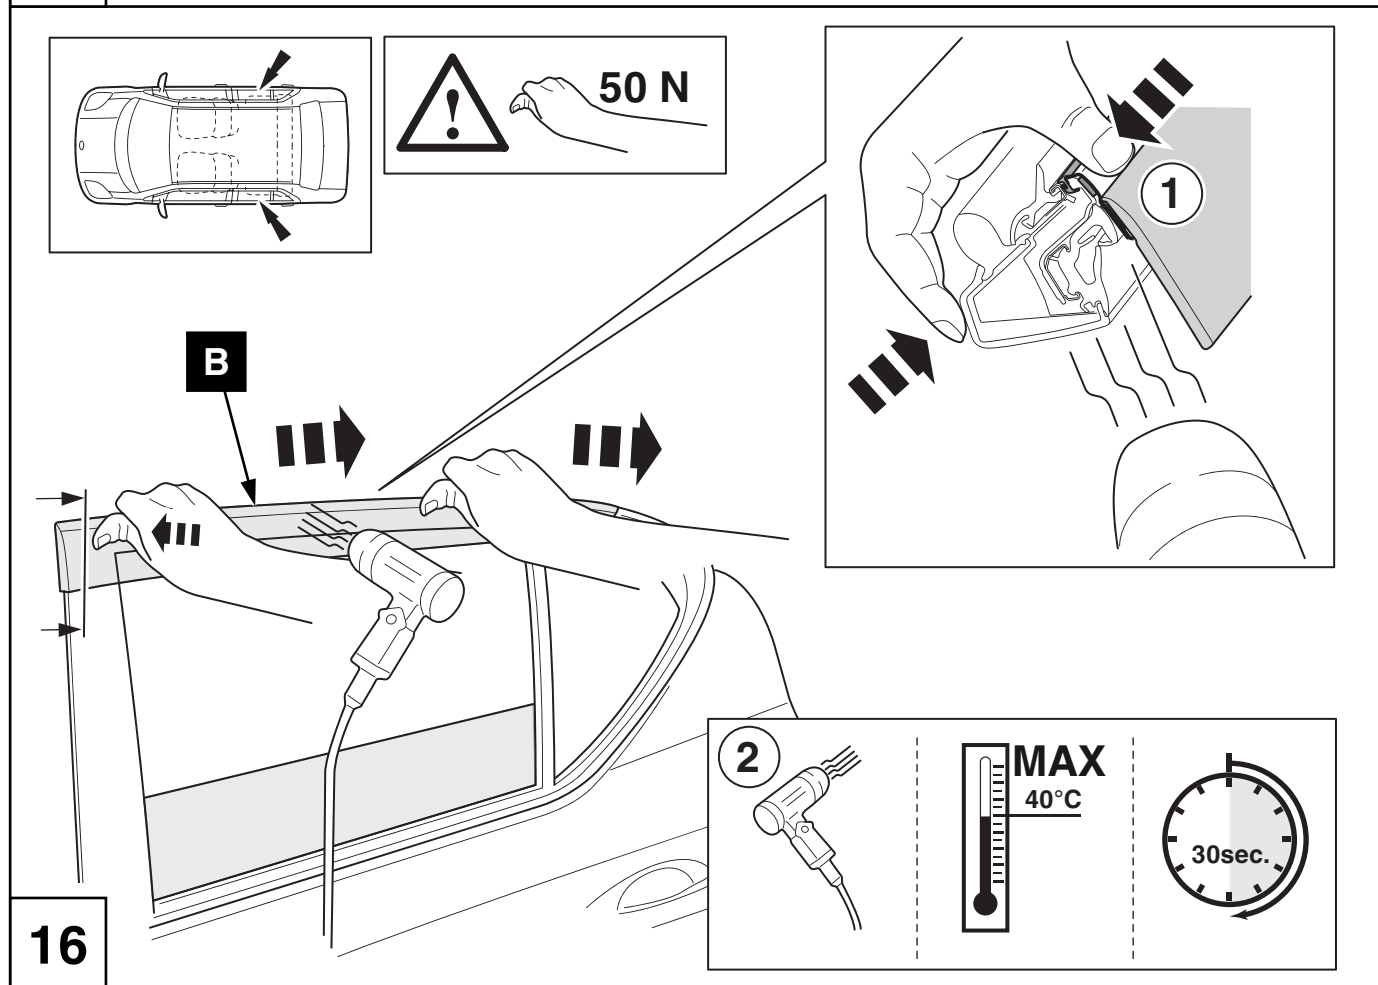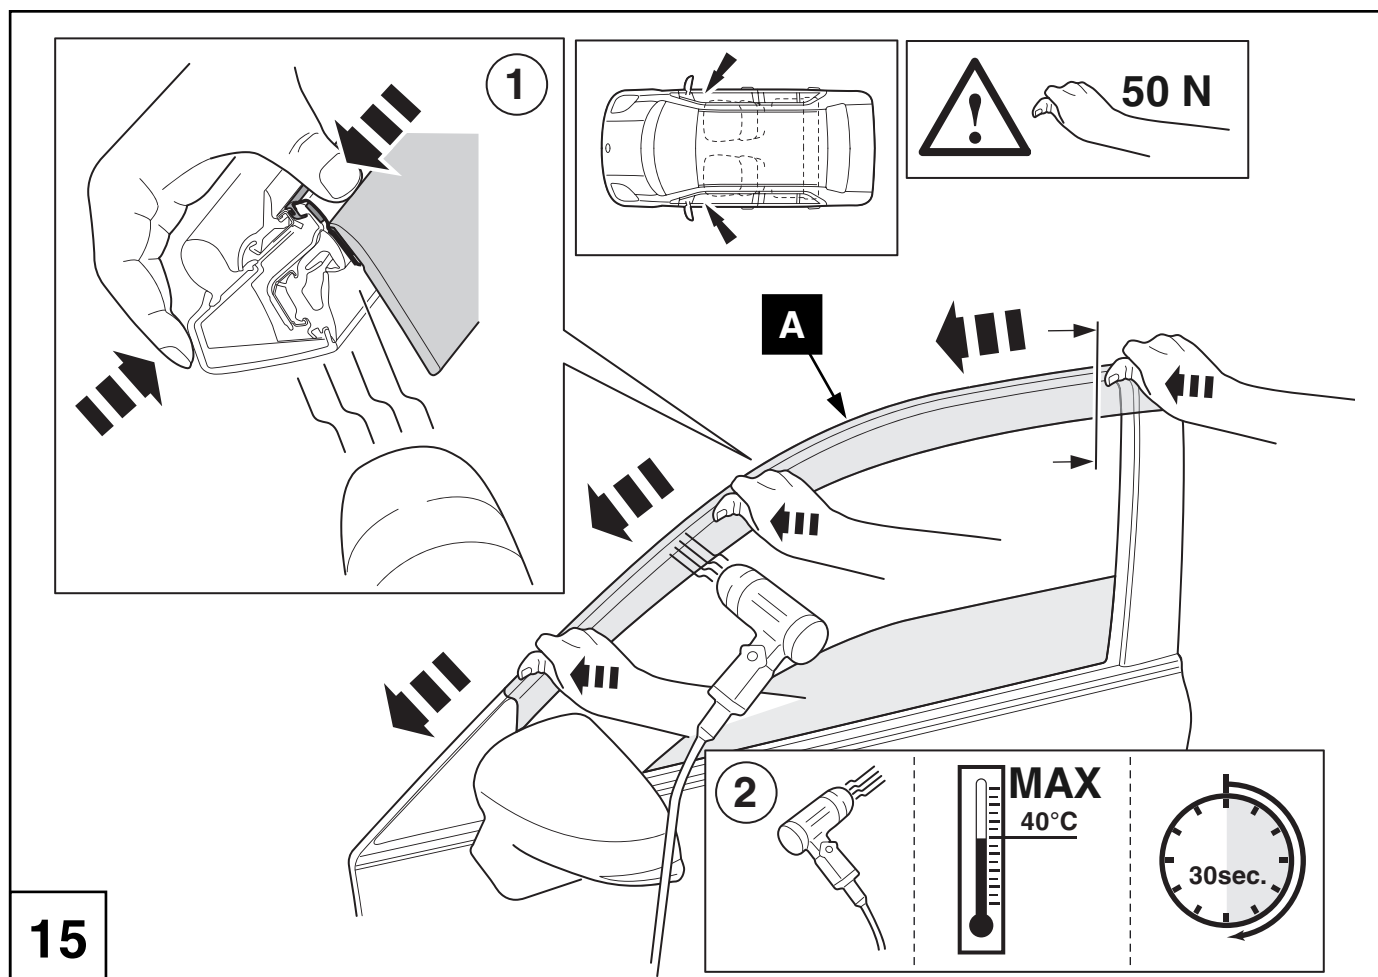

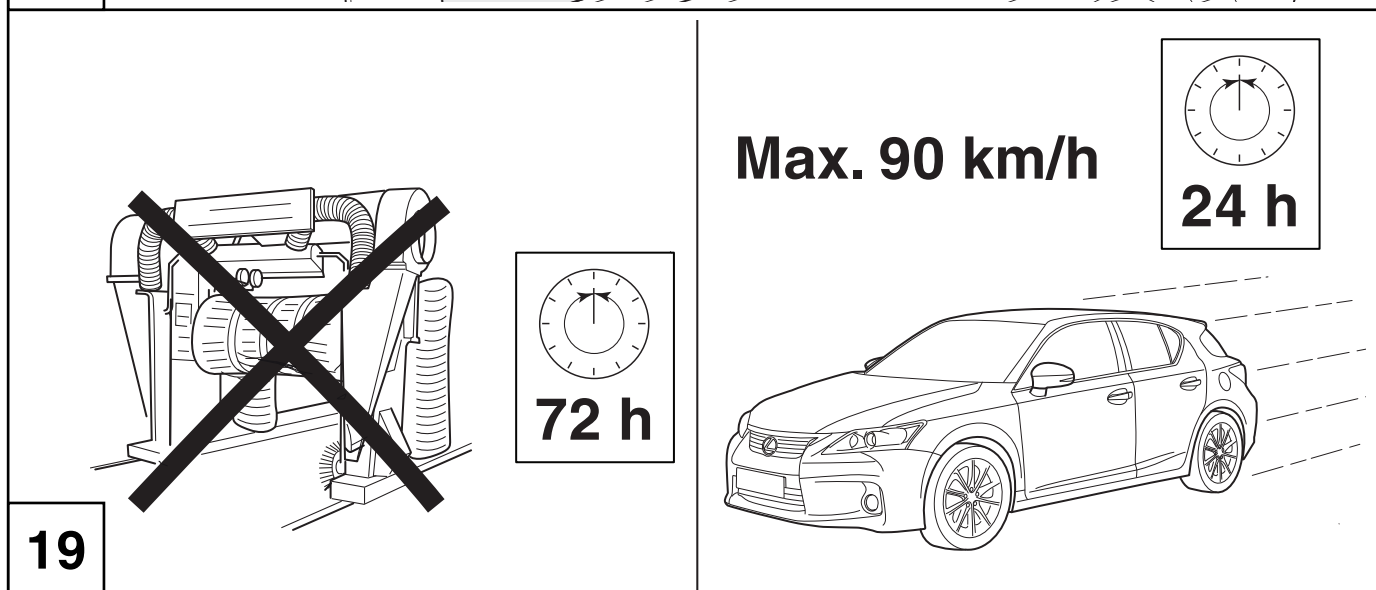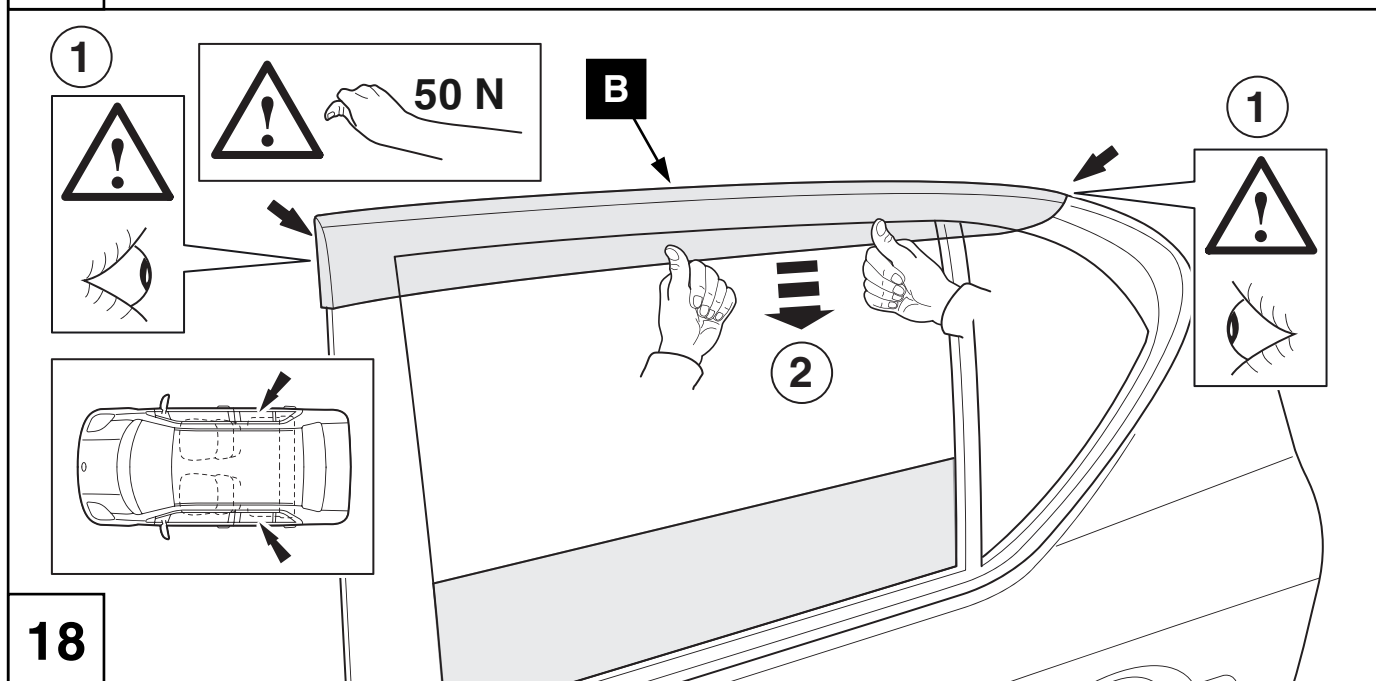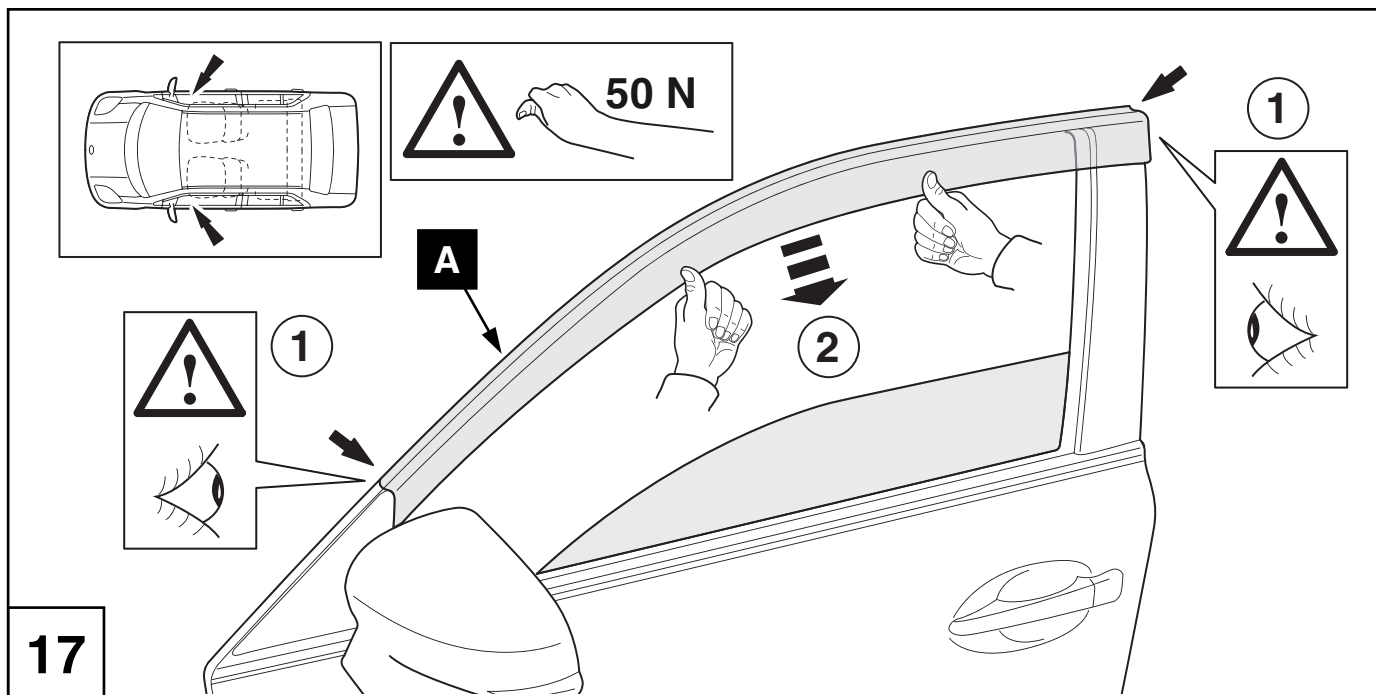






CHECK SHEET



Model / Year **LEXUS CT200h**
2010

Wind Deflector

VIN n°

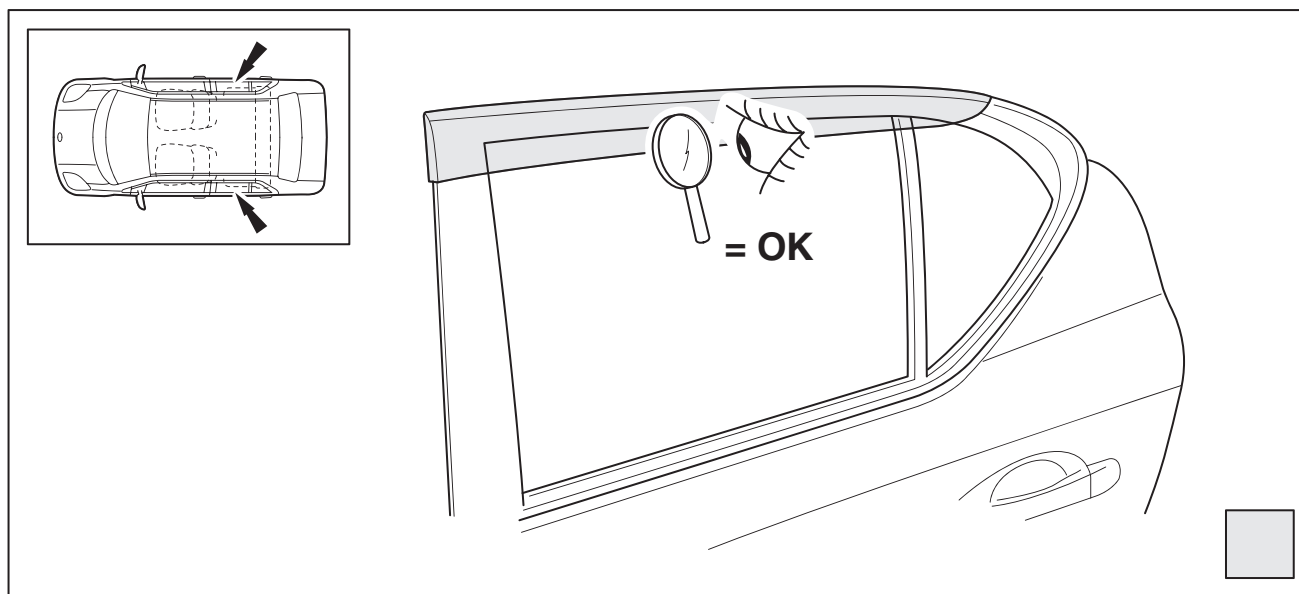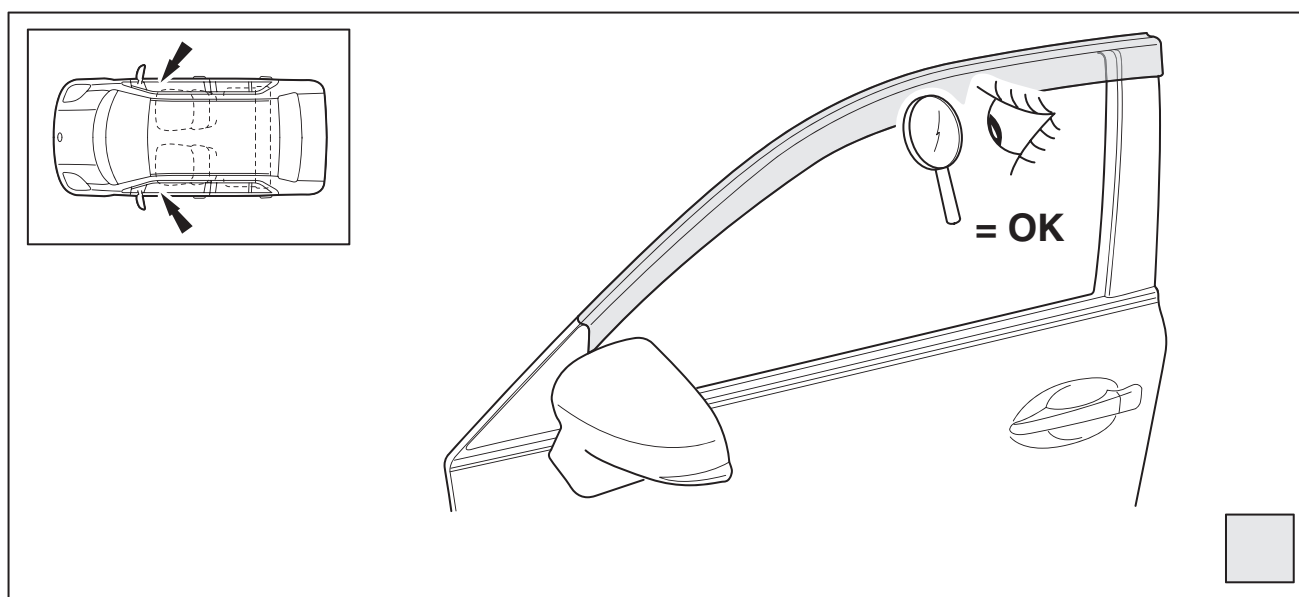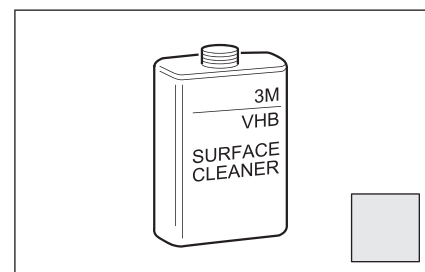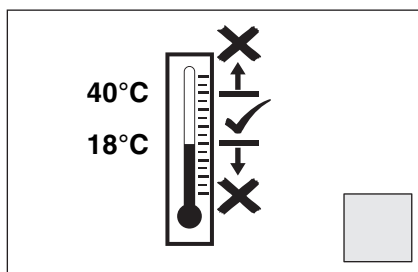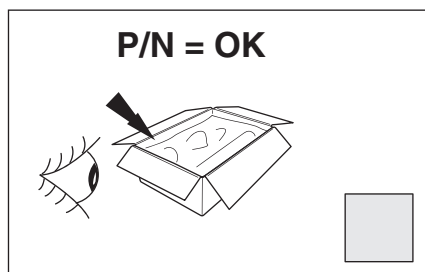

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp:

