


Vertical Cargo Net INSTALLATION INSTRUCTIONS CT200h

Model year	2010/12, 2013/12
Vehicle code	ZWA10*-A****W
Part number Main Kit	PT347-76110

Revision Record


Rev. No.	Date	Page	Picture	Update	New	Deleted
1	14.11.13	1		X		

A

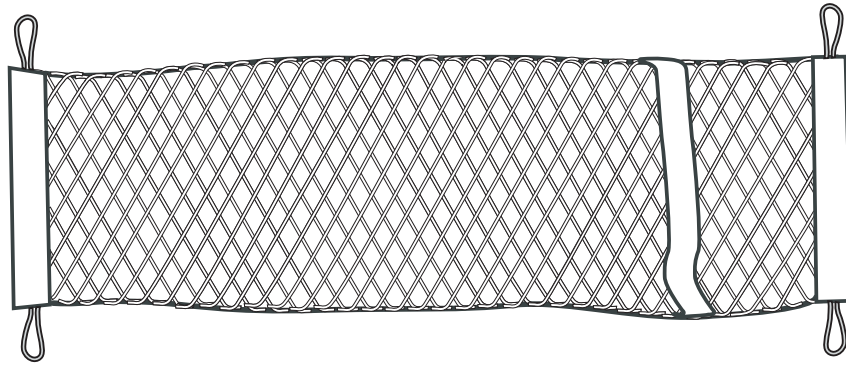

1 x

B


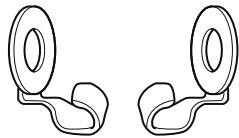





1 x

C




2 x





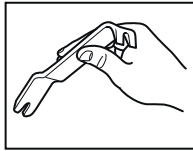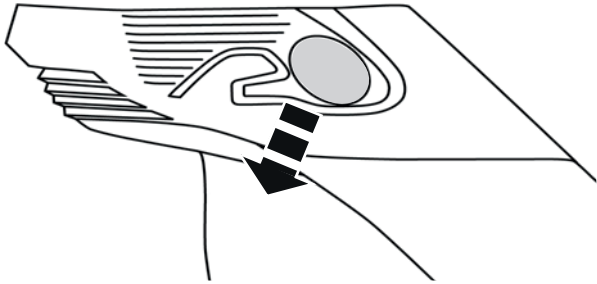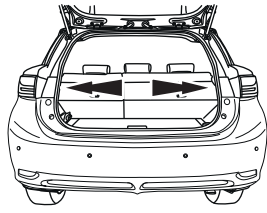



1

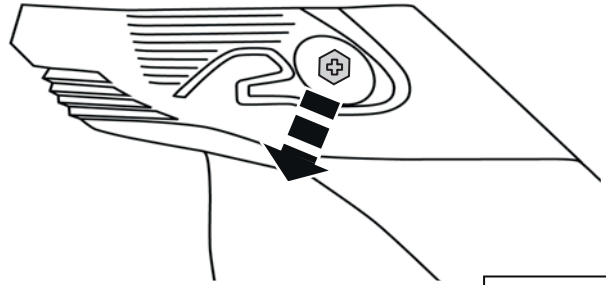


2

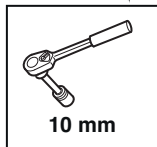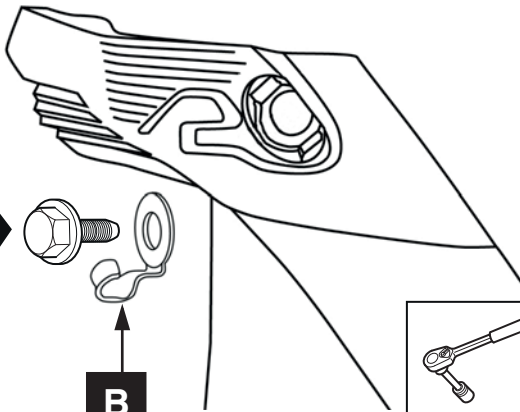


3

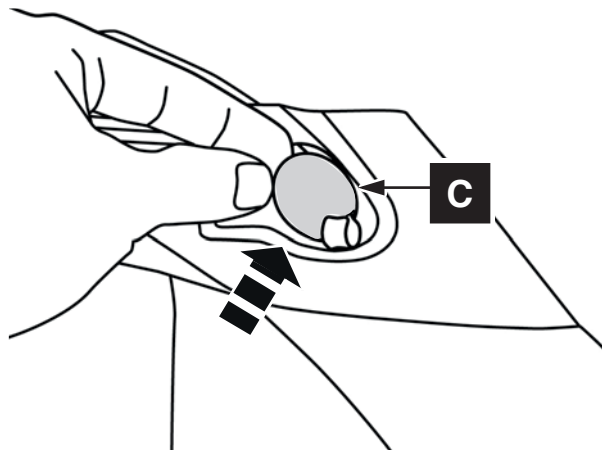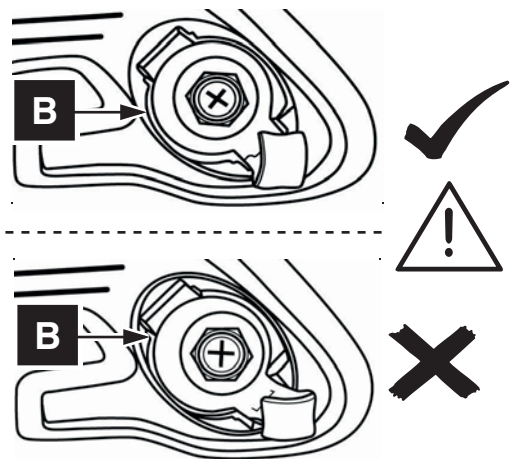


4

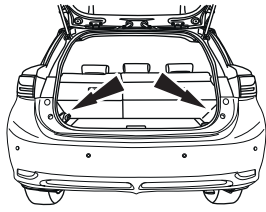


A

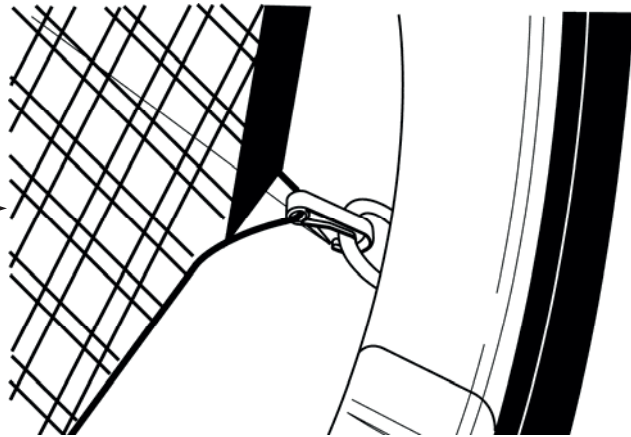

5

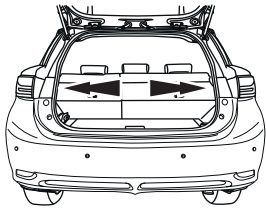

A

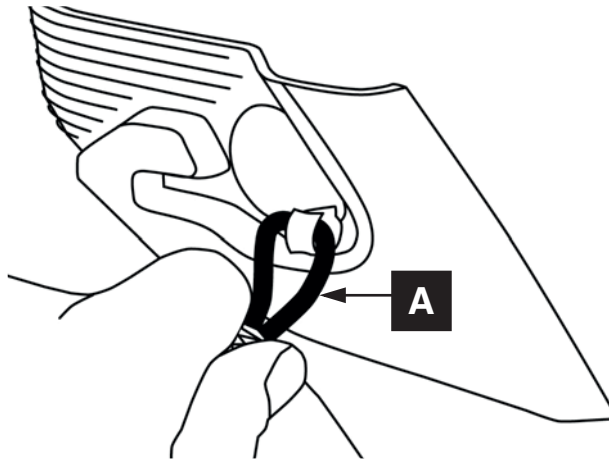

6

