


Side sills INSTALLATION INSTRUCTIONS NX



Model year	2014/07, 2017/09
Vehicle code	**Z1**-AW***W
Part number	PZ415-X2492-00

Revision Record


Rev. No.	Date	Page	Picture	Update	New	Deleted
1	25.03.2015	All			Templates	
2	28.04.2017	All		Model year	Temperature mesuraments	

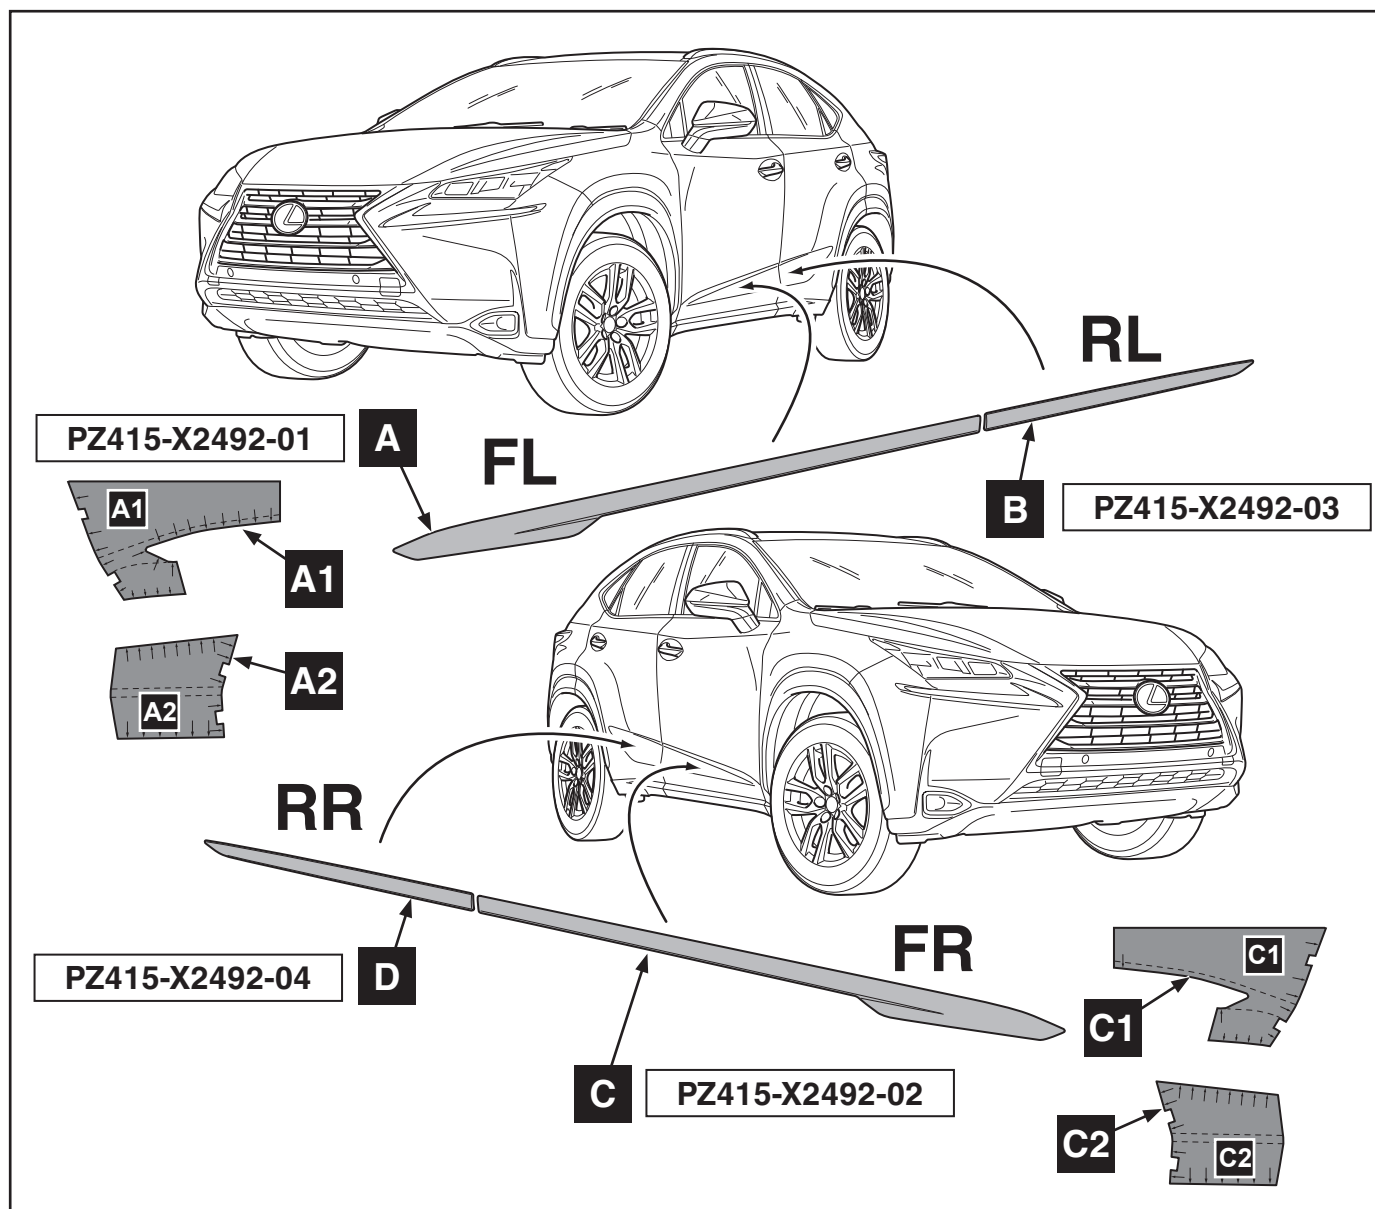




			PZ415-00000-00 2x adhesion promoter 3M 4298 UV

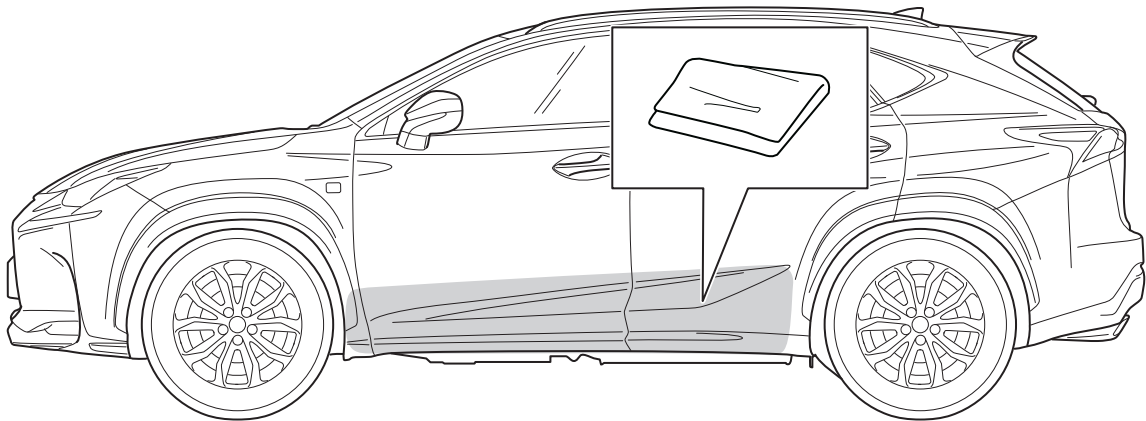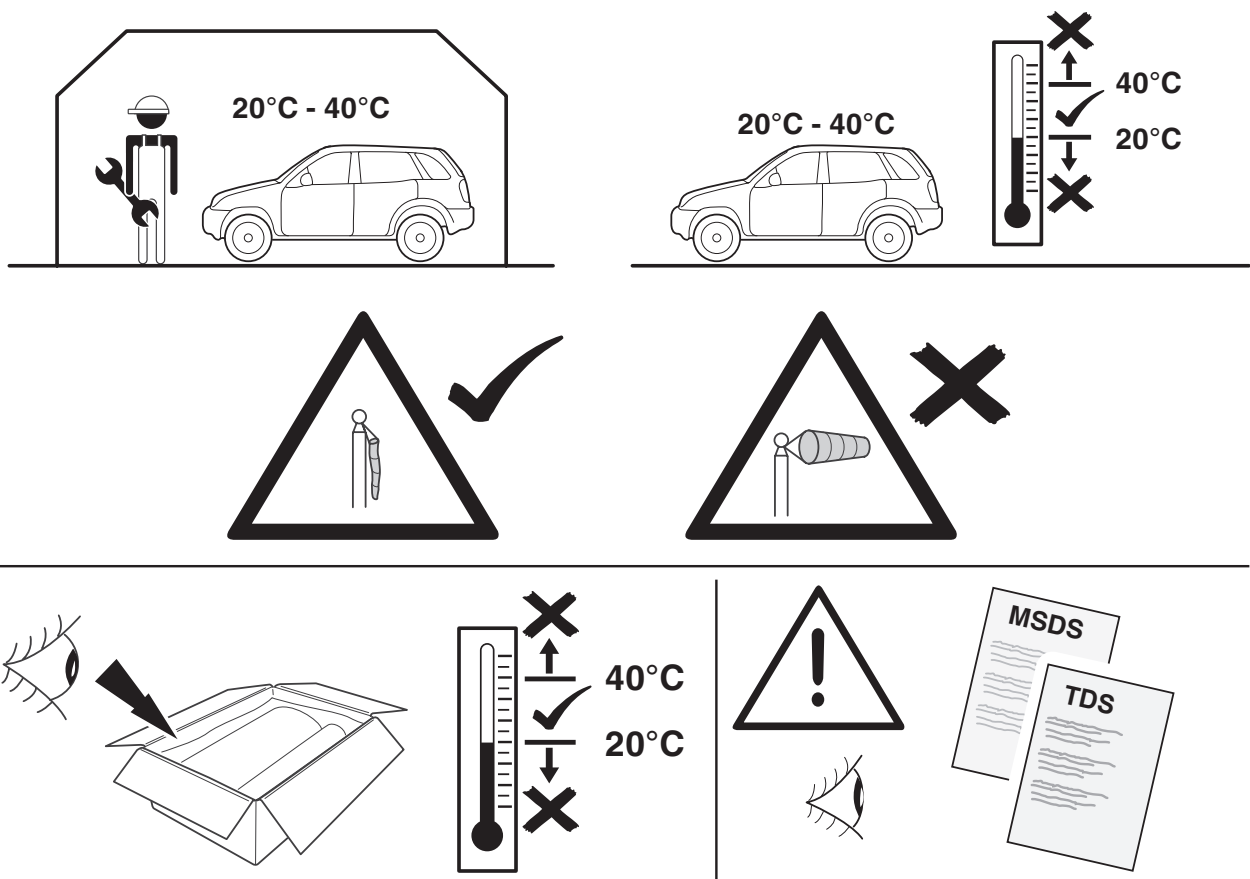


1

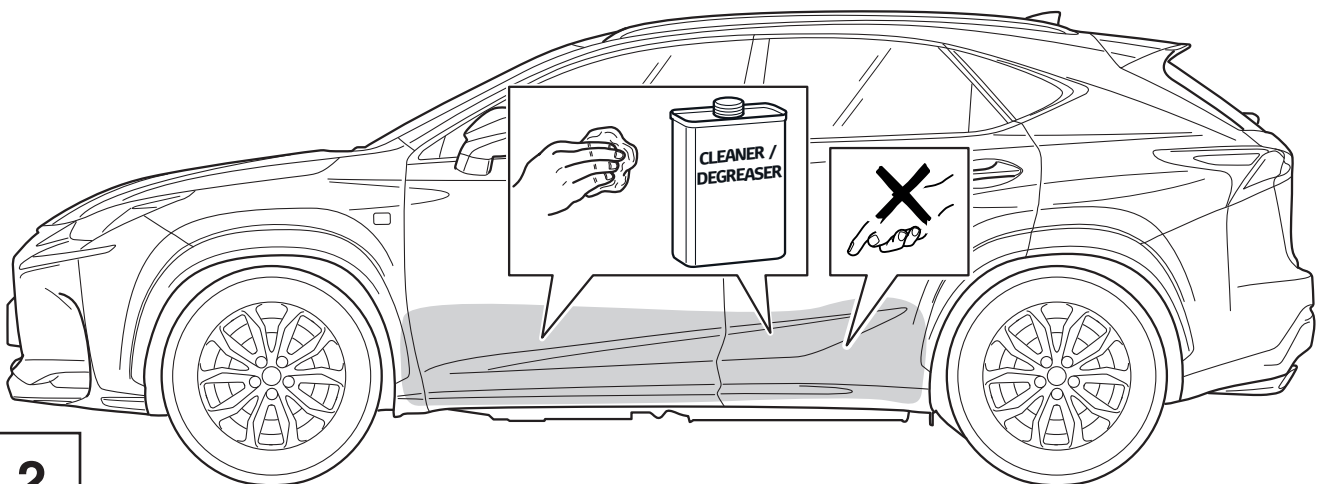


2

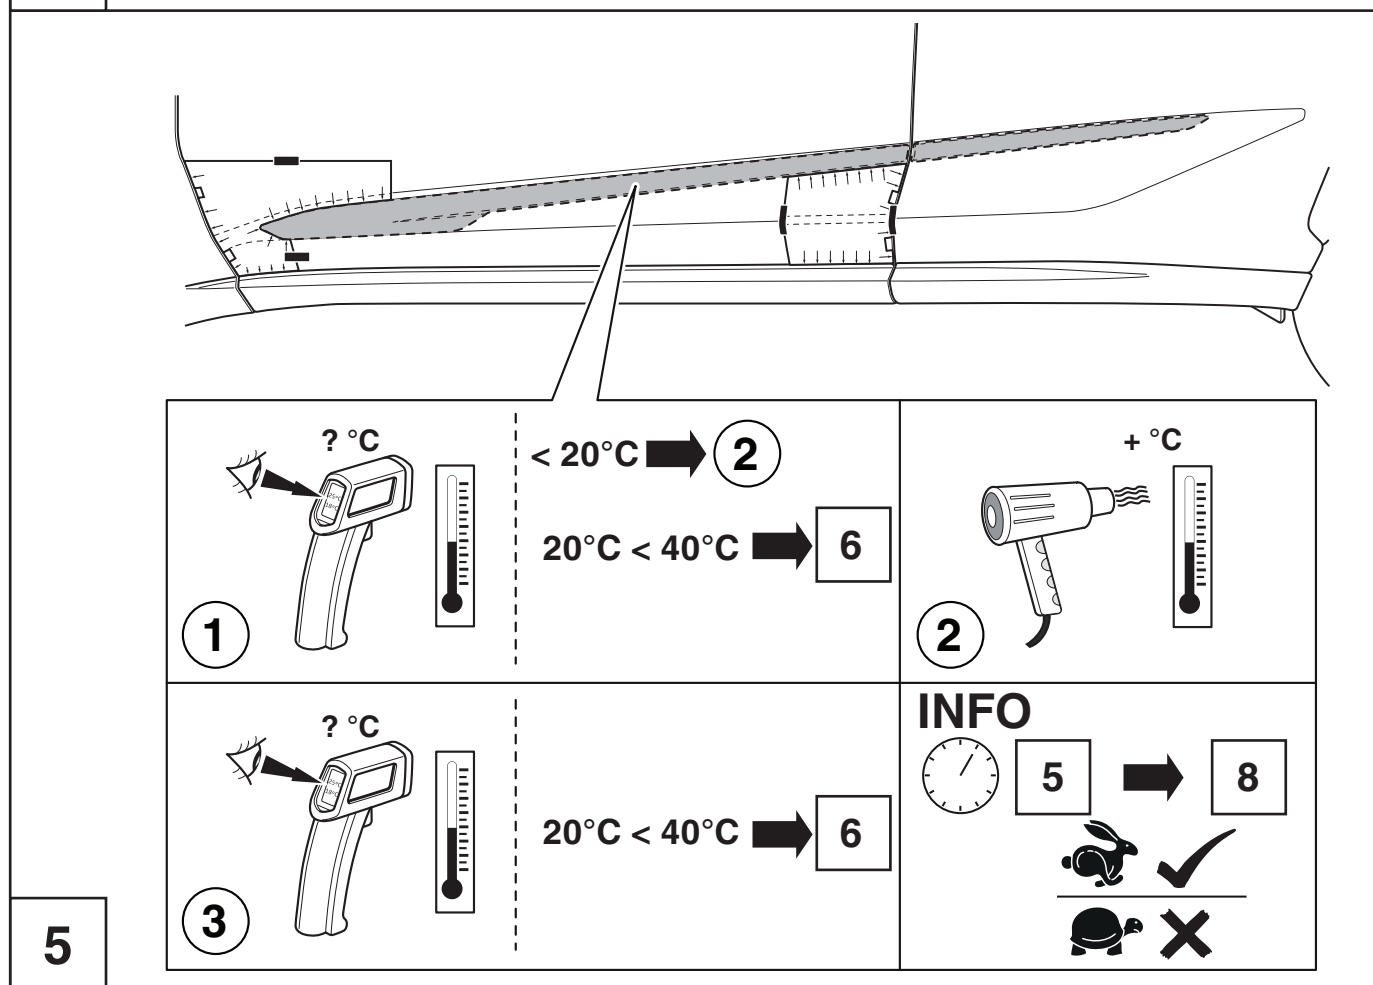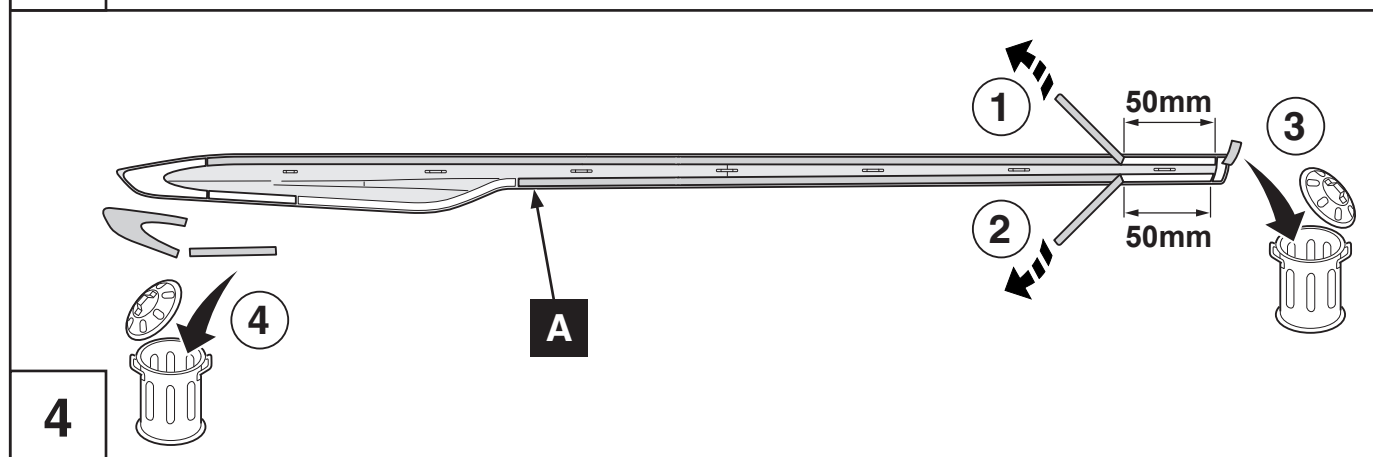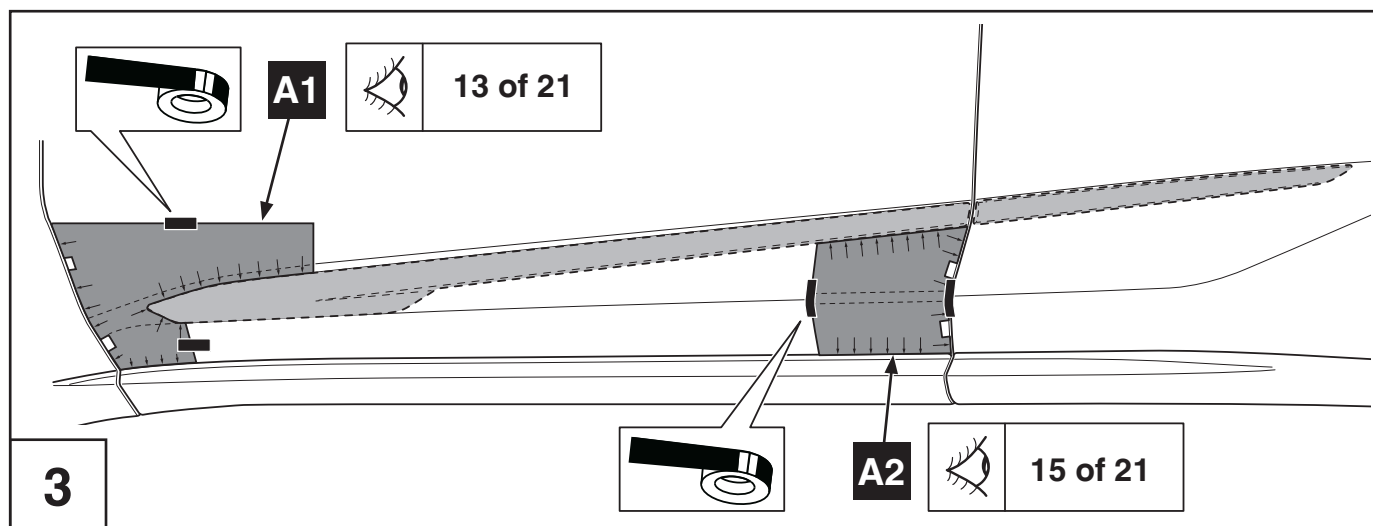


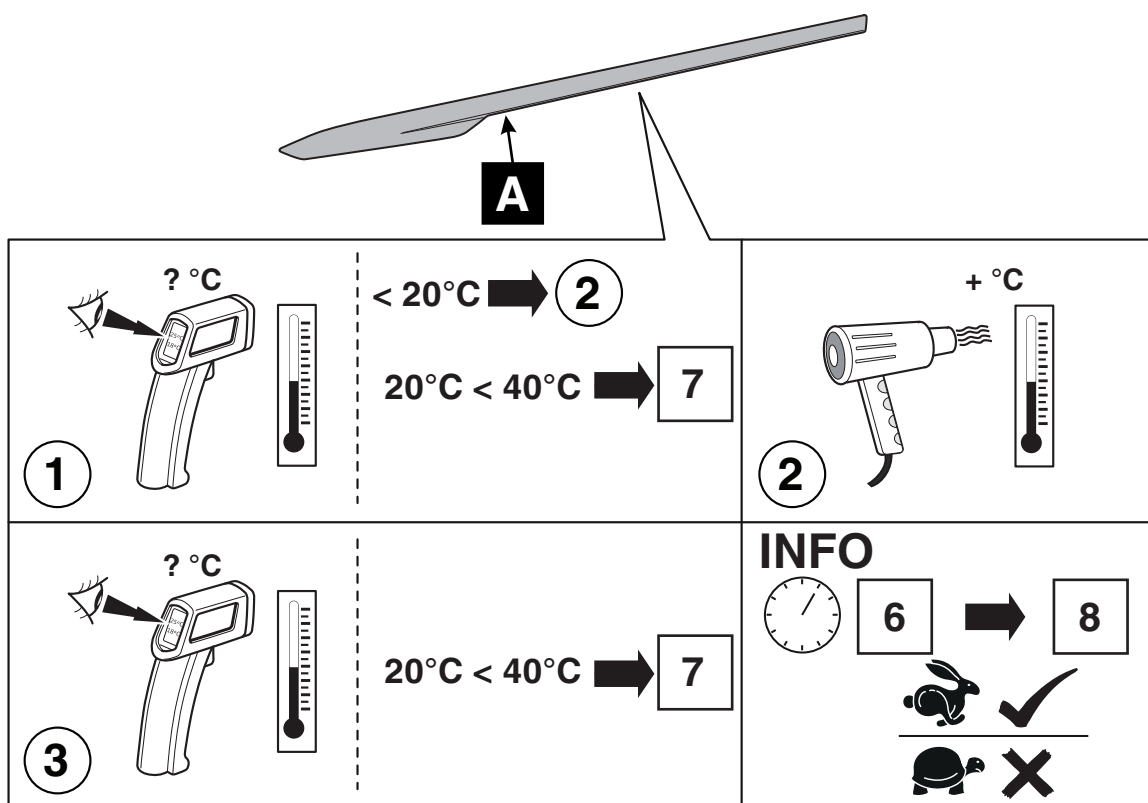


6


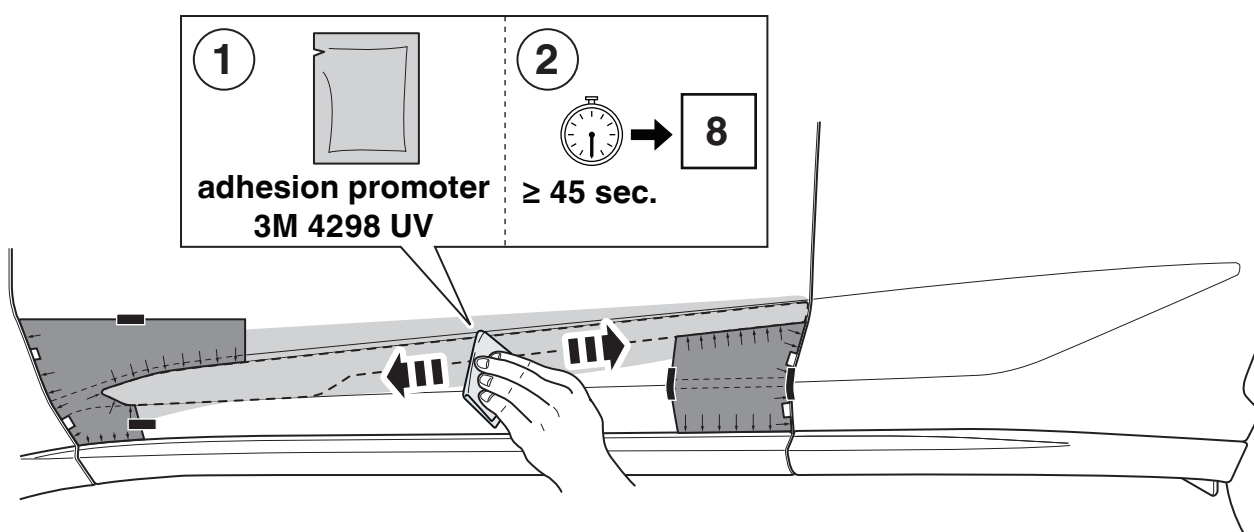


7

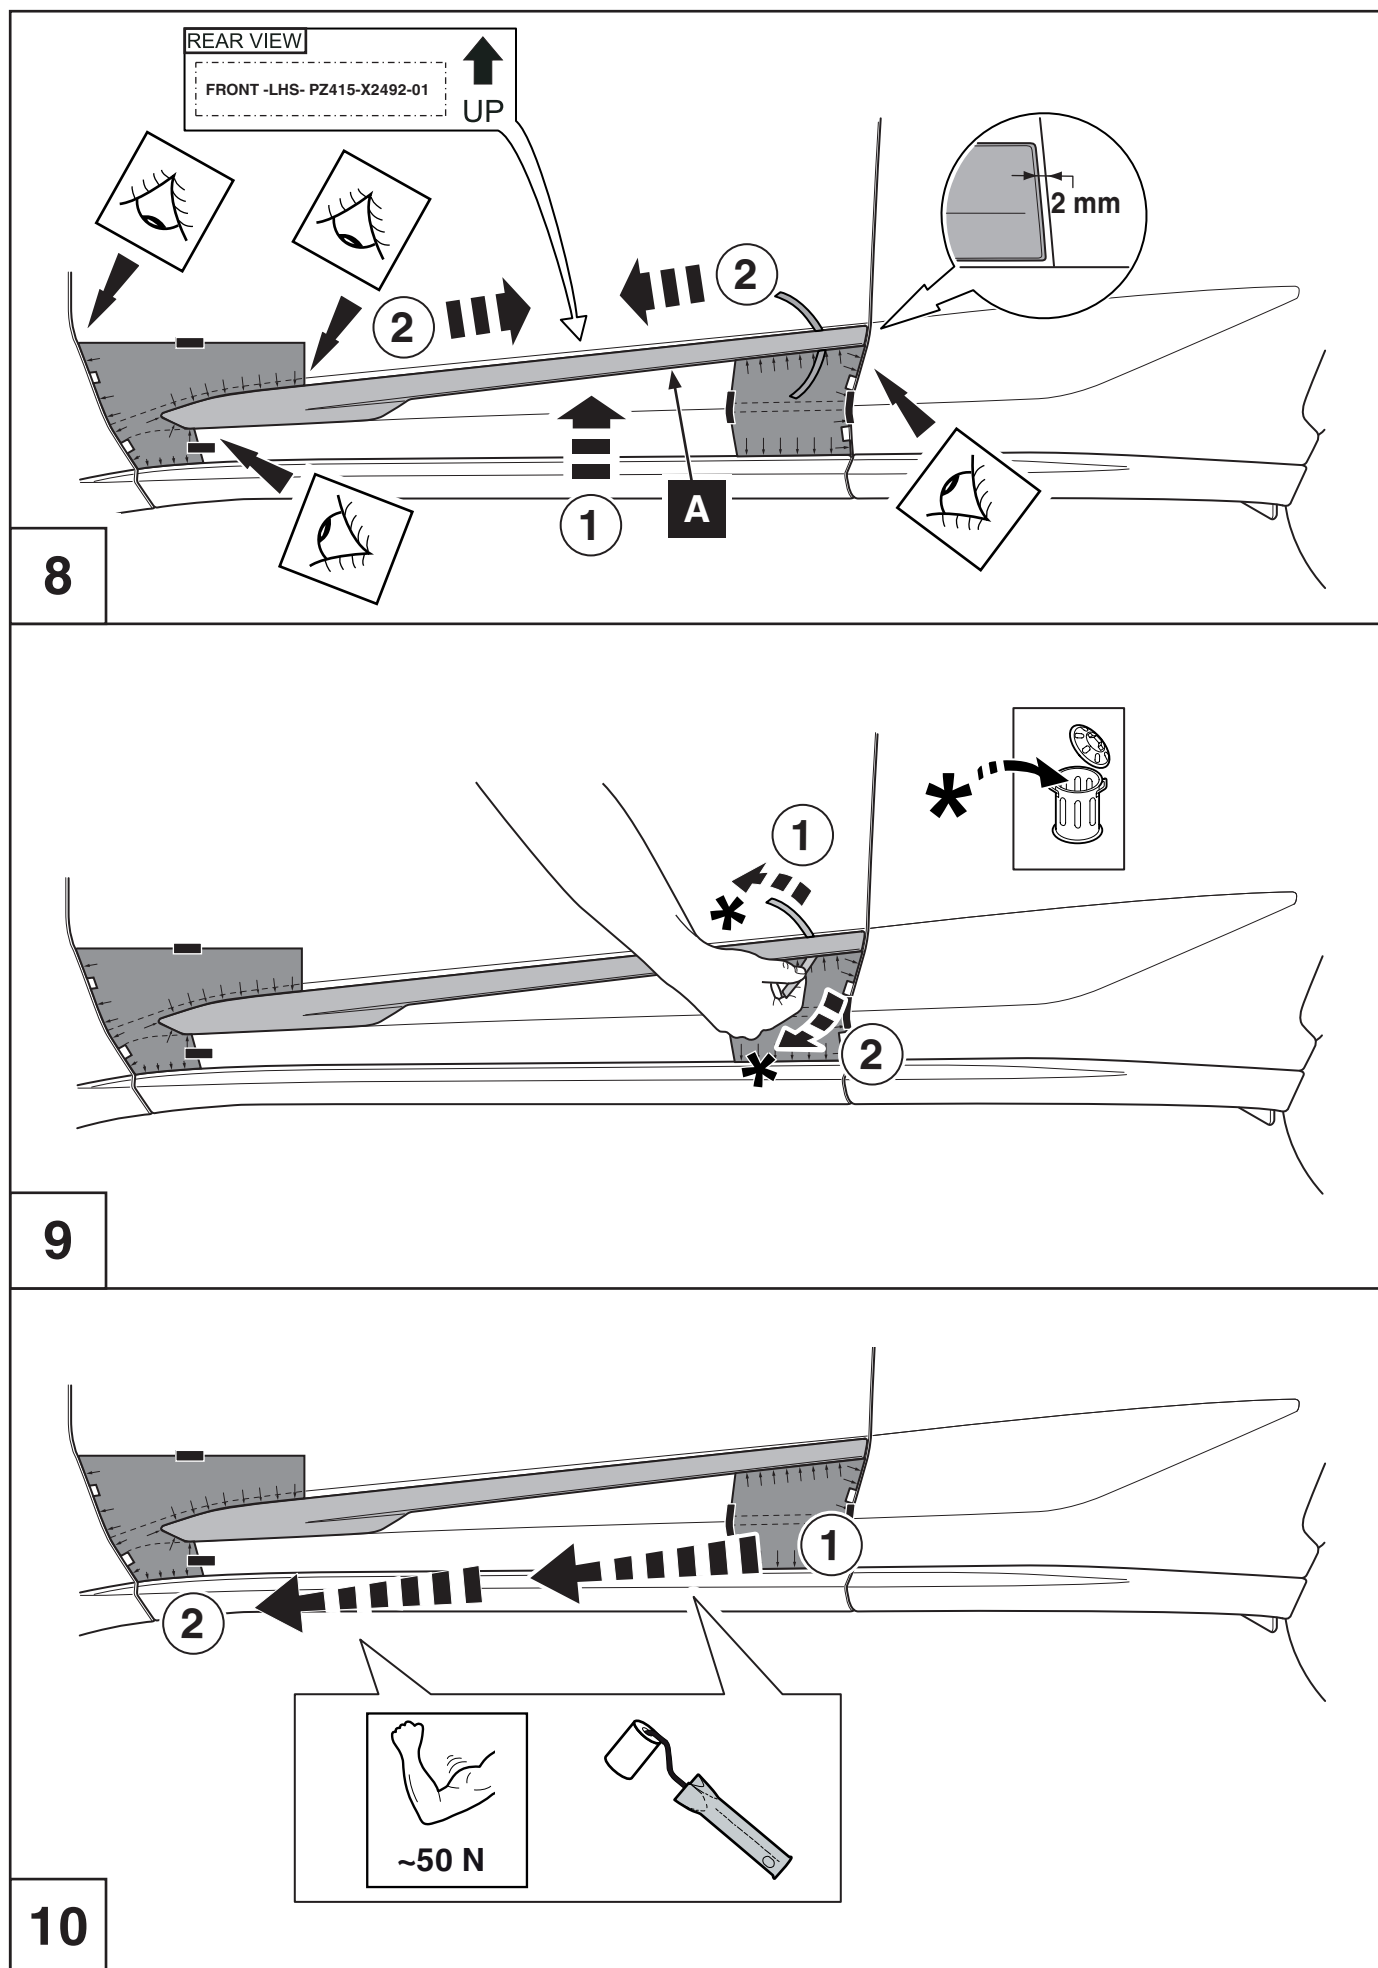


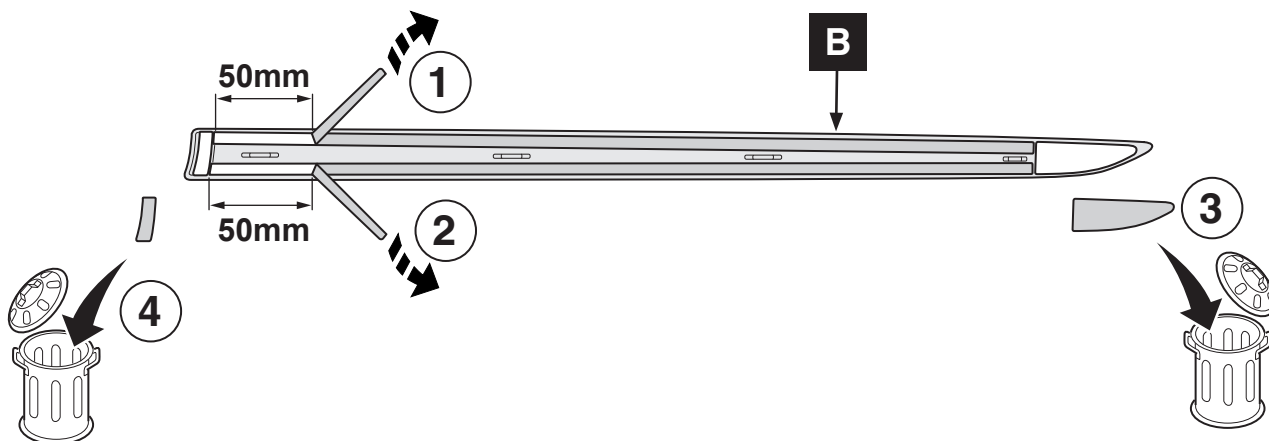


11

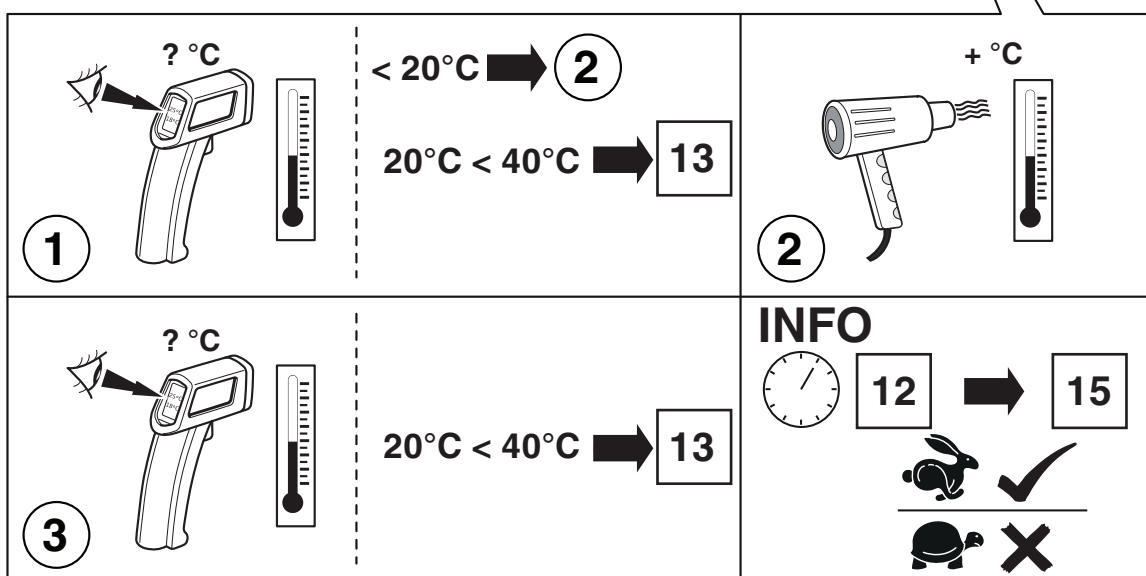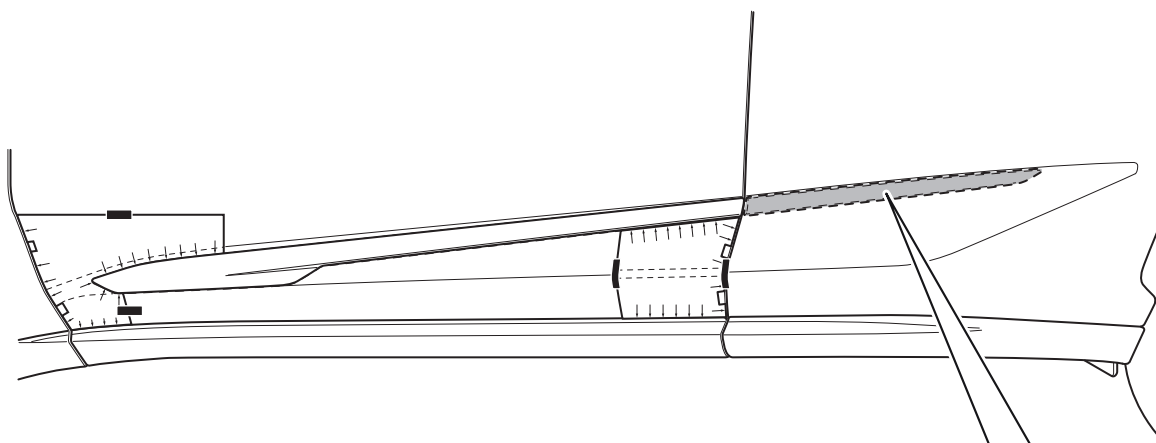




12


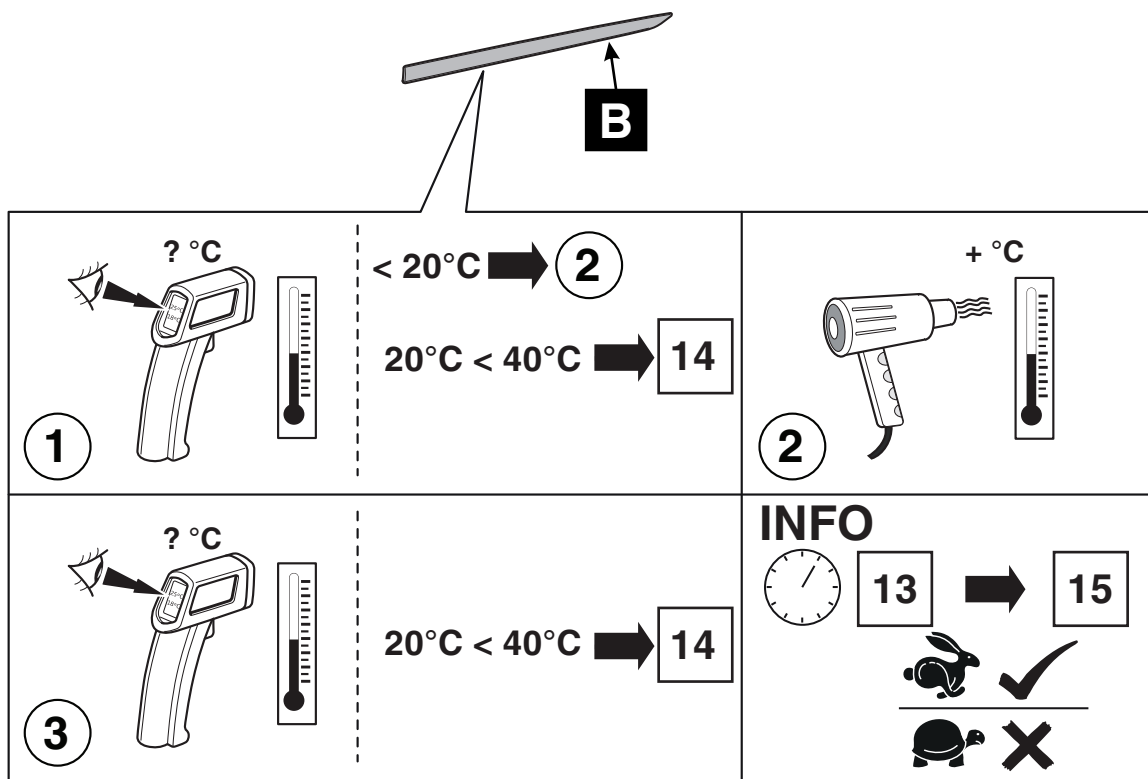


13




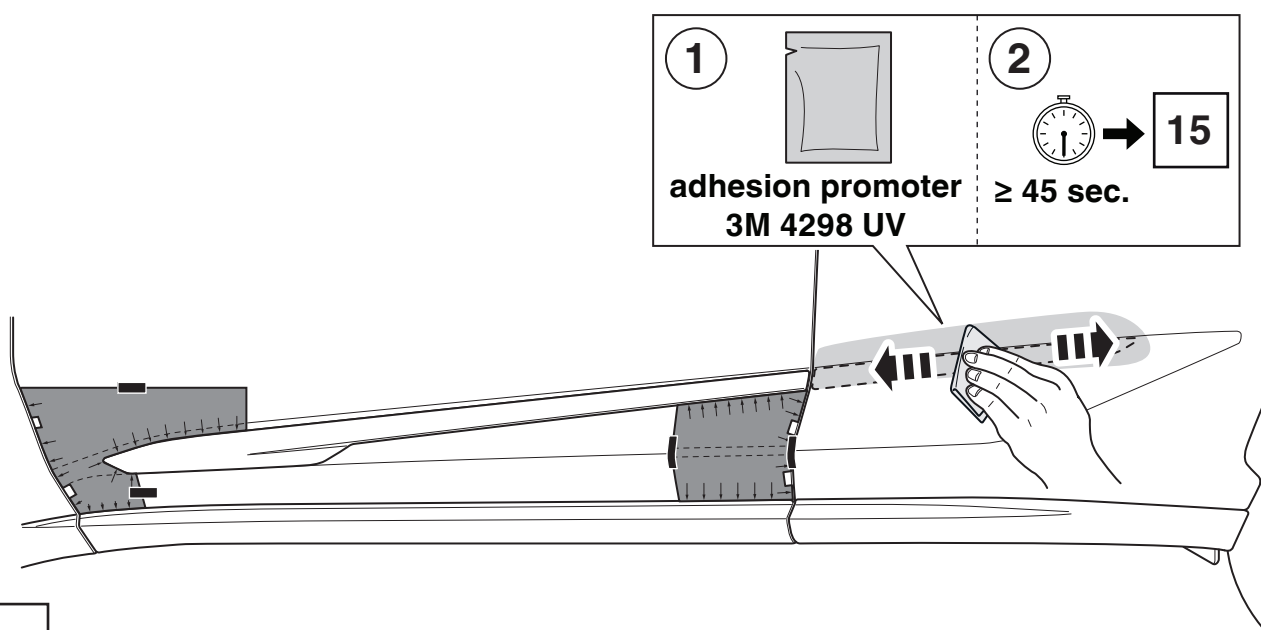


14

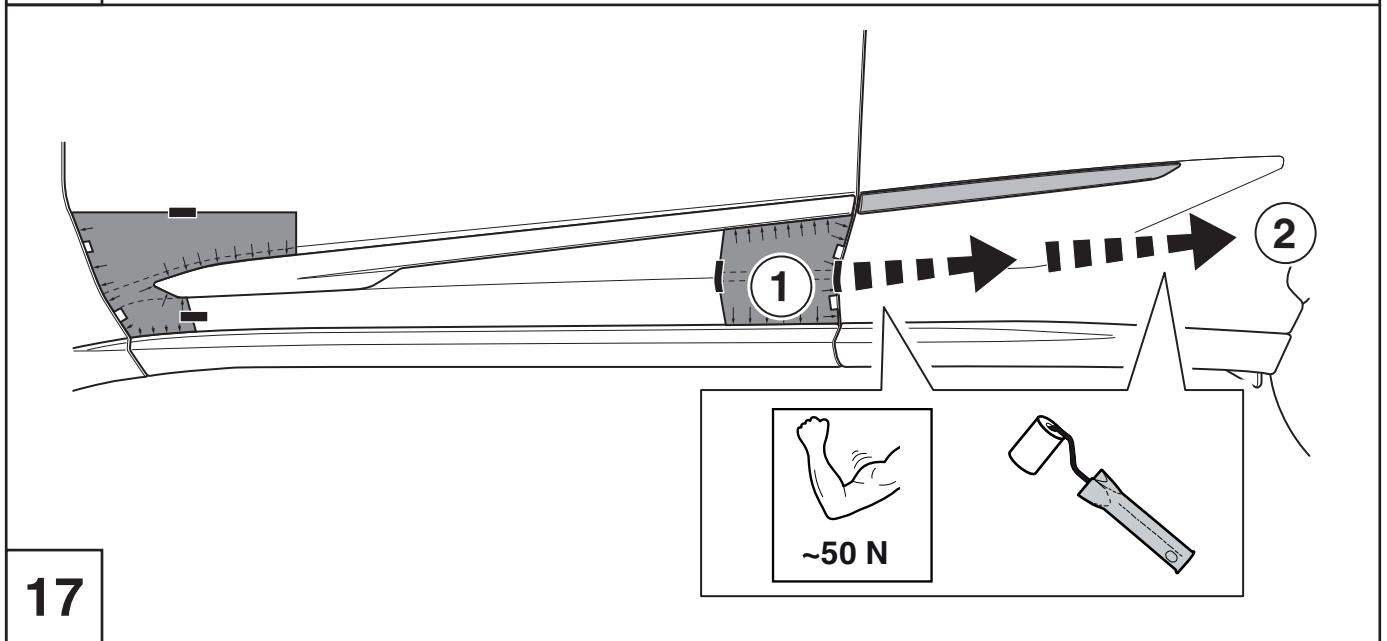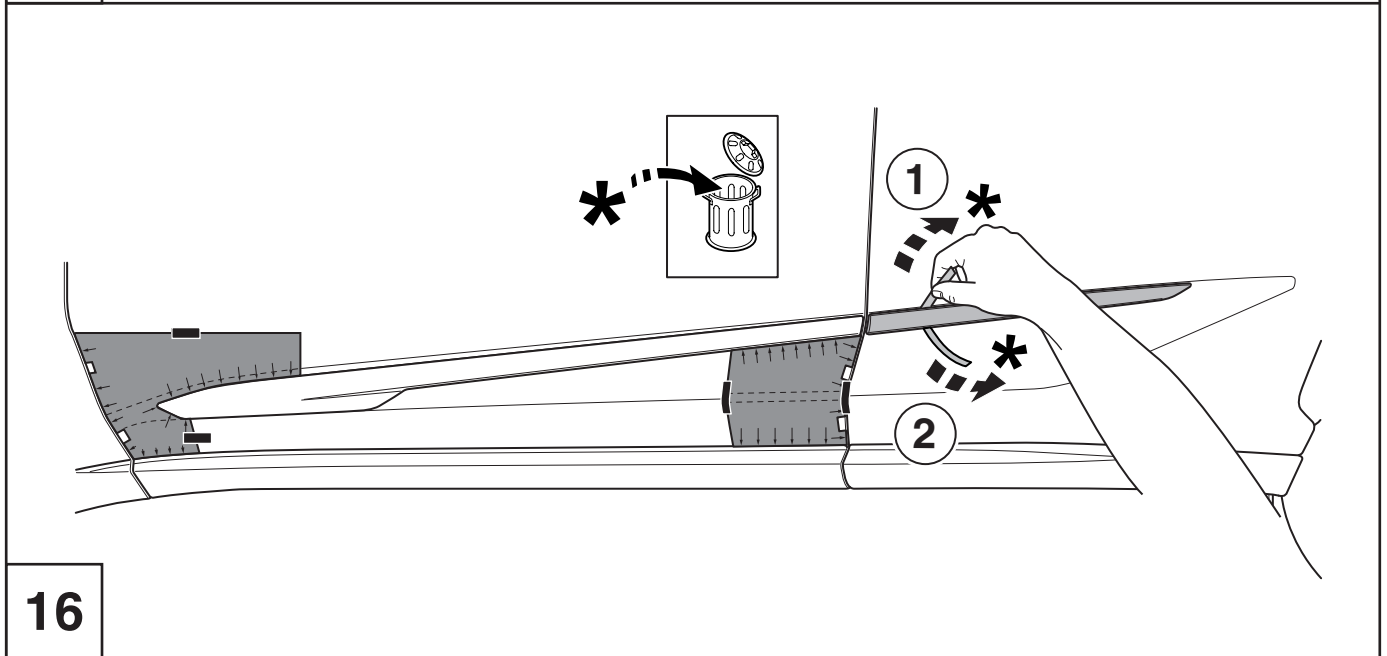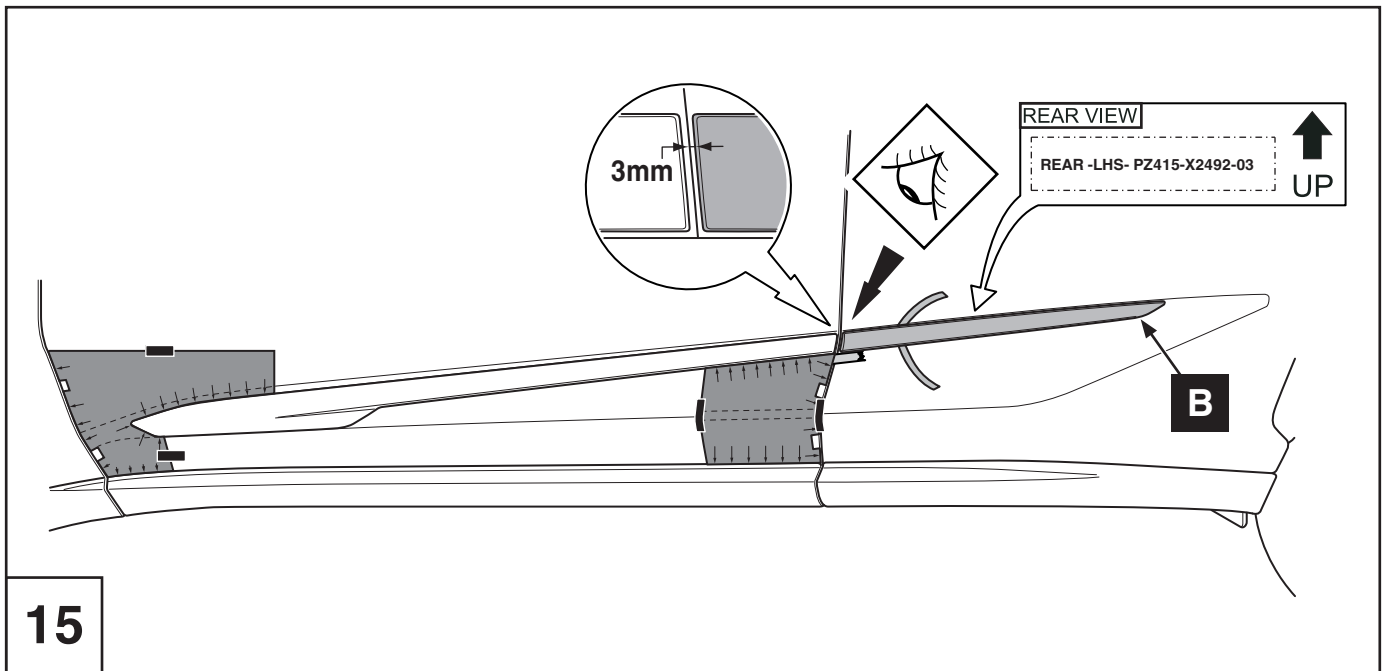


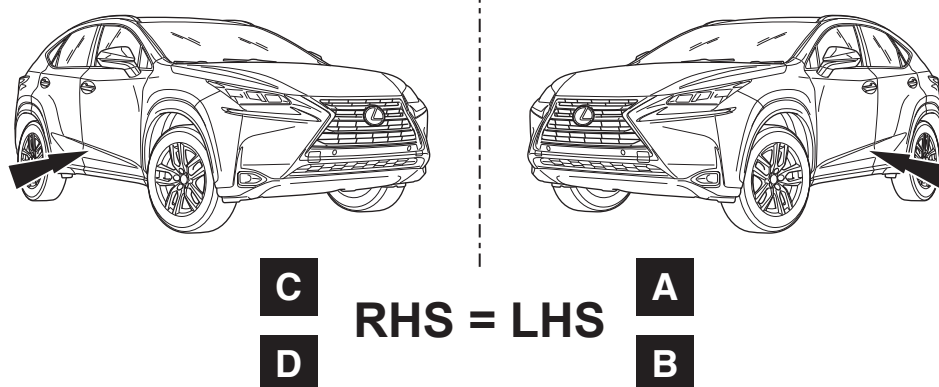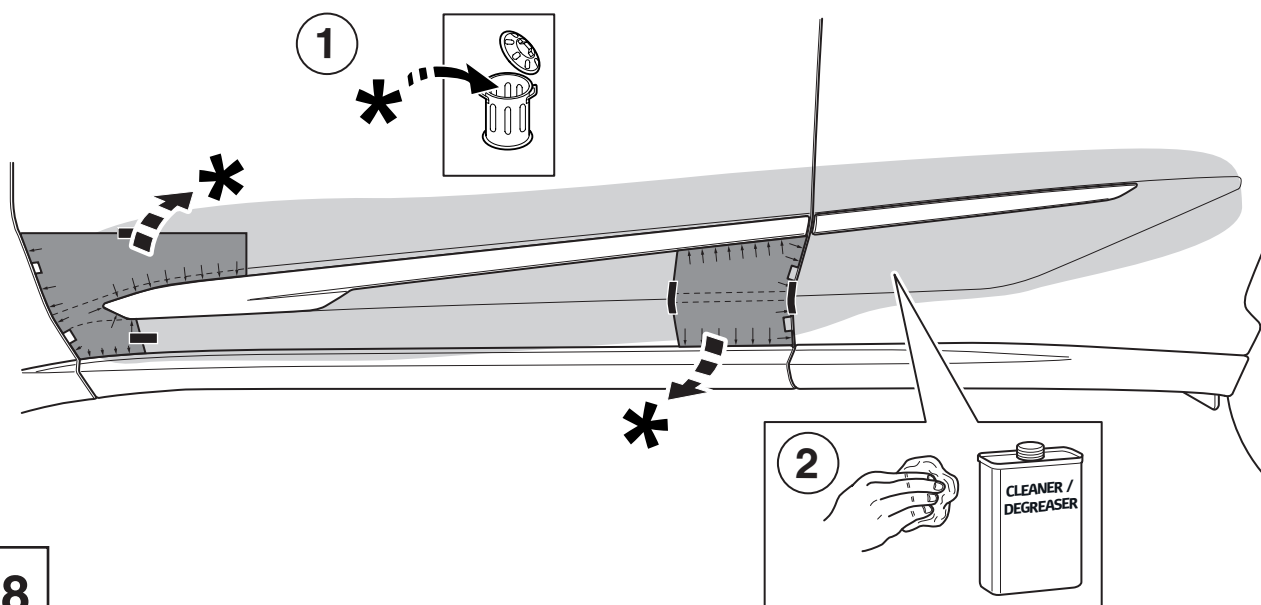

INFO

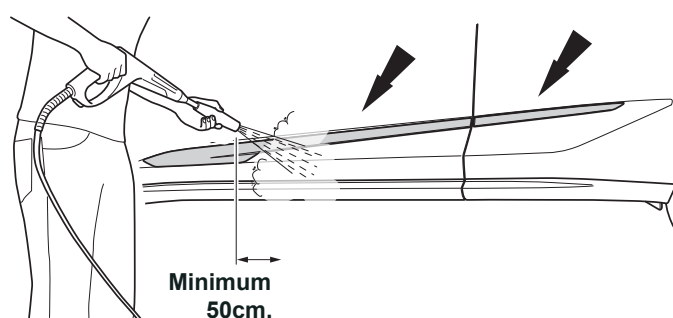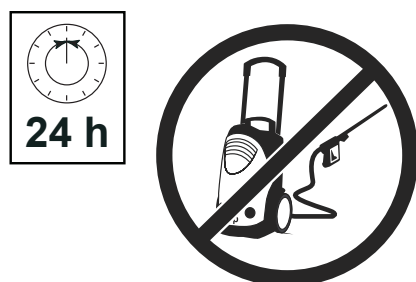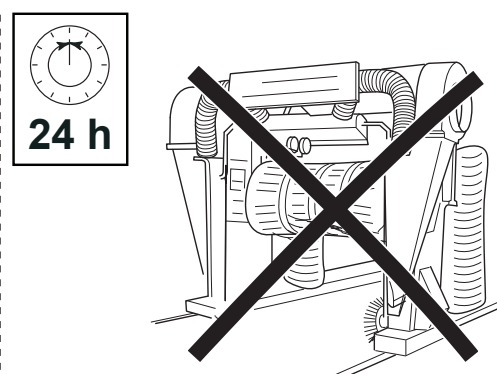
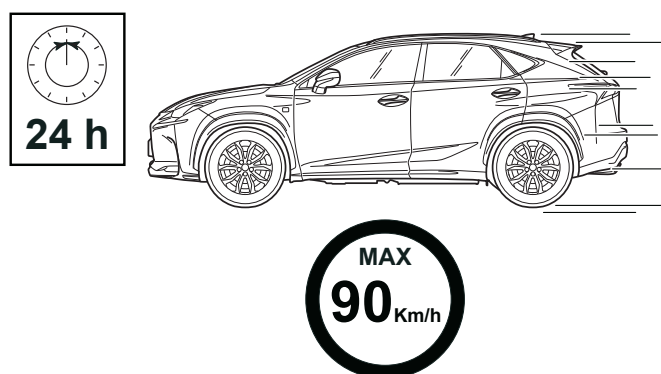




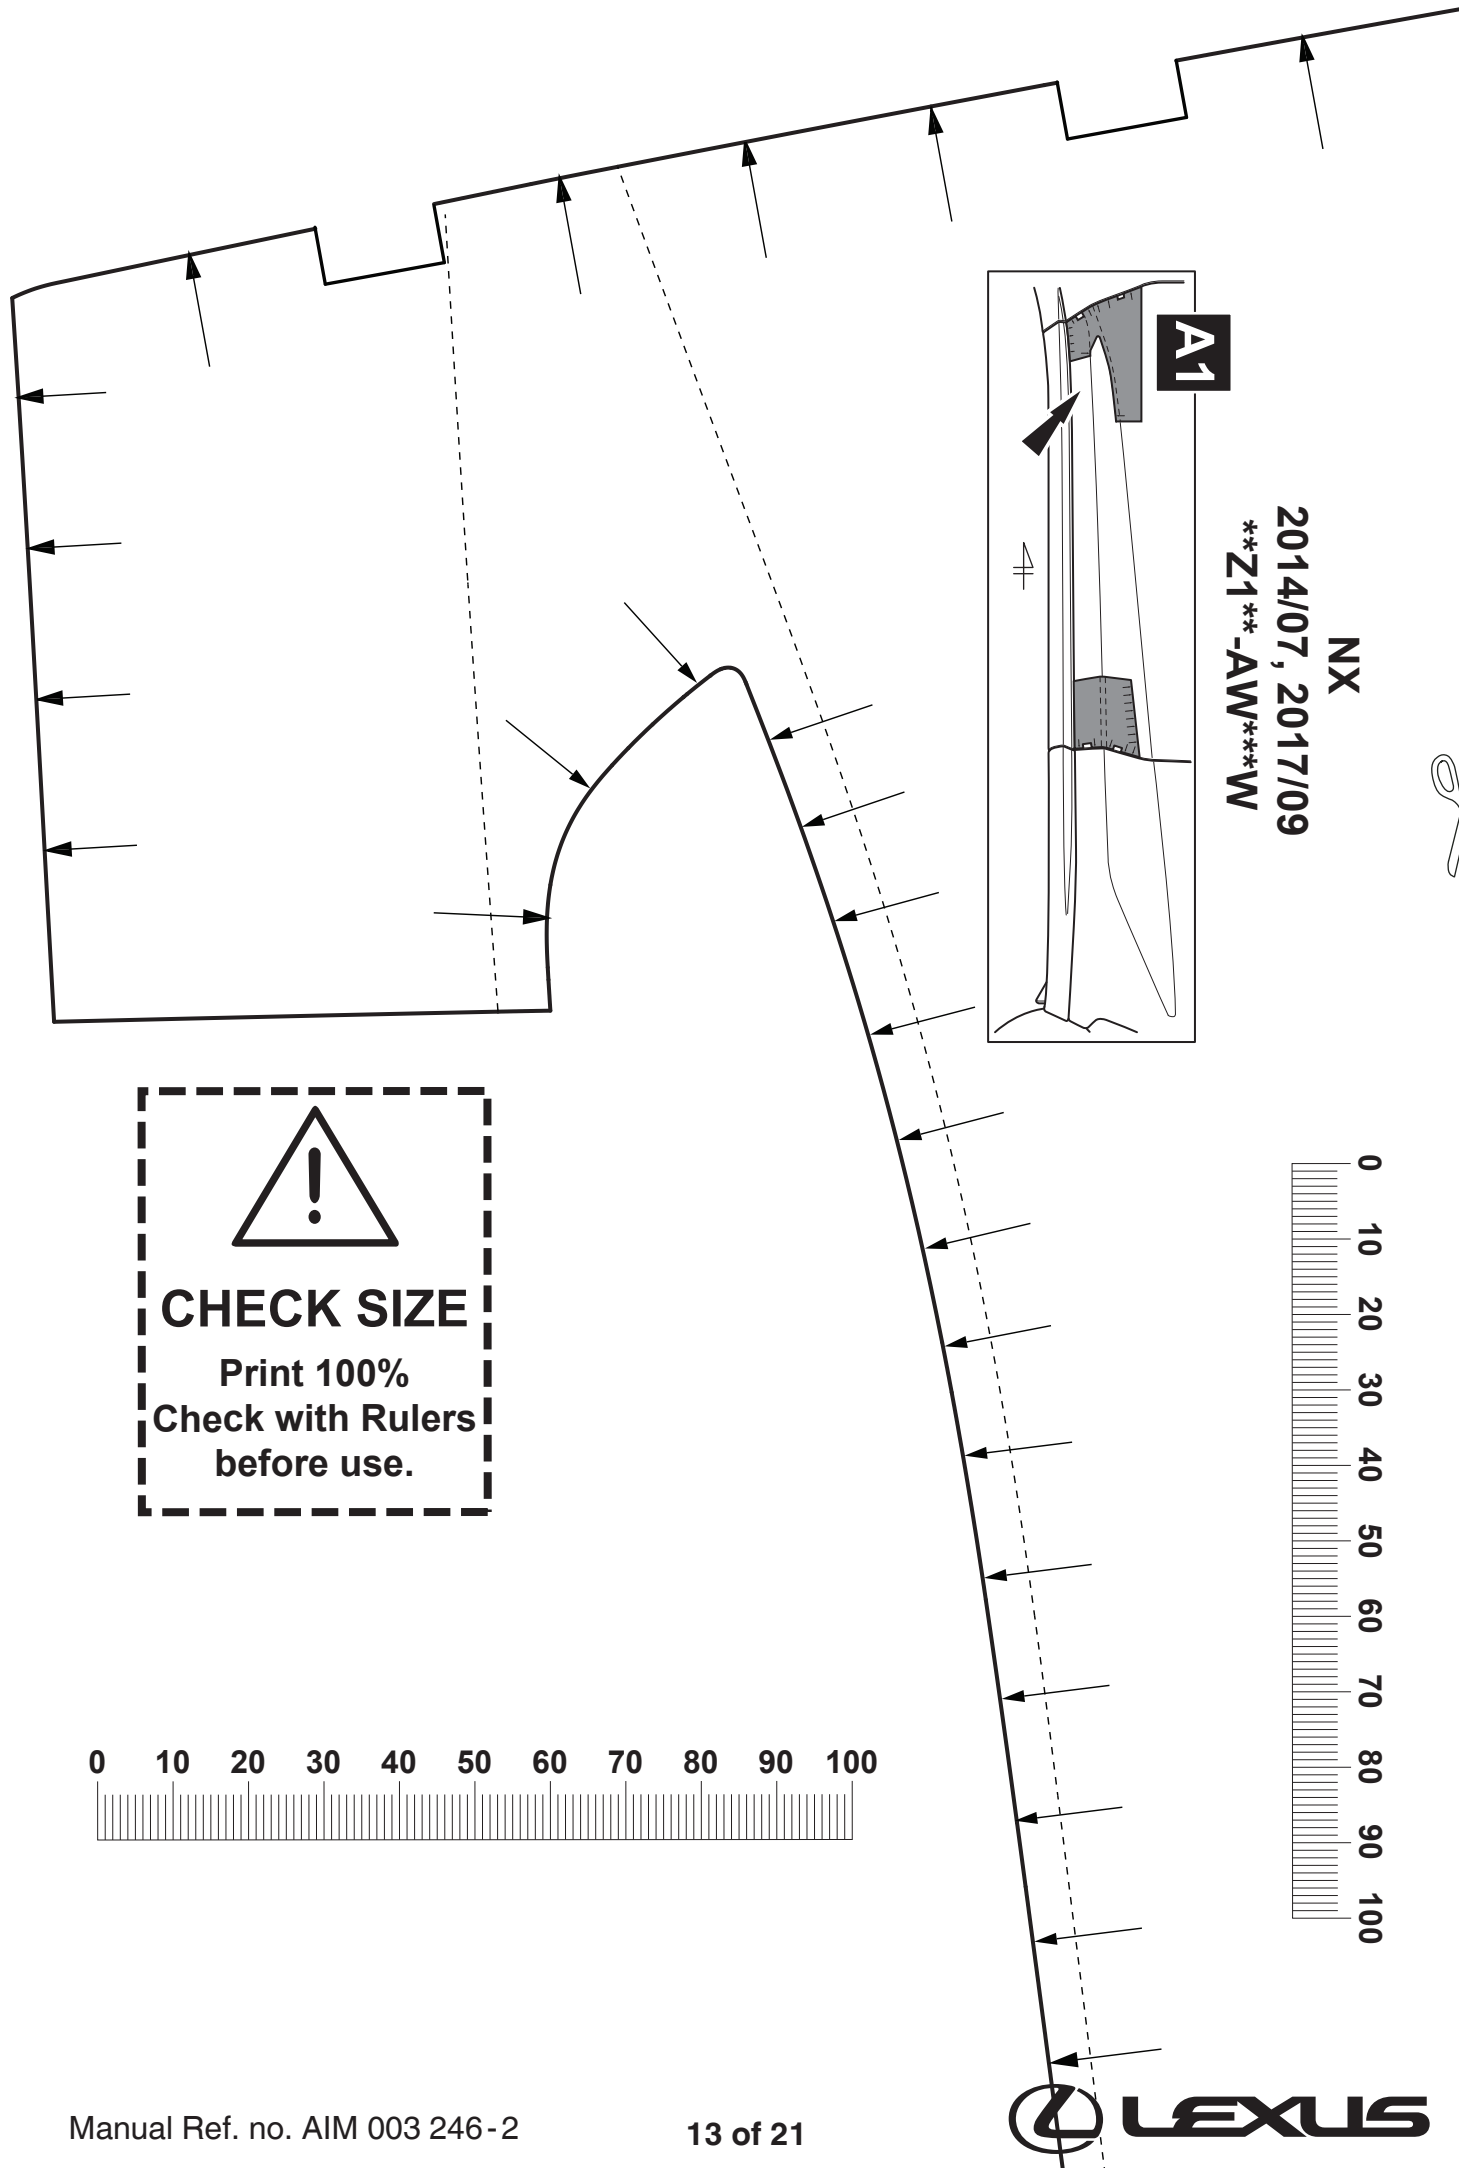

NX
2014/07, 2017/09
****Z1**-AW***W**


CHECK SIZE
Print 100%
Check with Rulers
before use.

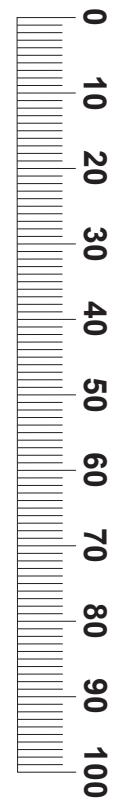





CHECK SIZE



Print 100%
Check with Rulers
before use.

NX

2014/07, 2017/09

****Z1**-AW***W**

A2

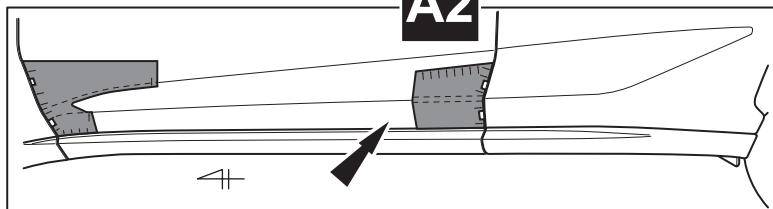

0 10 20 30 40 50 60 70 80 90 100




0 10 20 30 40 50 60 70 80 90 100







NX
2014/07, 2017/09
****Z1**-AW***W**

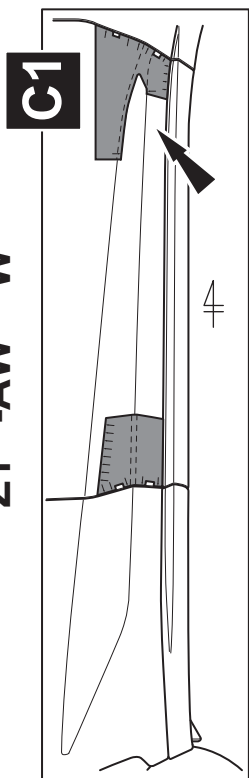






CHECK SIZE

Print 100%
Check with Rulers
before use.

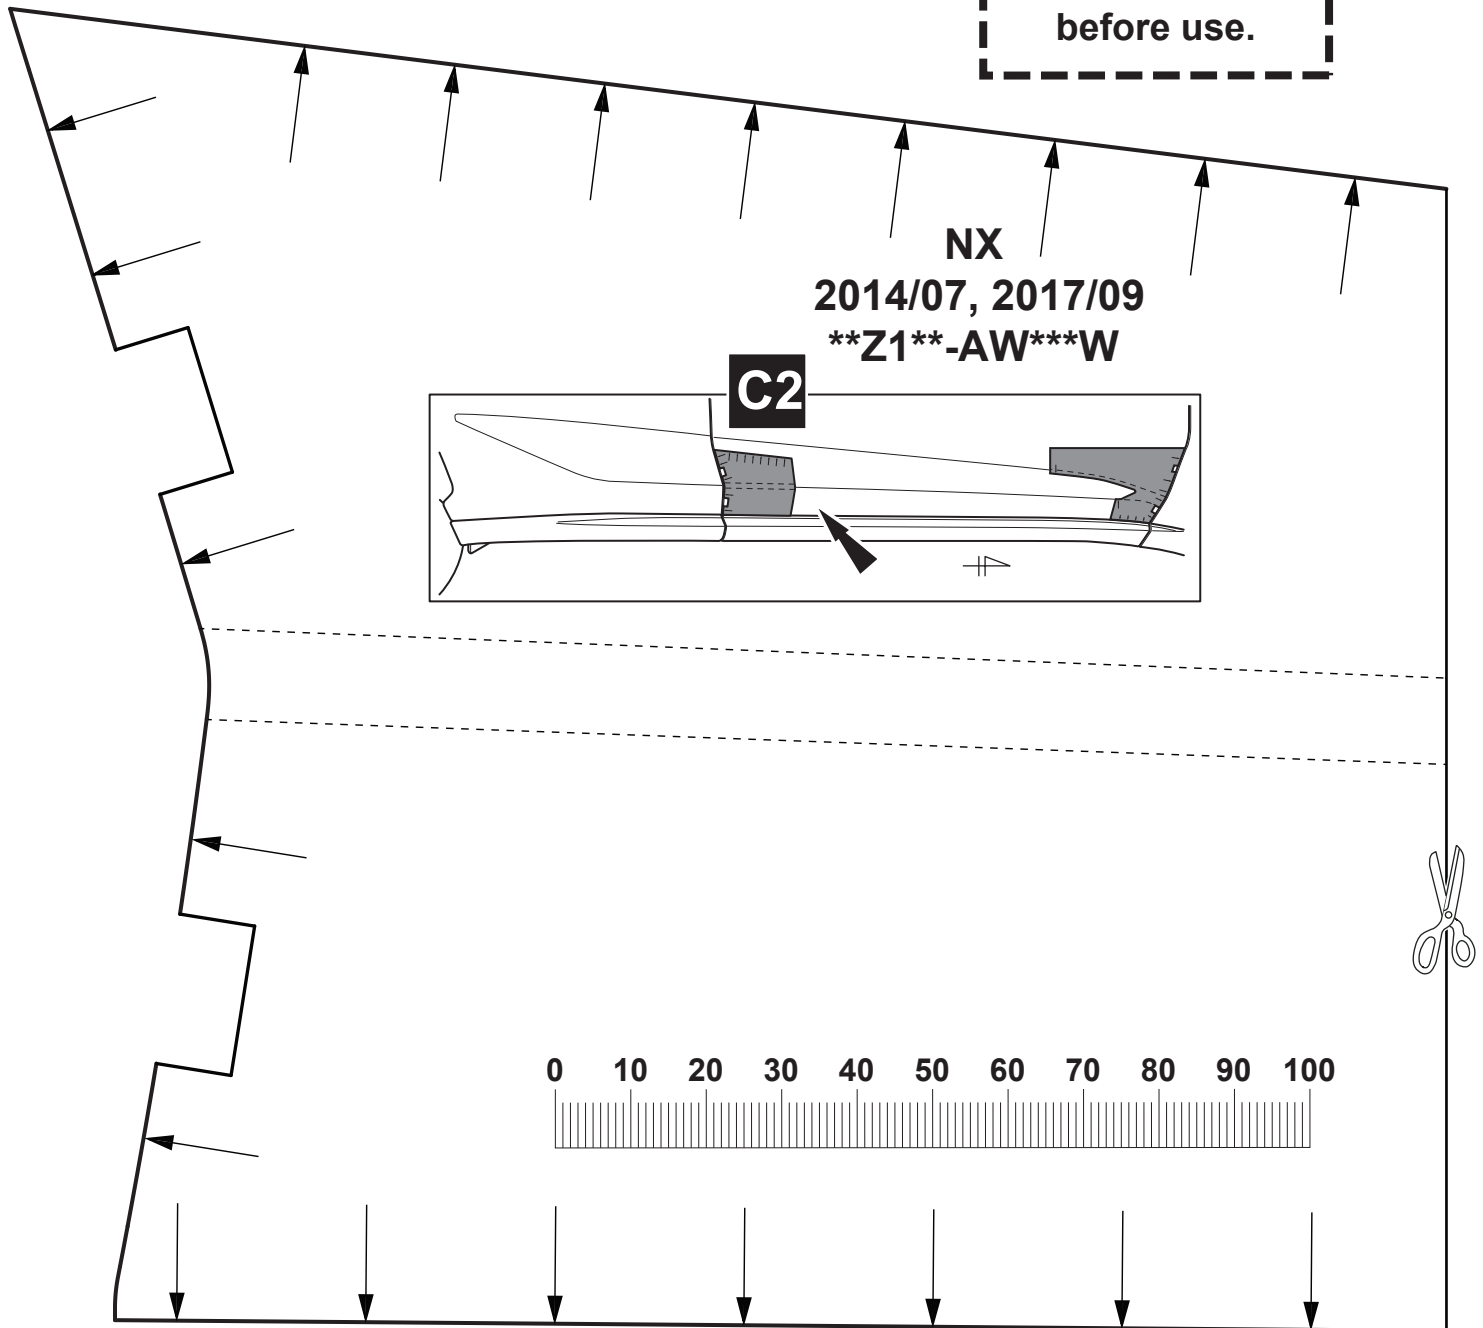

0 10 20 30 40 50 60 70 80 90 100

0 10 20 30 40 50 60 70 80 90 100



CHECK SHEET








Model / Year

NX 2014/07, 2017/09

Side sills

VIN n°

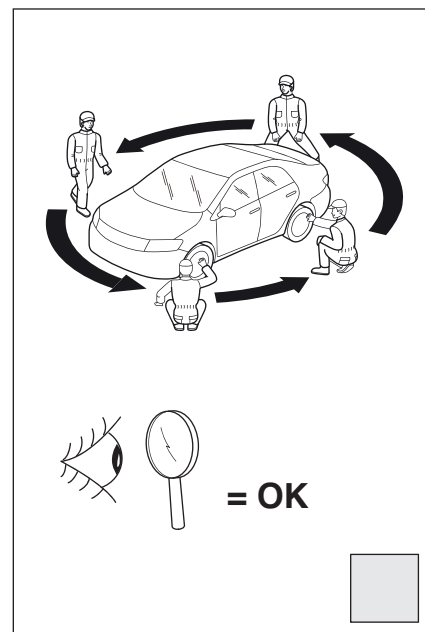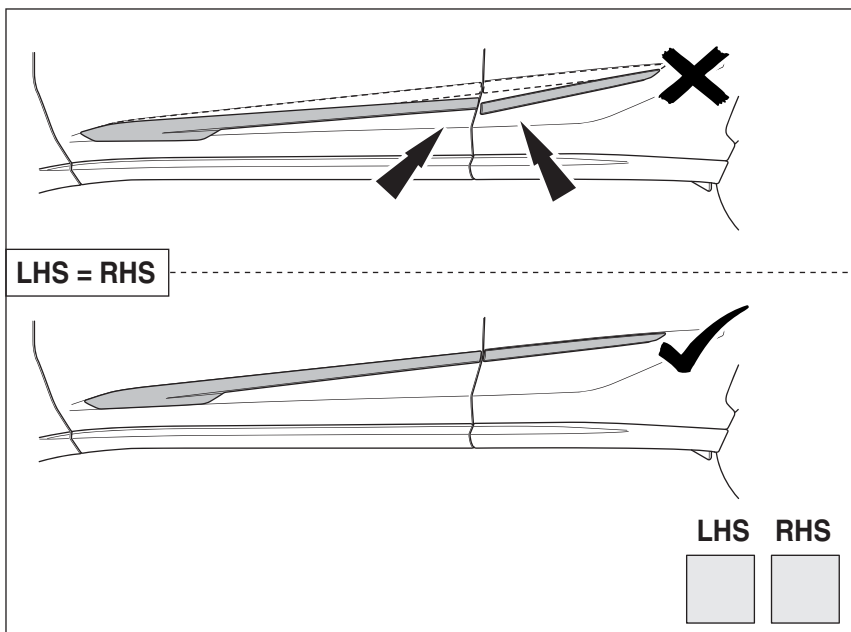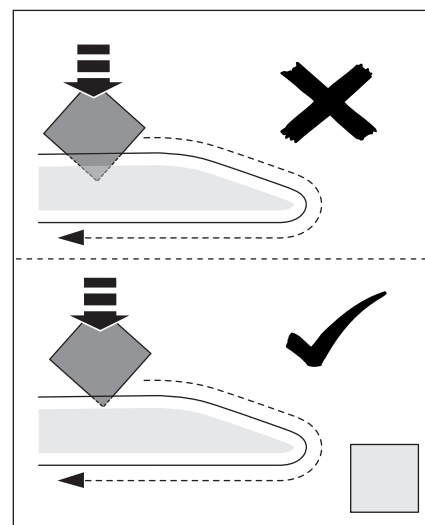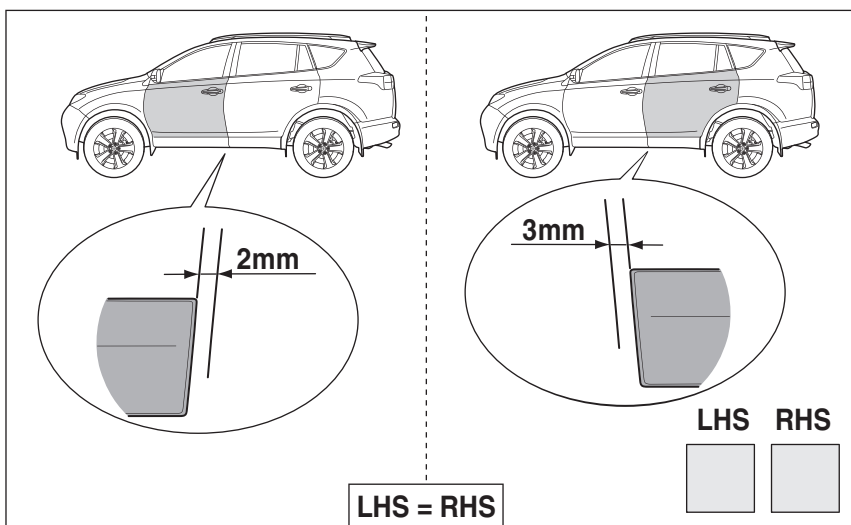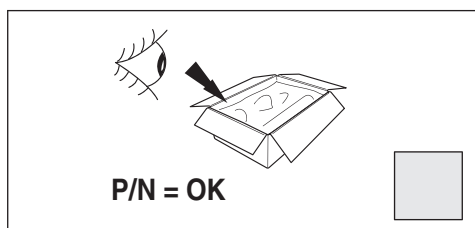

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp:

