

# Inlay Instrument Panel & Window Control Covers

## INSTALLATION INSTRUCTIONS







### CT 200h



Model year	2010/12, 2013/12, 2017/08
Vehicle code	ZWA10L - AH**BW
Part number	PZ49J - Z0174-00 (LHD) - Carbon look inlay kit PZ49J - Z0175-00 (RHD) - Carbon look inlay kit 08172 - 76800 (LHD) - Ash burl wood 08172 - 76830 (LHD) - Tropical bamboo 08172 - 76860 (LHD) - Black film 08172 - 76880 (LHD) - Wedge metal film 08172 - 76900 (LHD) - Shimamoku 08280 - 76805 (LHD) - Nagury Style Aluminium 08280 - 76815 (RHD) - Nagury Style Aluminium

# Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted
1	09.12.11	3		X		
2	05.01.12	3			X	
3	31.01.12	3			X	
3	31.01.12	4	2		X	
3	31.01.12	5-8	3-12	X		
4	16.10.13	3		X		
4	16.10.13	4	2	X		
4	16.10.13	5	3	X		
4	16.10.13	6	9	X		
4	16.10.13	7	10	X		
4	16.10.13	8	14	X		
4	16.10.13	10			X	
5	15.09.17	1-3, 5, 7-11, 13	1, 2, 4, 6, 9-11, 13, 16	X		
5	15.09.17	4, 6, 11	3, 17-19		X	
6	16.10.18	1, 3, 6, 8, 9, 10, 11, 13	2, 4, 8, 11, 15, 18	X		


**PZ49J-Z017\*-00**
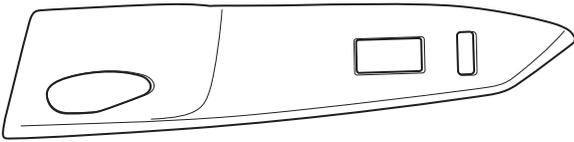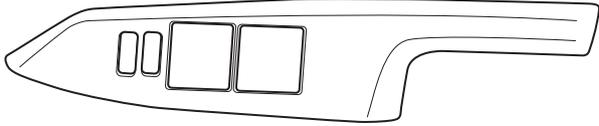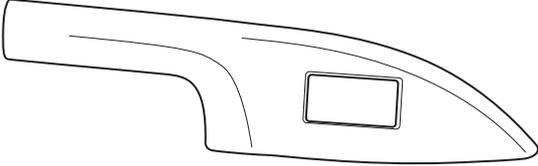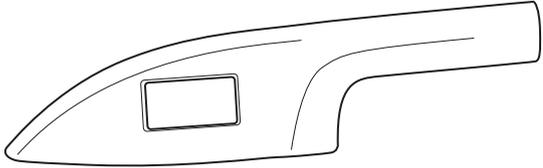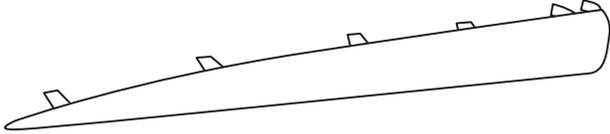
<p><b>A</b> LHD Front RHS - PZ49J-Z0170-01 RHD Front RHS - PZ49J-Z0171-01</p>  <p>1x</p>	<p><b>B</b> LHD Front LHS - PZ49J-Z0170-02 RHD Front LHS - PZ49J-Z0171-02</p>  <p>1x</p>
<p><b>C</b> Rear LHS - PZ49J-Z0170-03</p>  <p>1x</p>	<p><b>D</b> Rear RHS - PZ49J-Z0170-04</p>  <p>1x</p>
<p><b>E</b></p>  <p>1x</p>	<p><b>F</b></p>  <p>adhesion promoter 3M 4298 UV</p> <p>1x</p>
<p><b>G</b></p> <p>LHD - PZ49J-Z0172-00</p>  <hr/> <p>RHD - PZ49J-Z0171-00</p>  <p>1x</p>	
<p><b>H</b></p> <p>08172-76**0 08280-768*5</p>  <p>1x</p>	

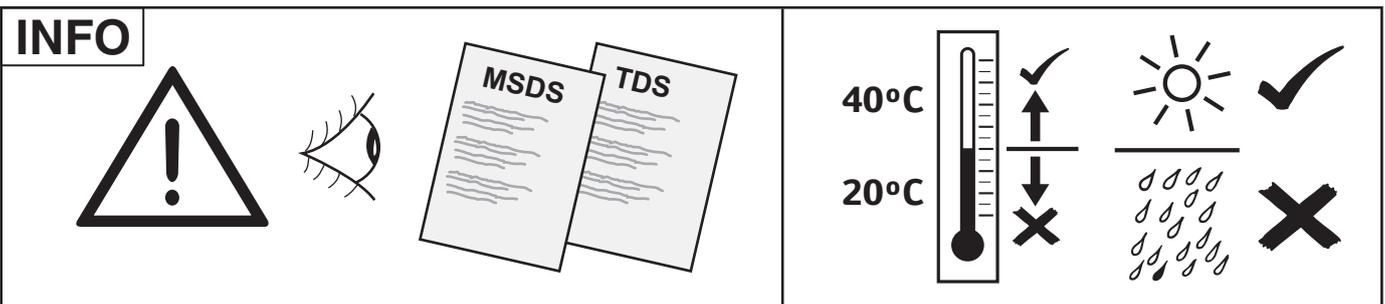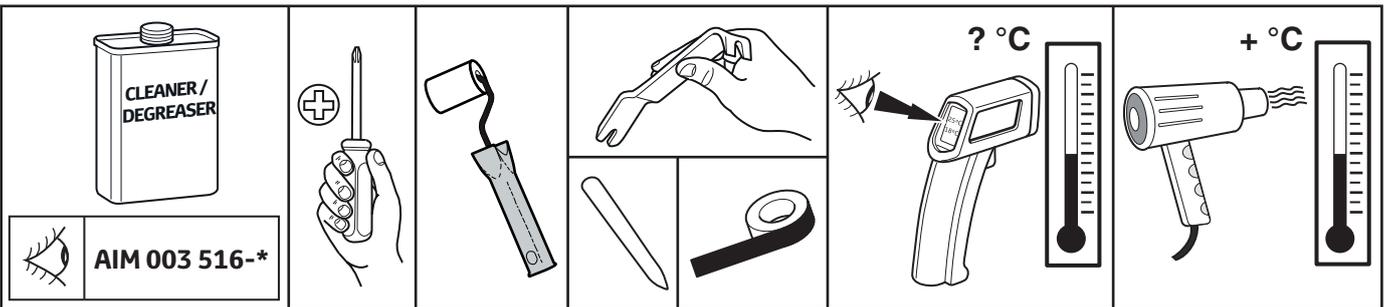


**INFO**



**A**

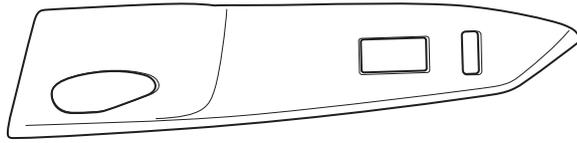


**B**

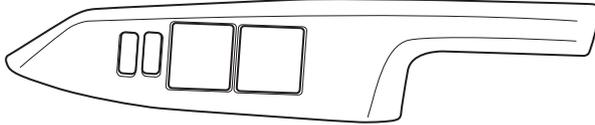


**C**

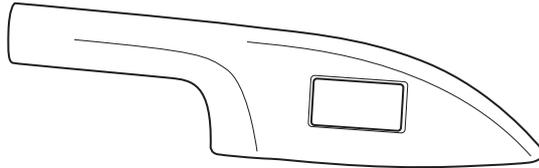



**D**

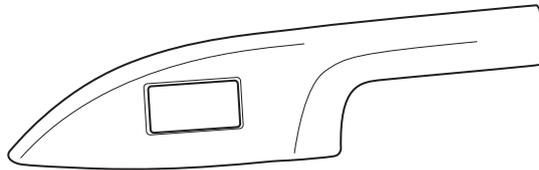



**G**









**H**







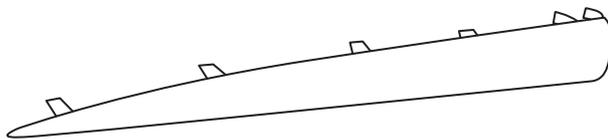




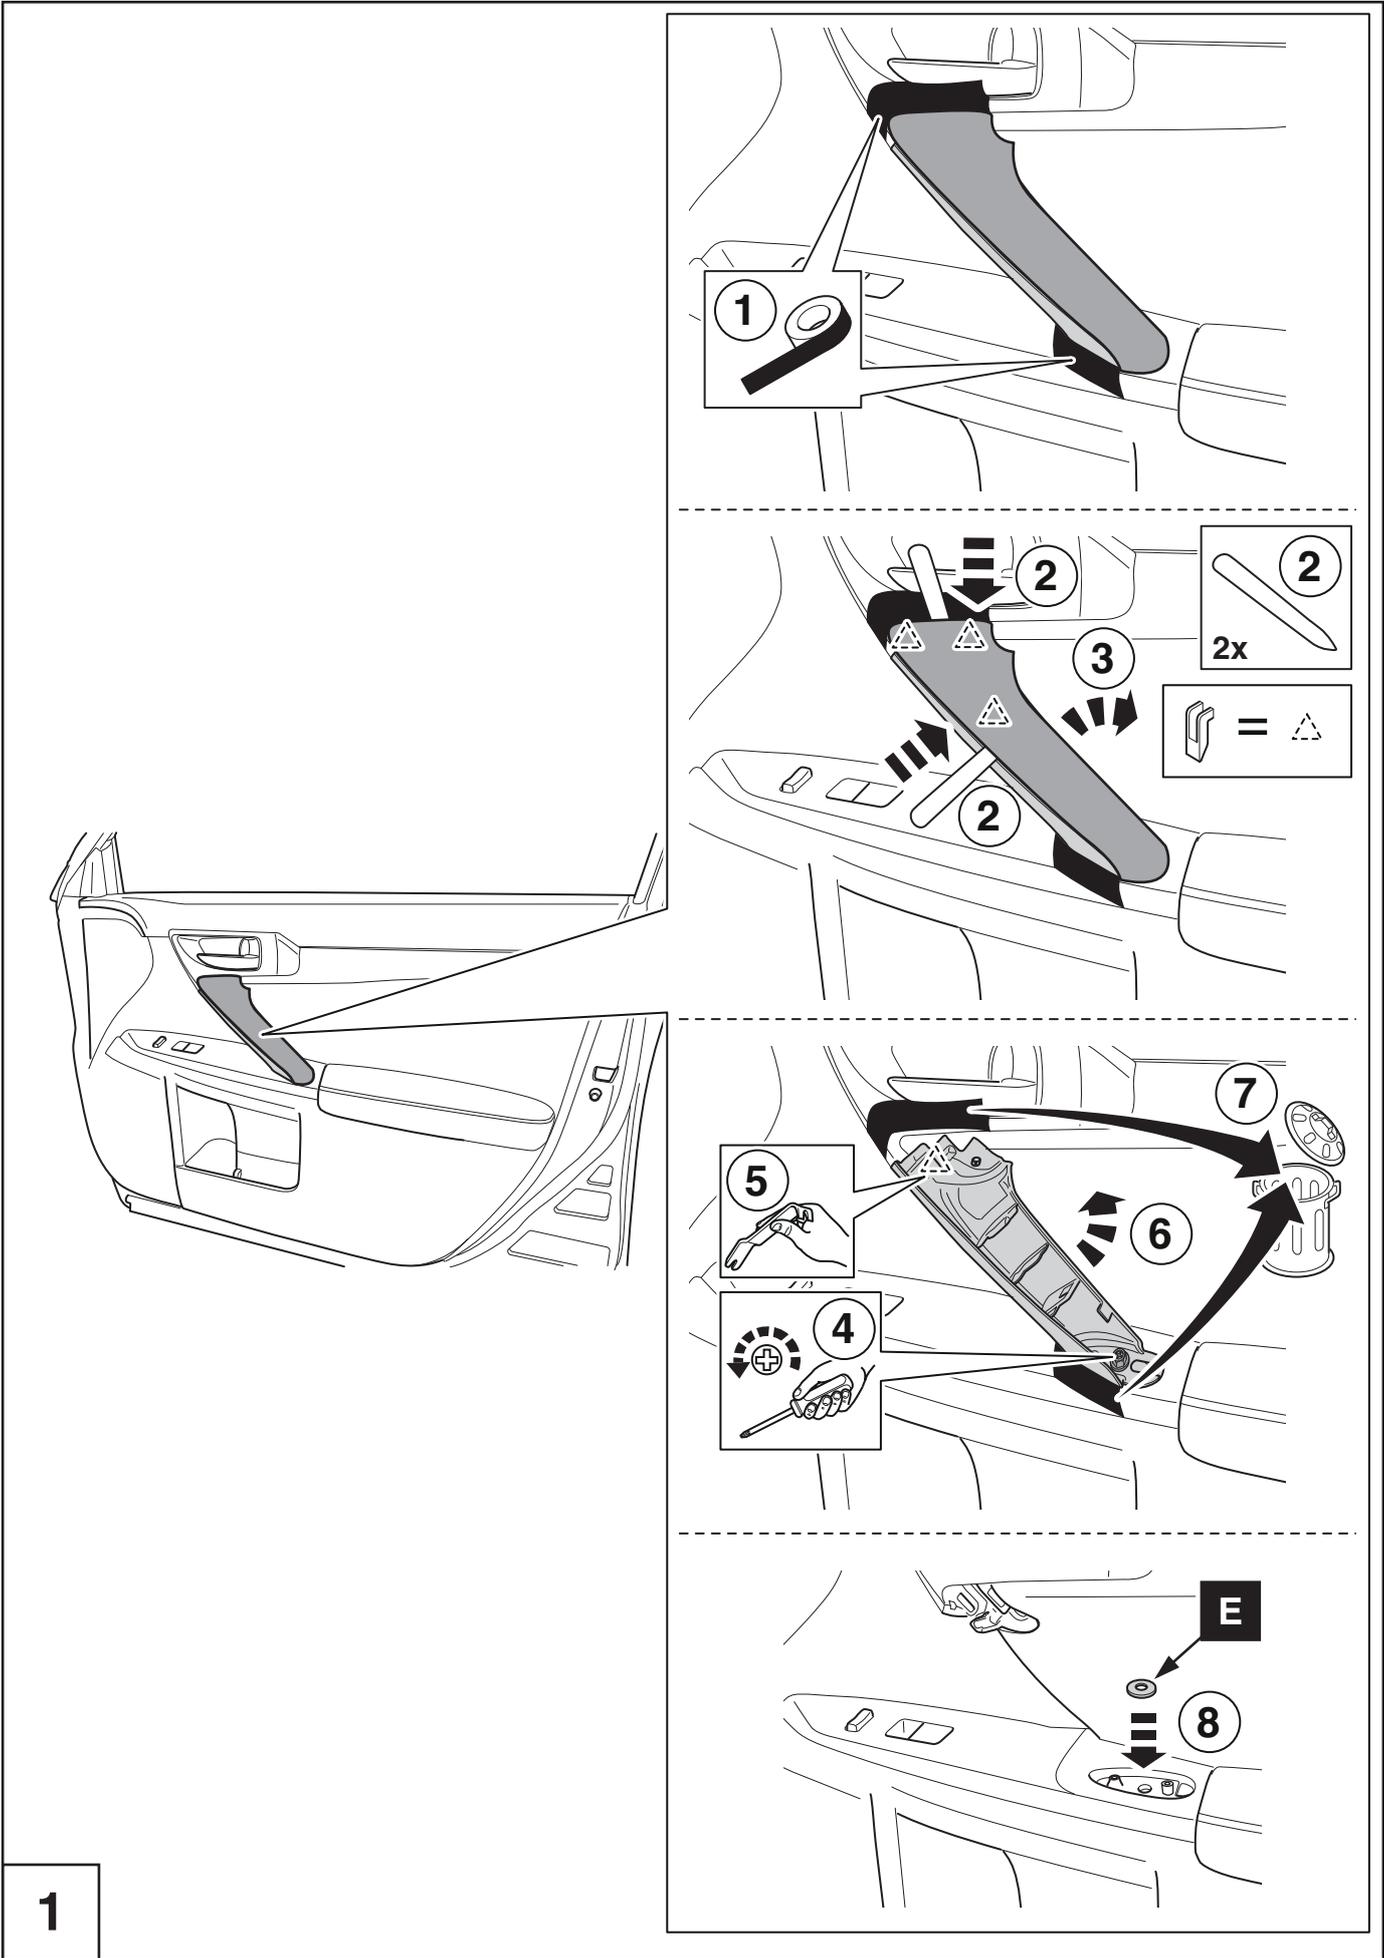





<p><b>1</b></p>  <p>CLEANER / DEGREASER</p>  <p>AIM 003 516-*</p>		<p>PZ415-00000-00</p> <p><b>2</b></p>  <p>3M adhesion promoter 4298 UV</p>	 <p>&gt;45 secs. &lt; 1 hour</p>
---	--	--	---

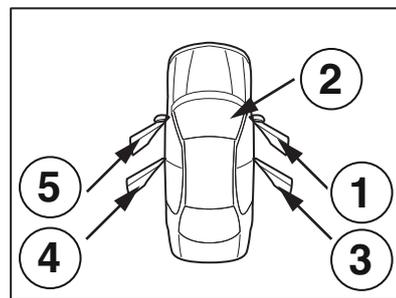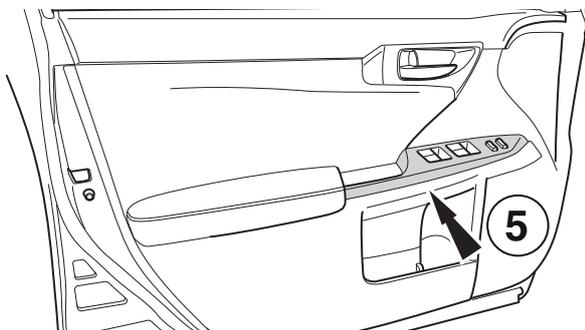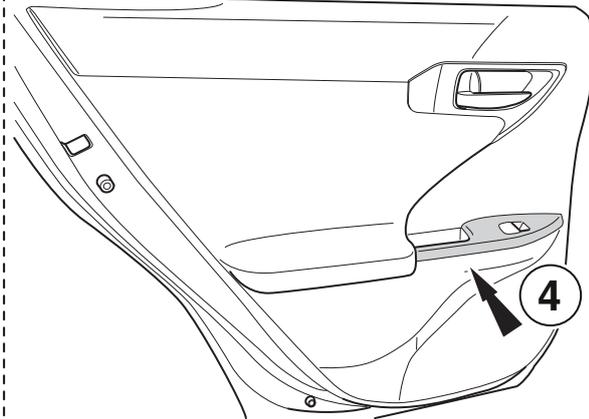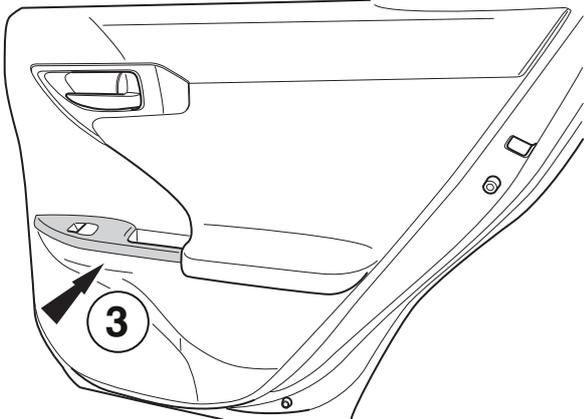
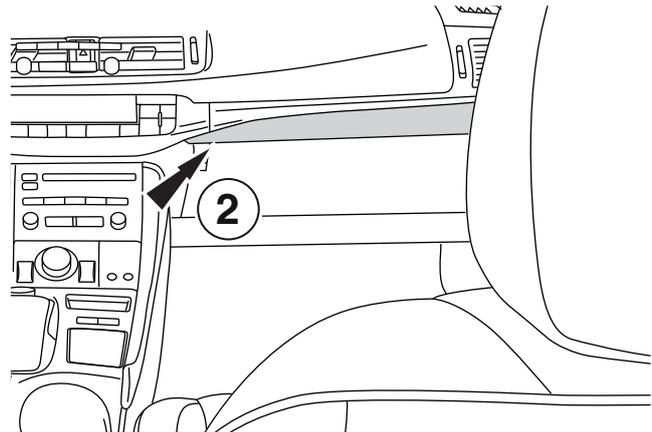
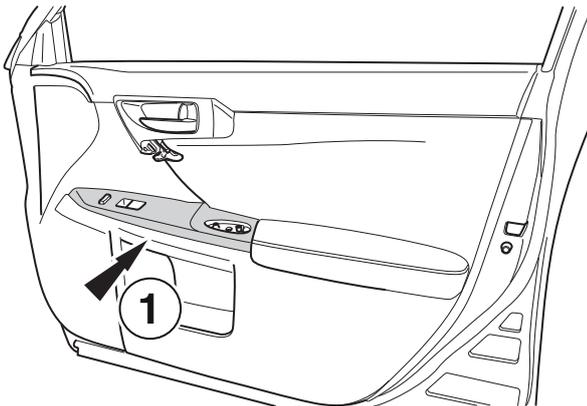



**2**

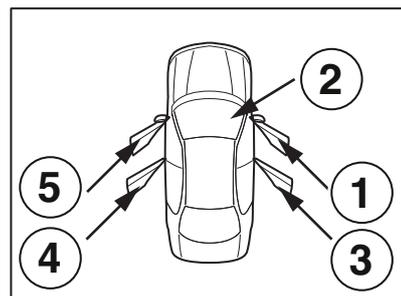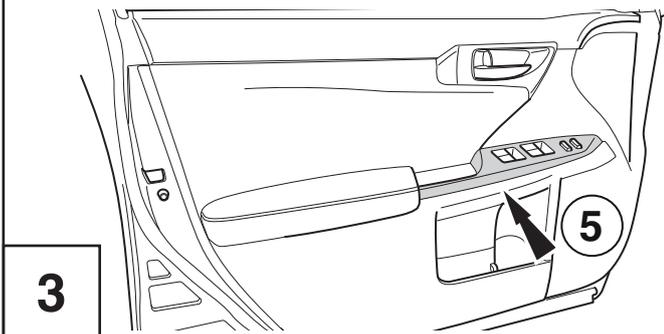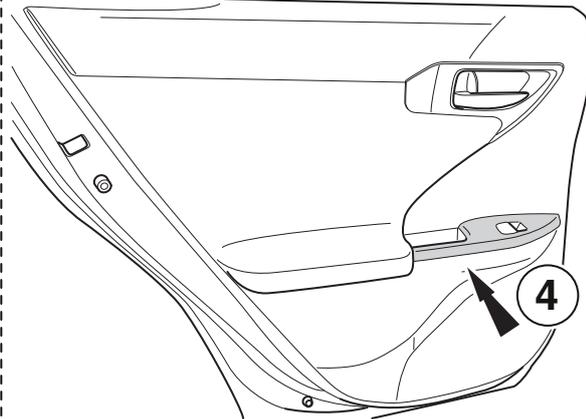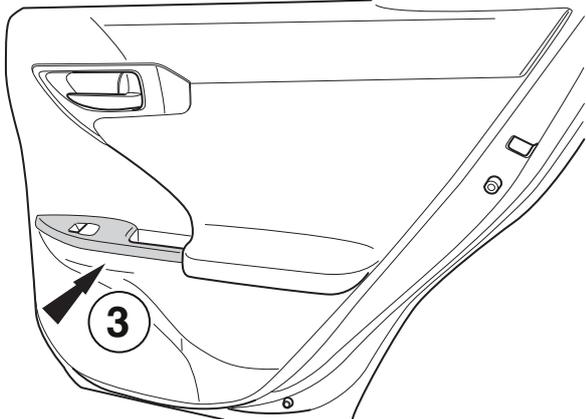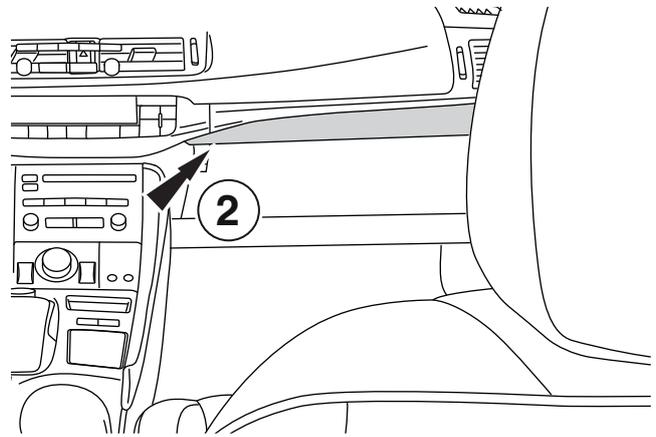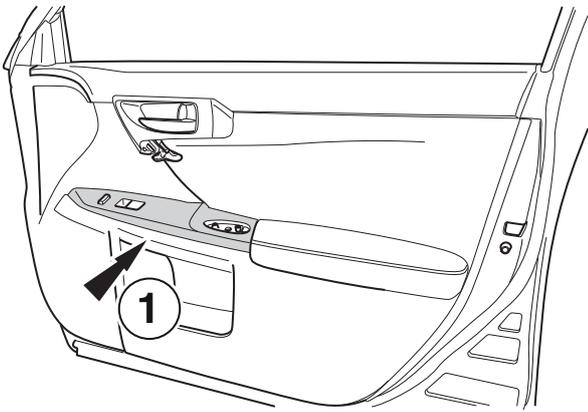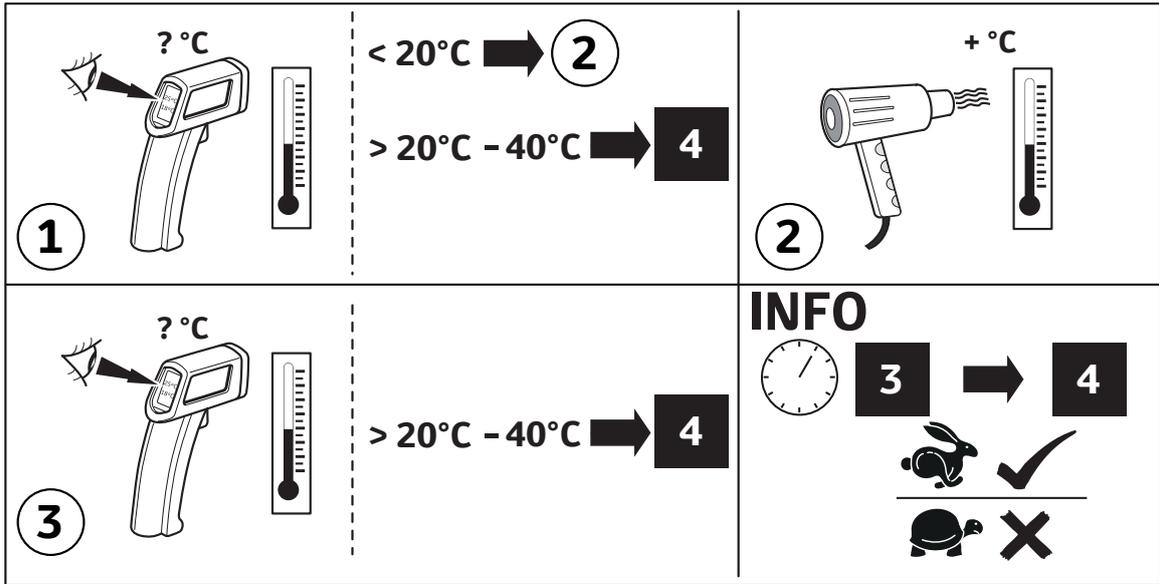

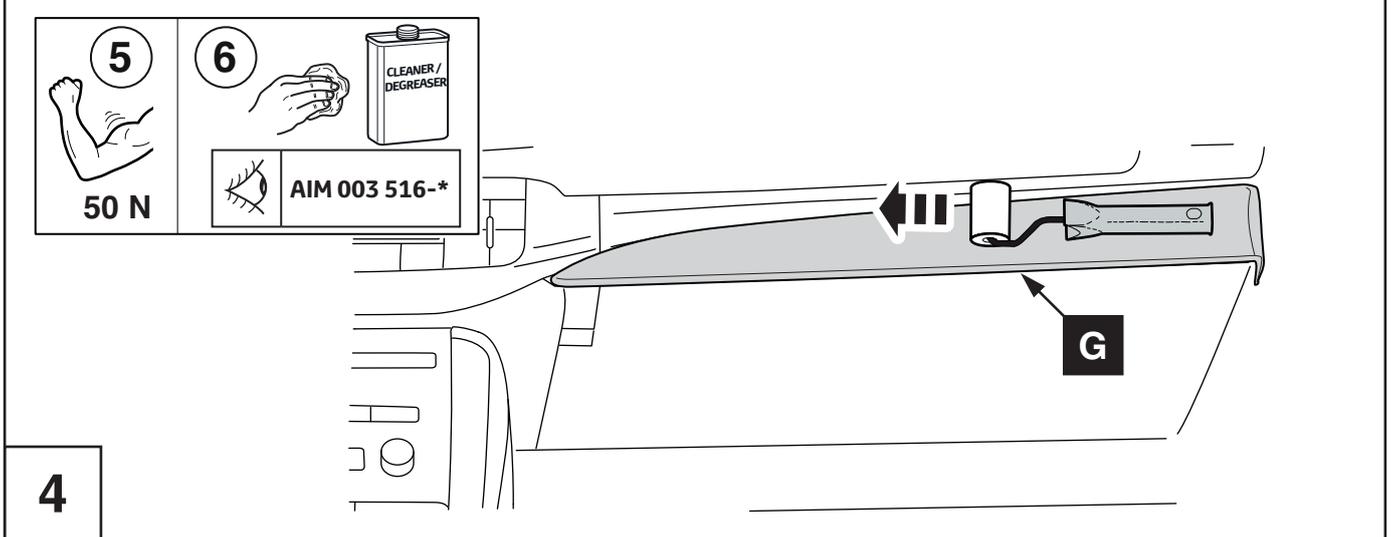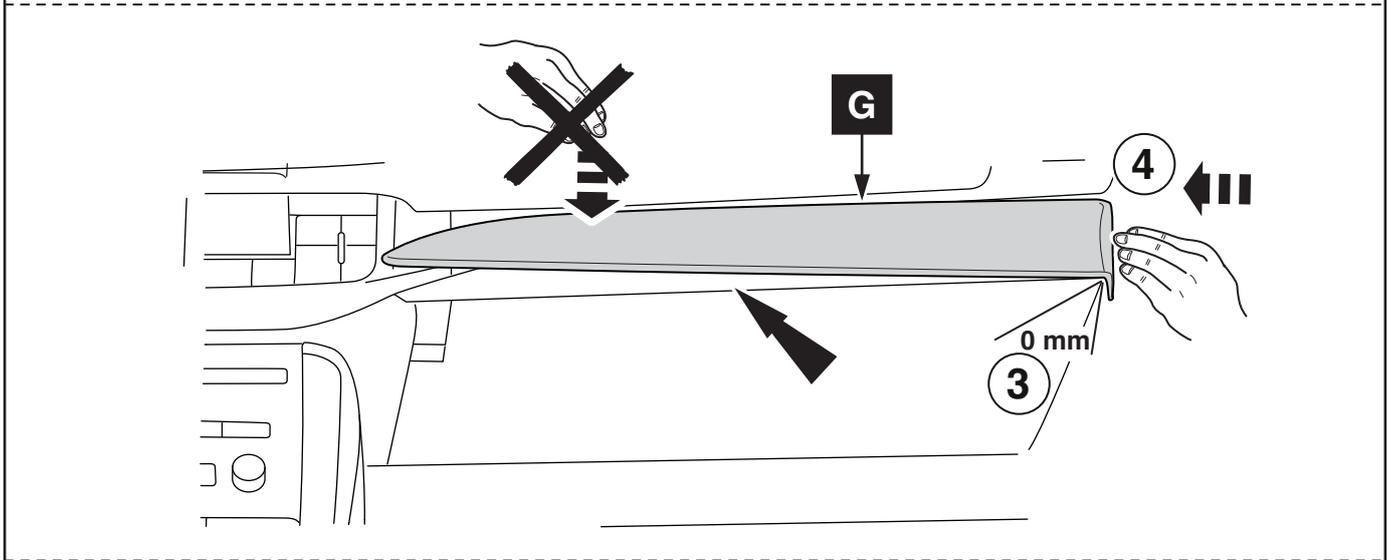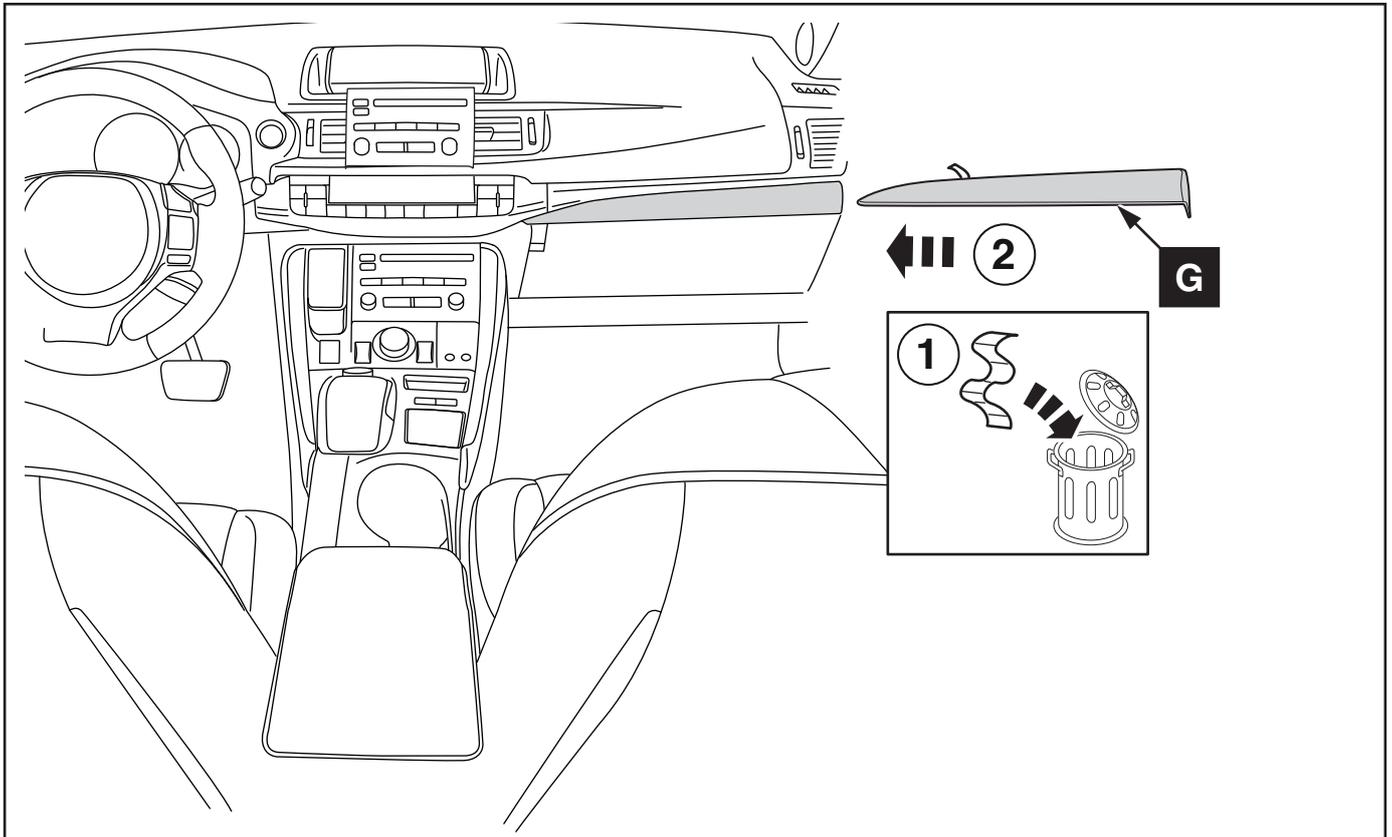


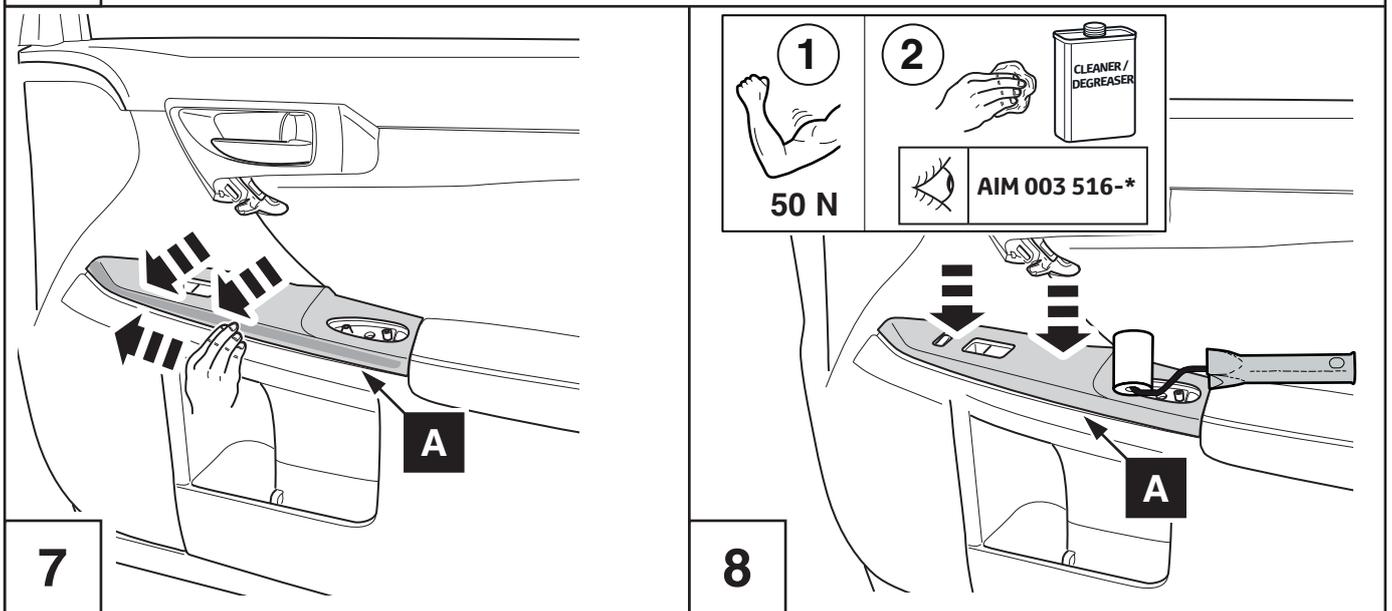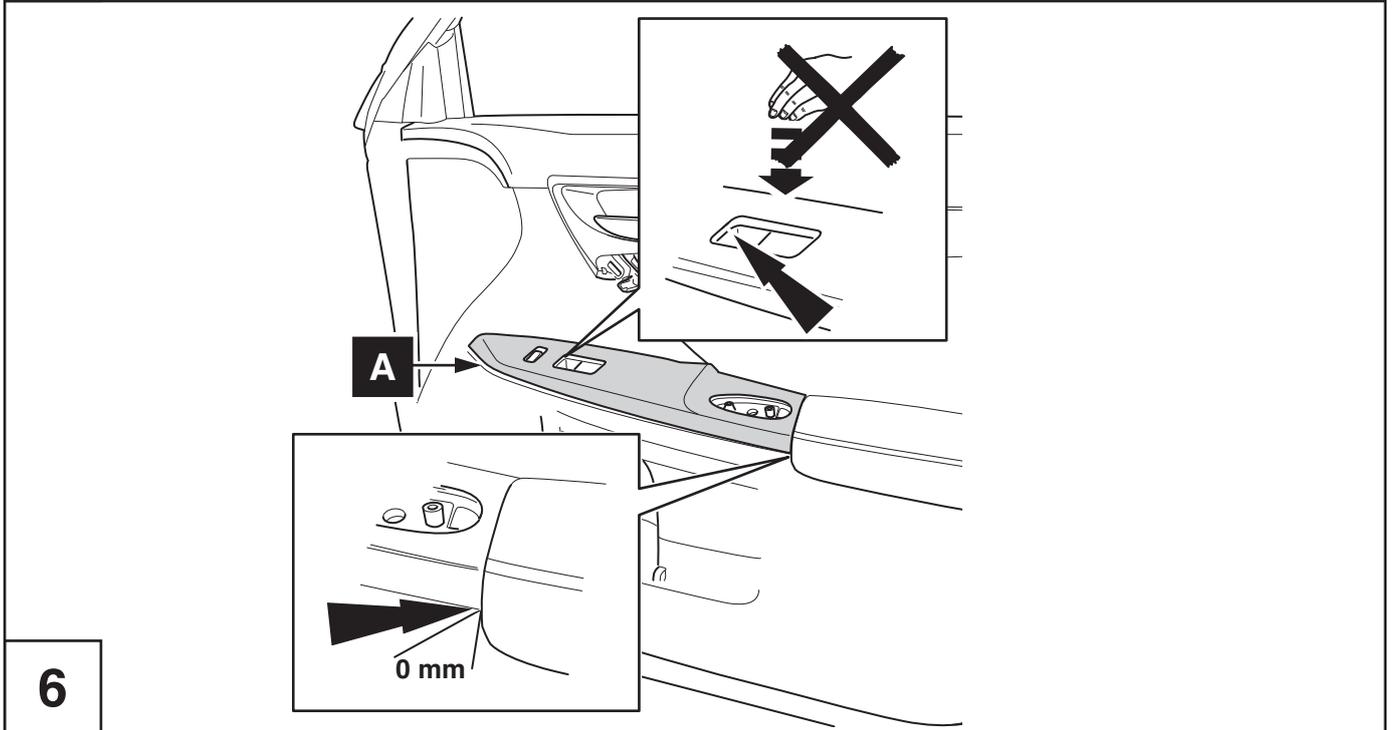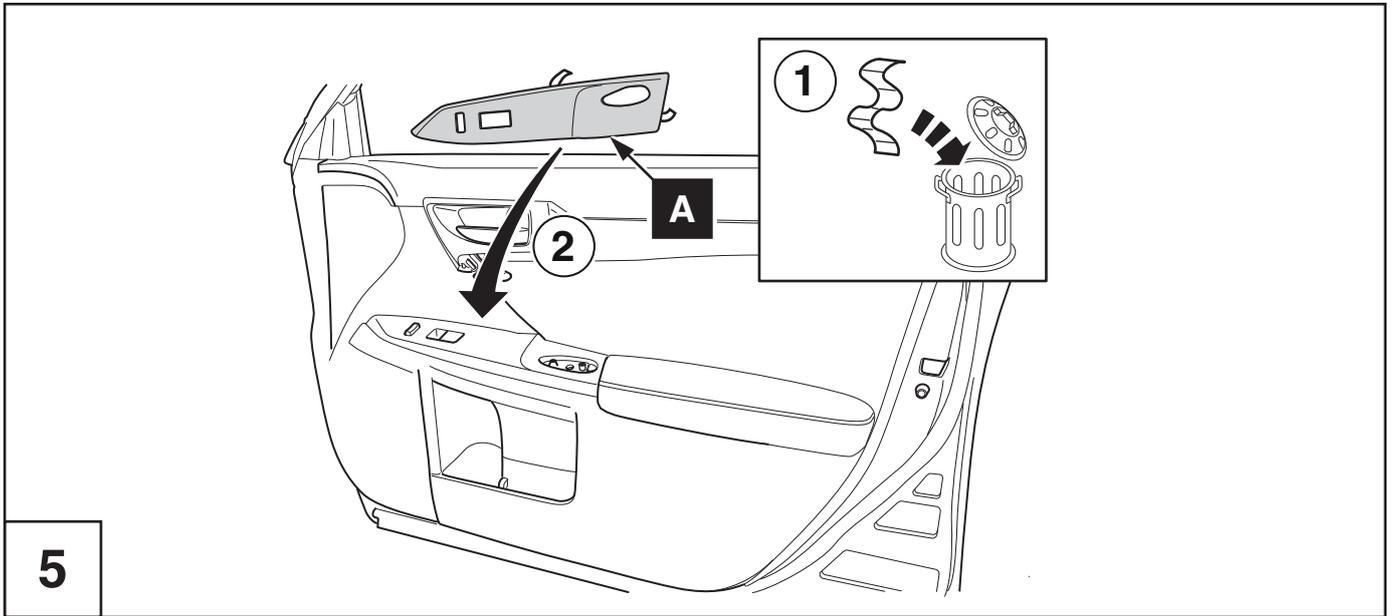

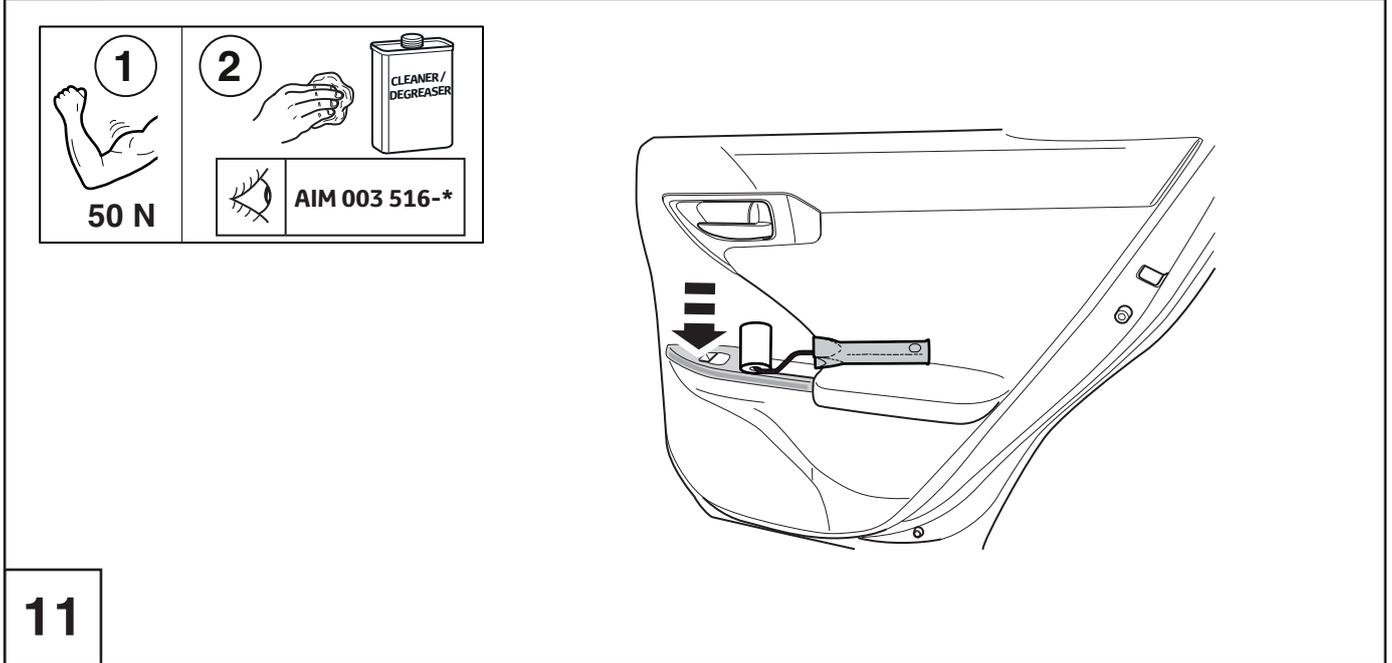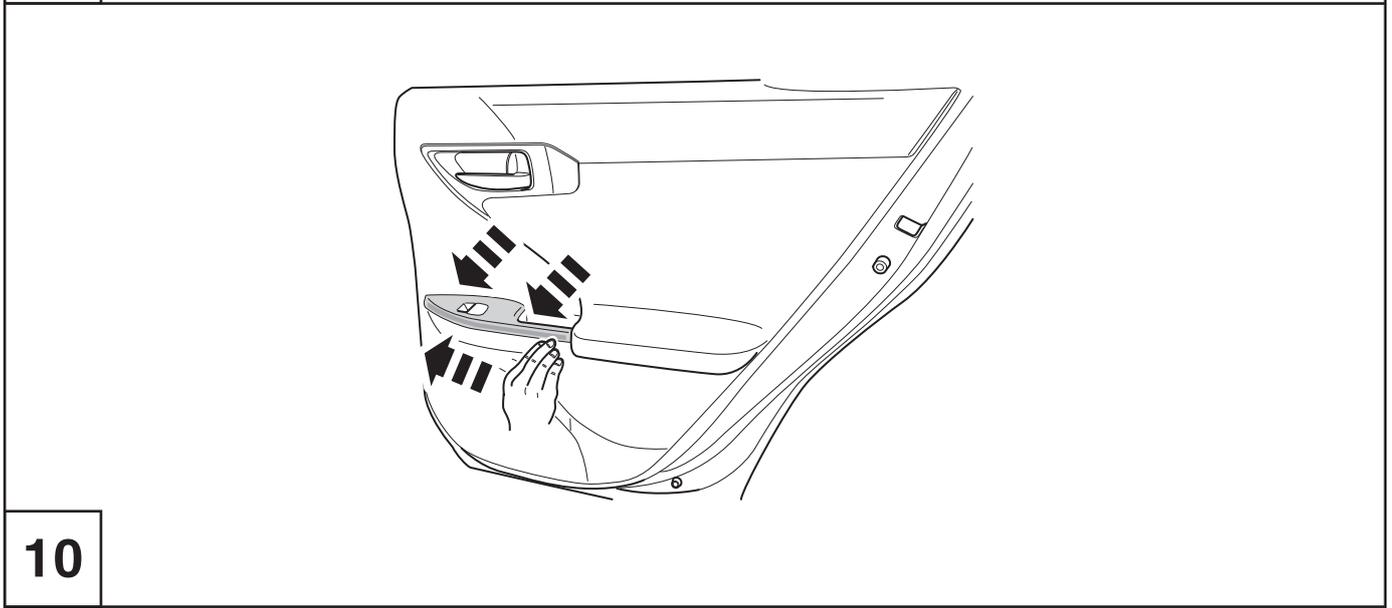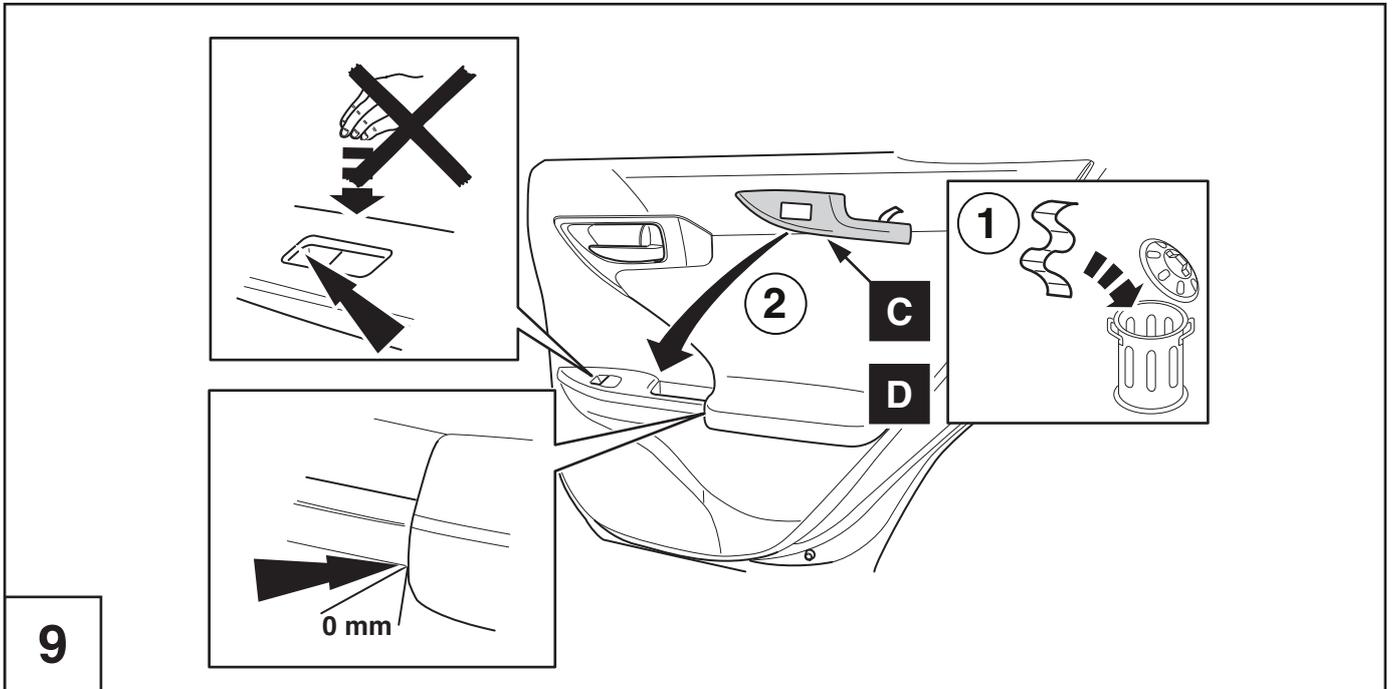


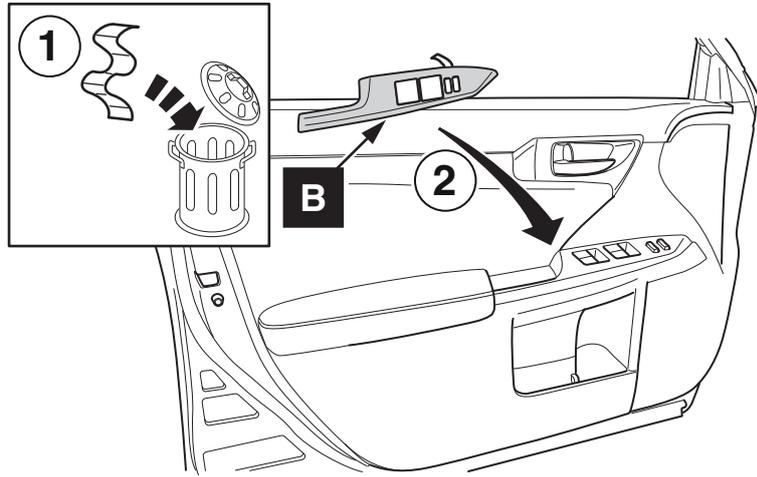


12

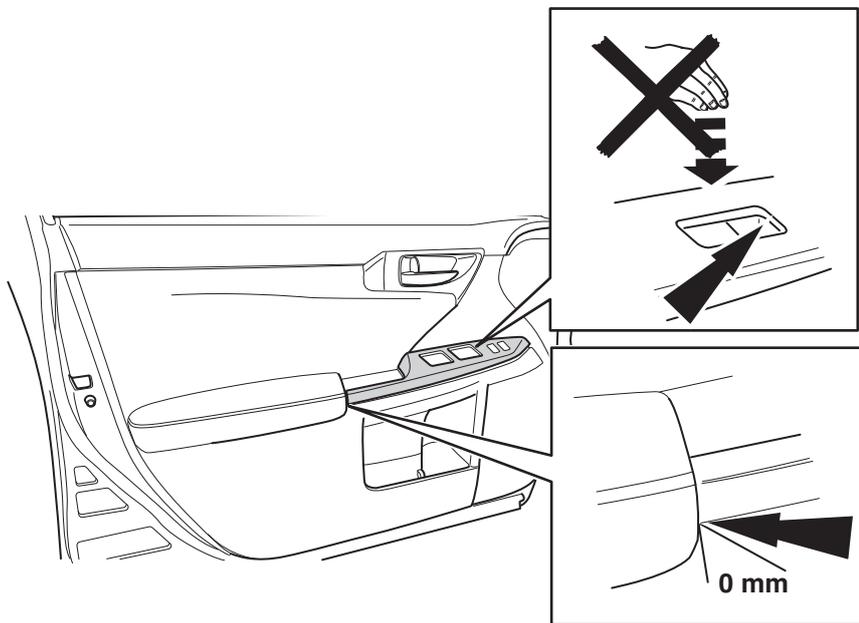



13

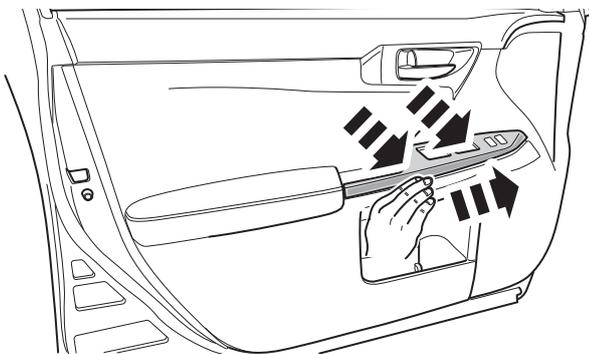

14

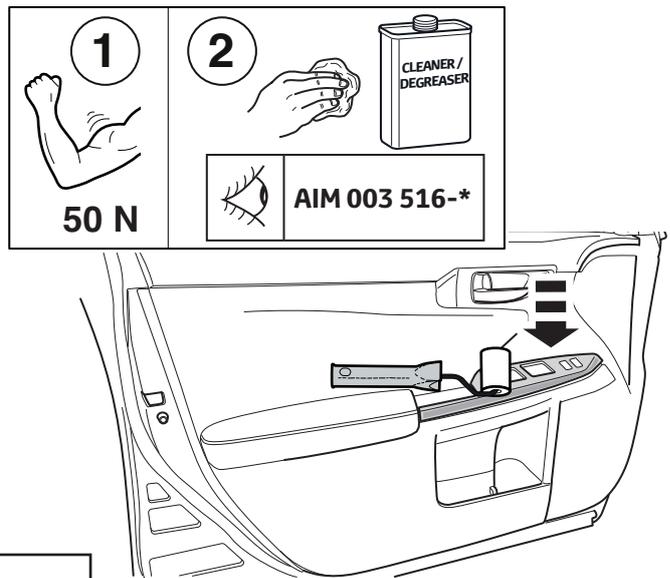

15

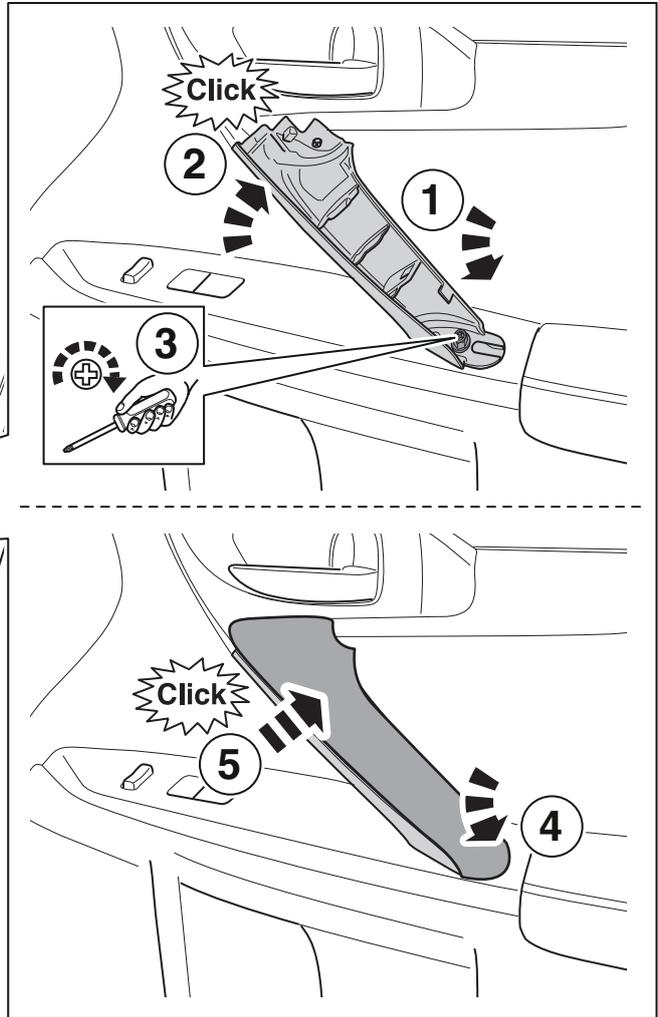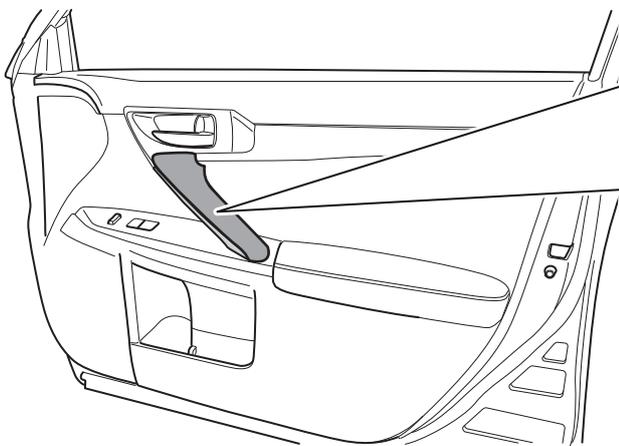



16

Fig.1 - Fig.16


Fig.1 - Fig.16

**RHS = LHS**


17

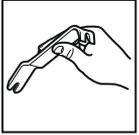


### Metal Finish Panel / Urethane Panel

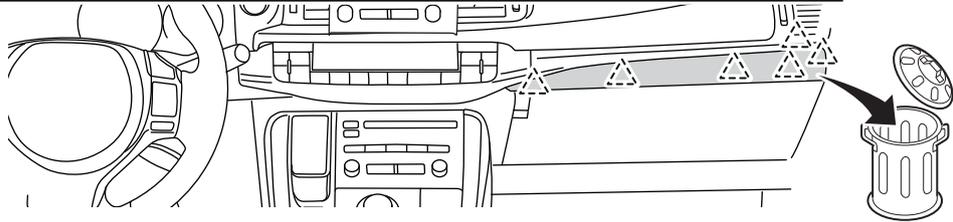

### Wood Panel / Bamboo Panel

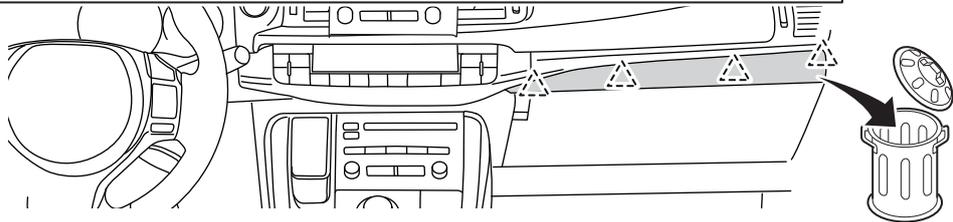

18

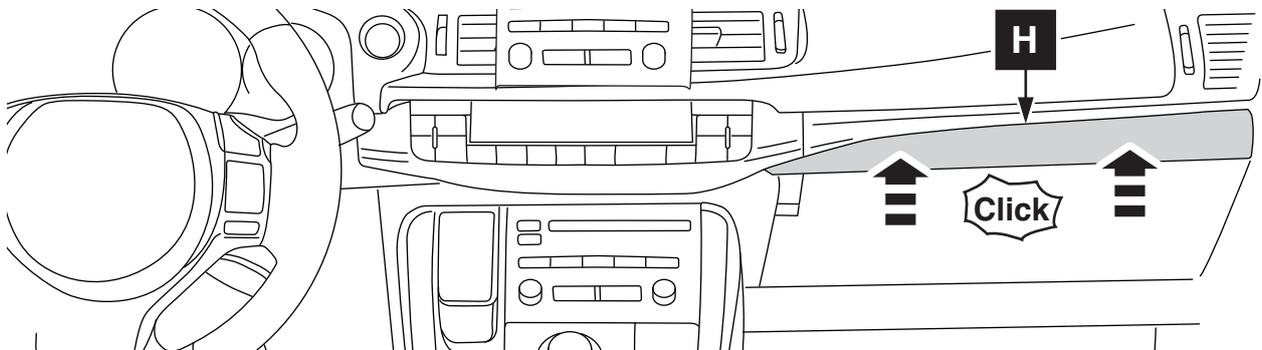

19



# CHECK SHEET












Model / Year LEXUS CT200h

Inlay Instrument Panel &

2010/12, 2013/12, 2017/08 Window Control Covers

VIN n°

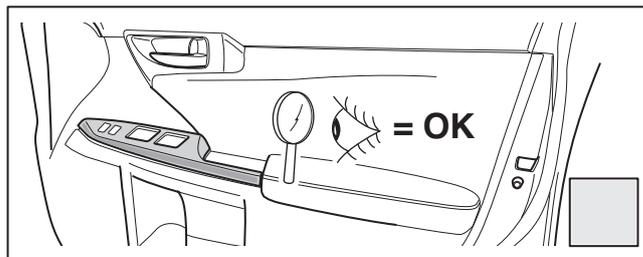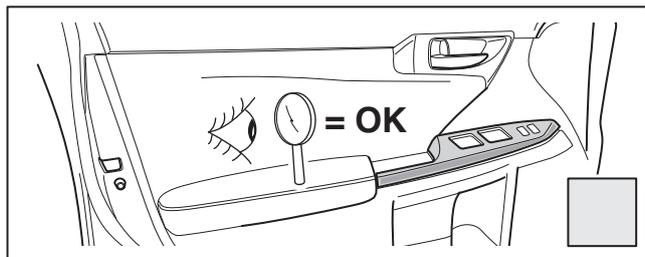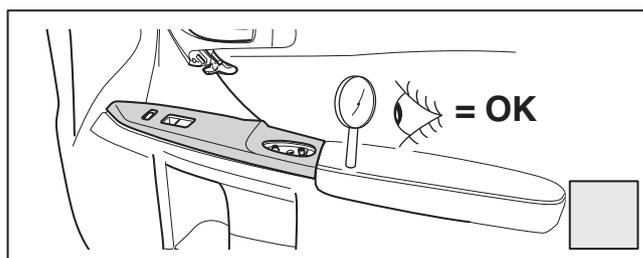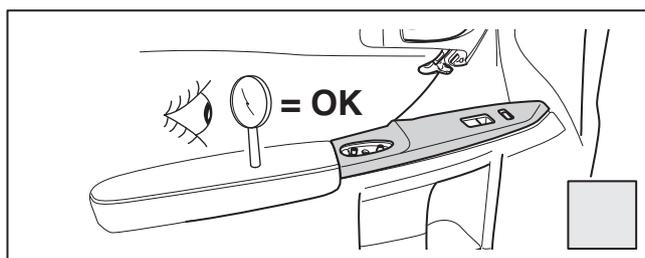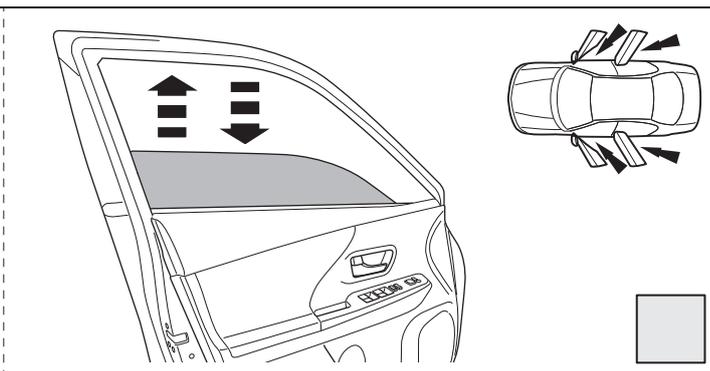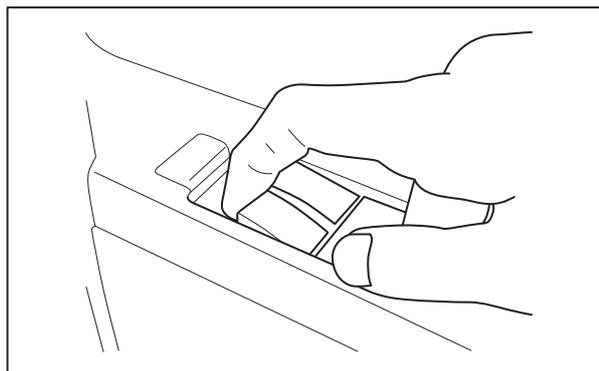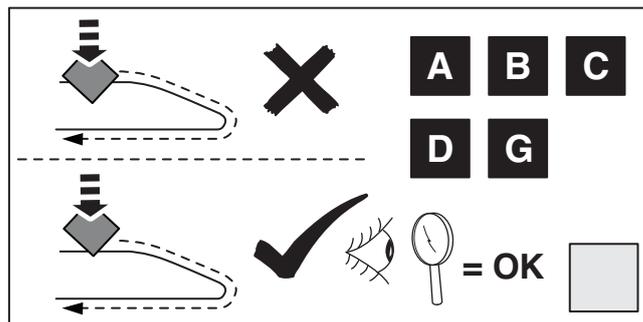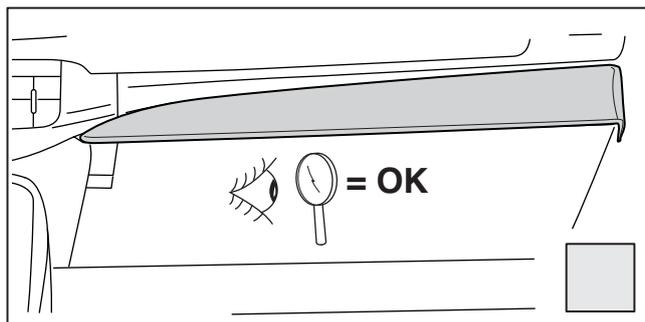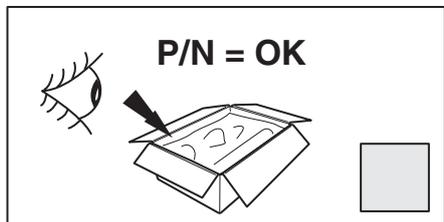

Installation Date:

. . / . . / . . . .

Technician Name & Signature:

Stamp: