

Sport Badge INSTALLATION INSTRUCTIONS IS

Model year	2016/10
Vehicle code	A*E30* - AE**AW
Part number	PW189-60001

Revision Record




Rev. No.	Date	Page	Picture	Update	New	Deleted

PW189-60001



A

2x

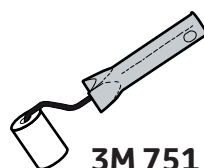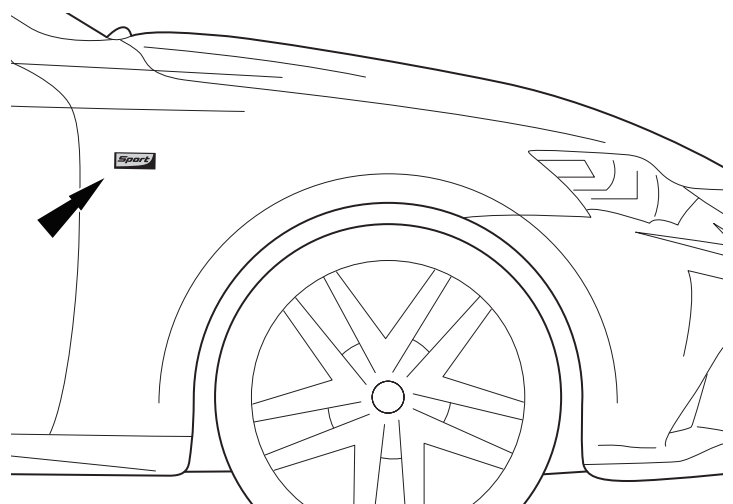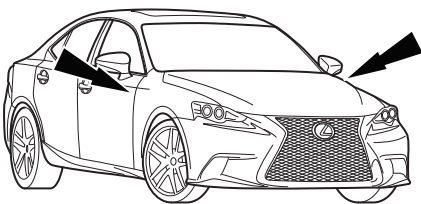

3M 751





3M 2010






40°C

18°C

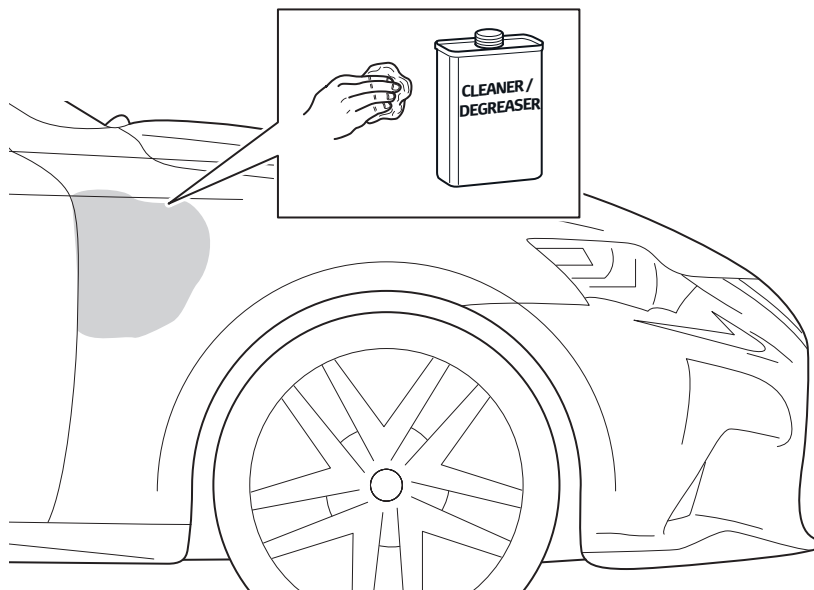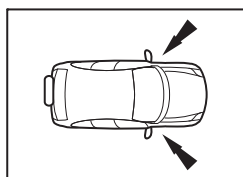



1

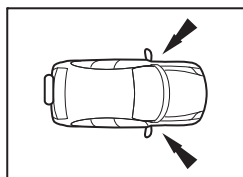


7 of 11






9 of 11




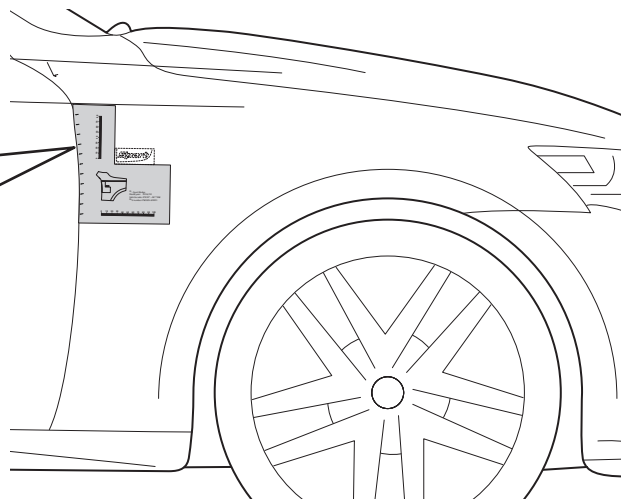
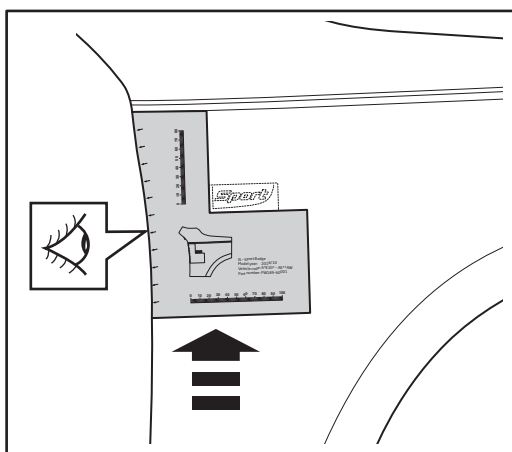


2

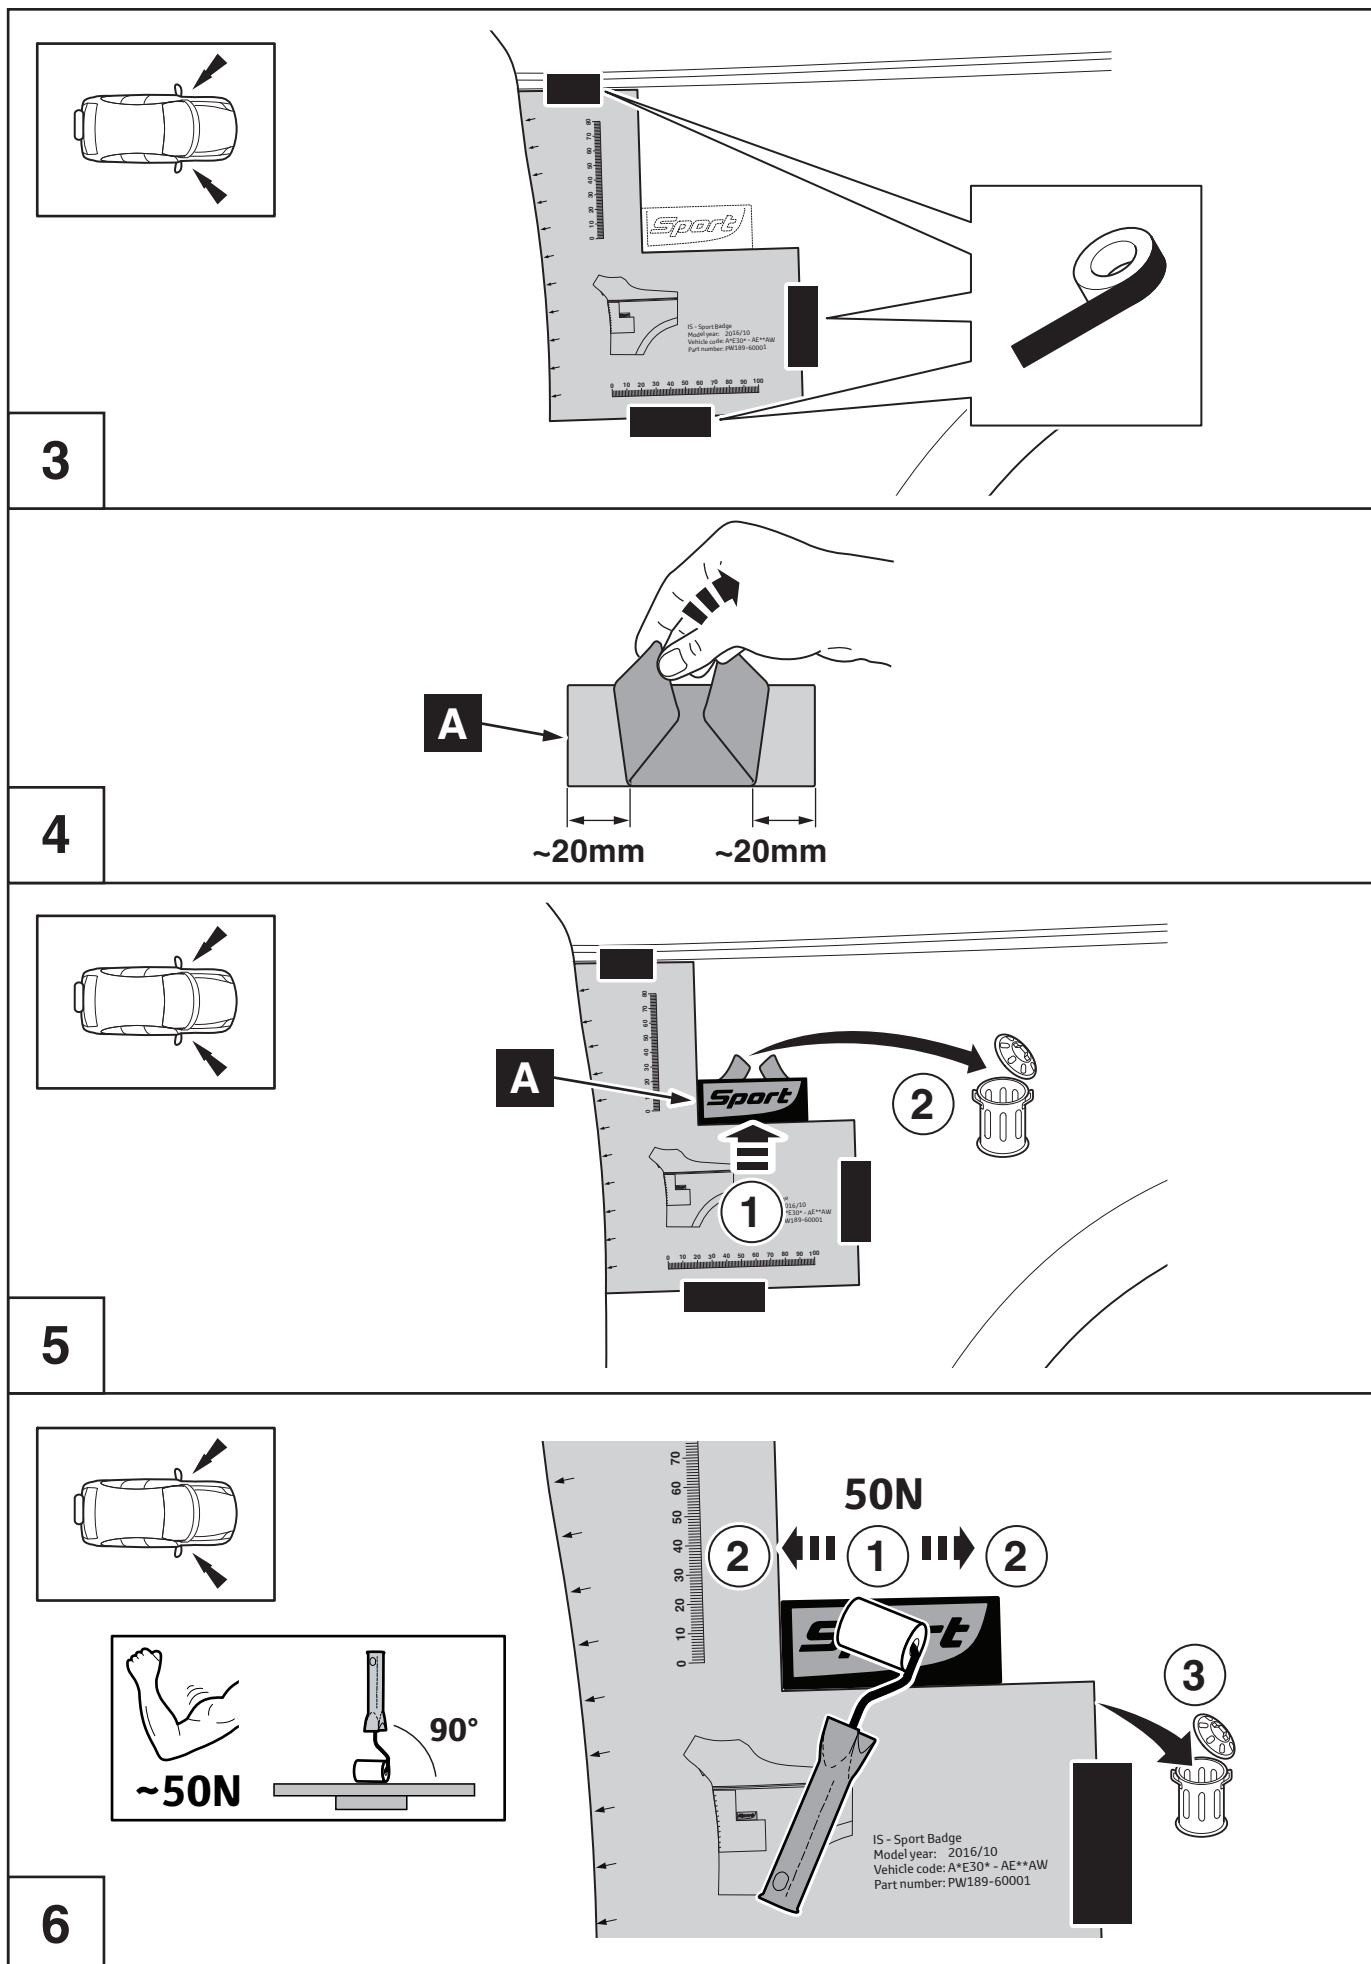

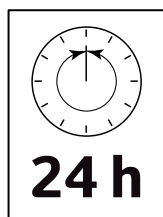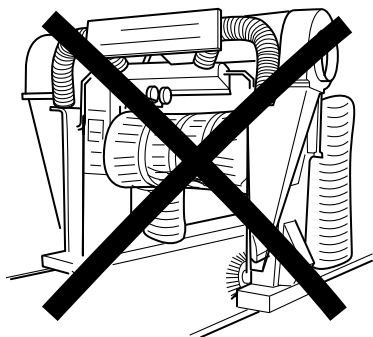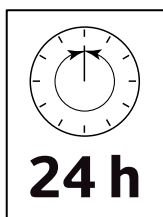


> 1 meter

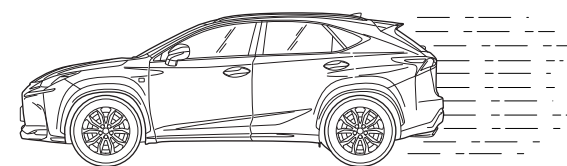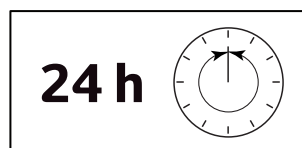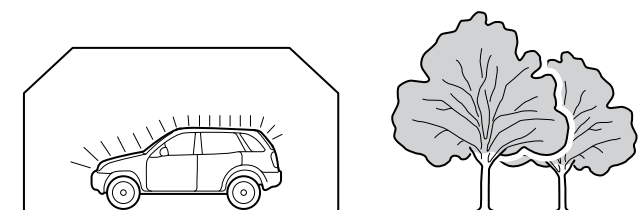
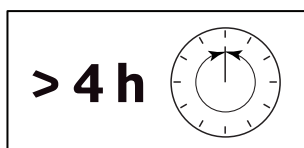
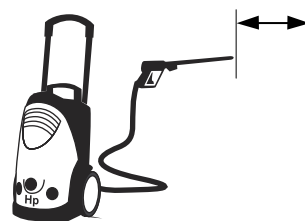


Max. 90 Km/h





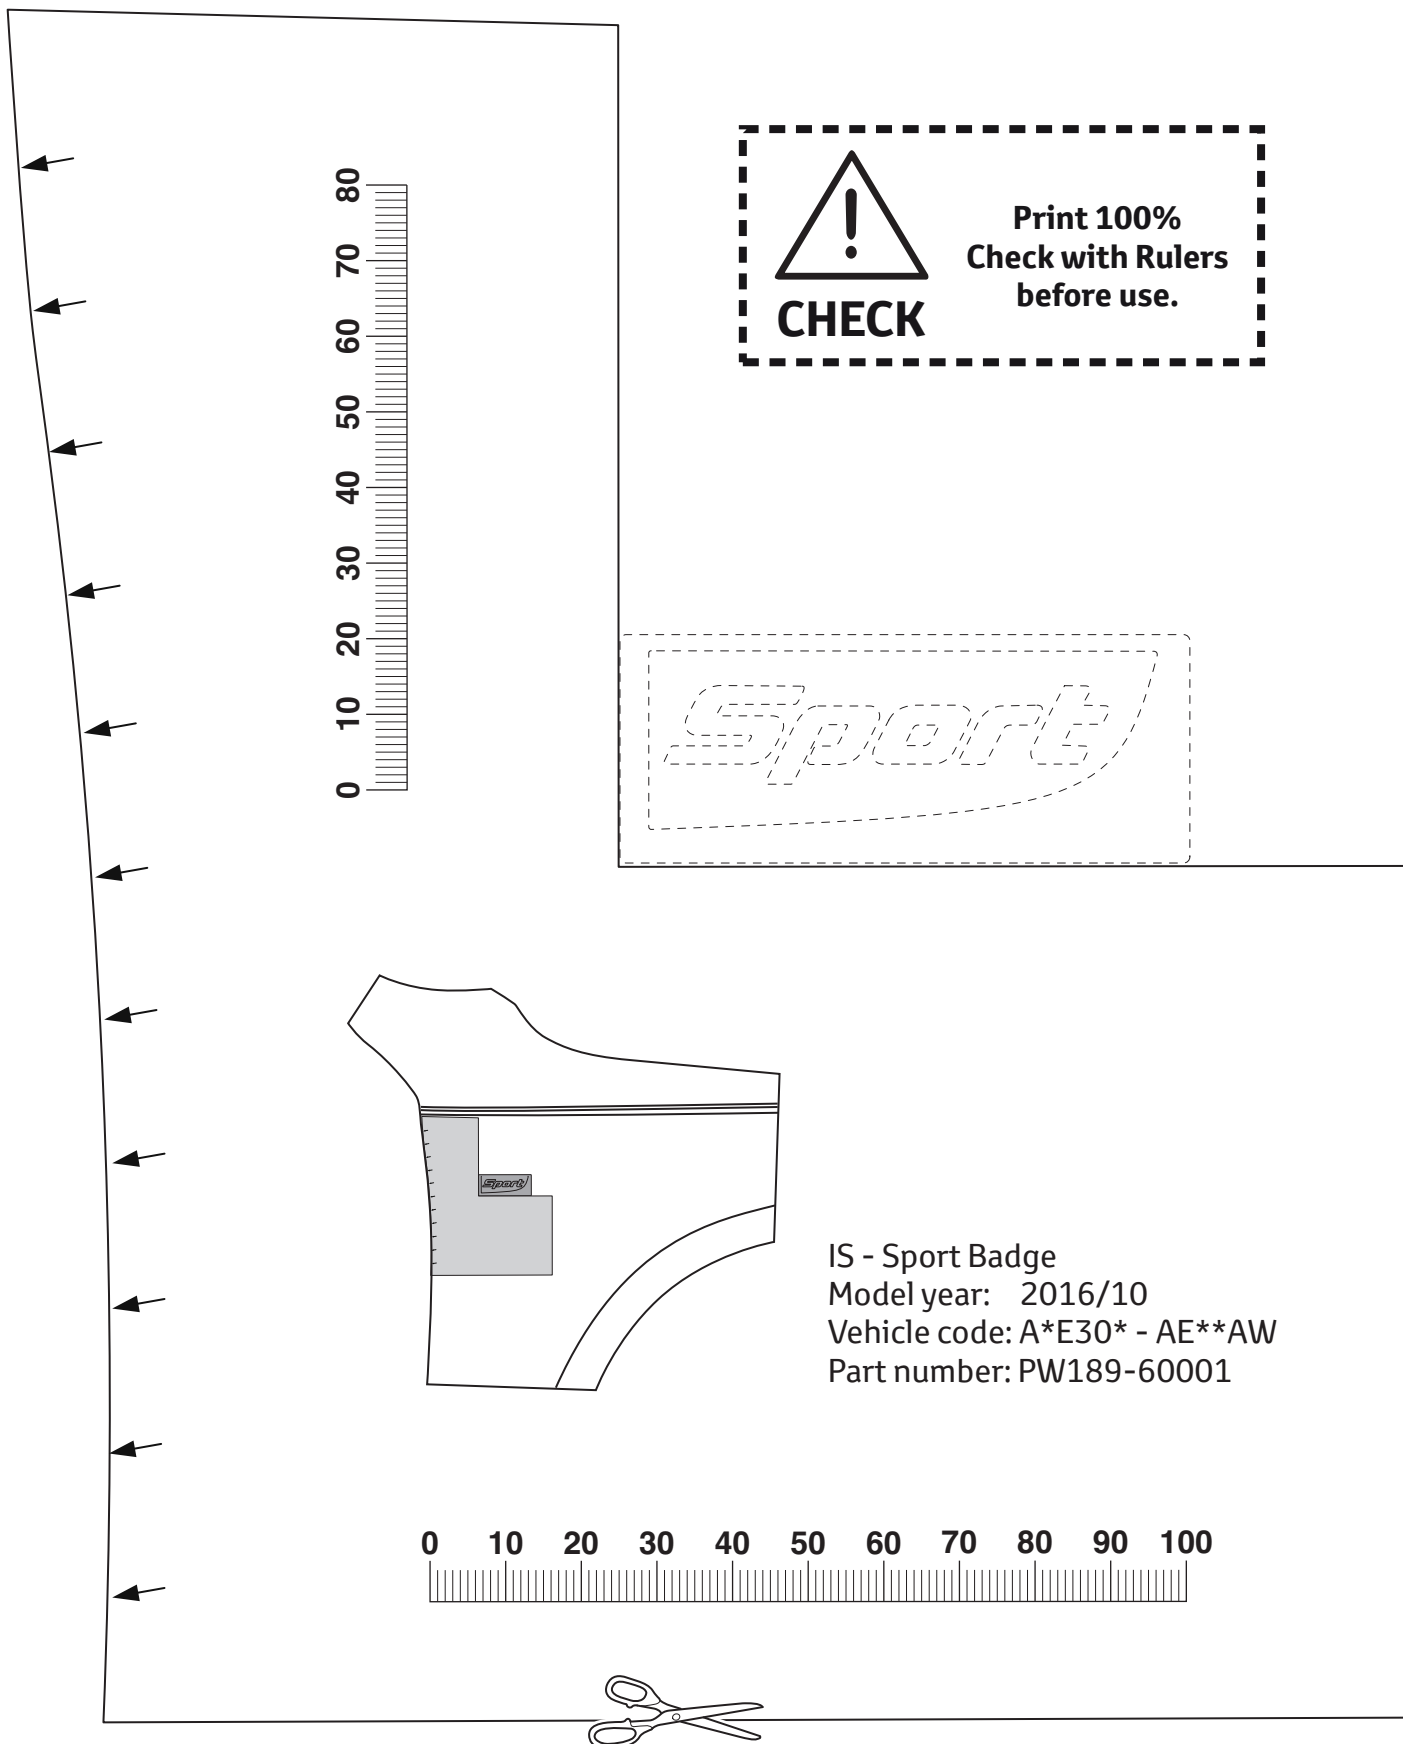



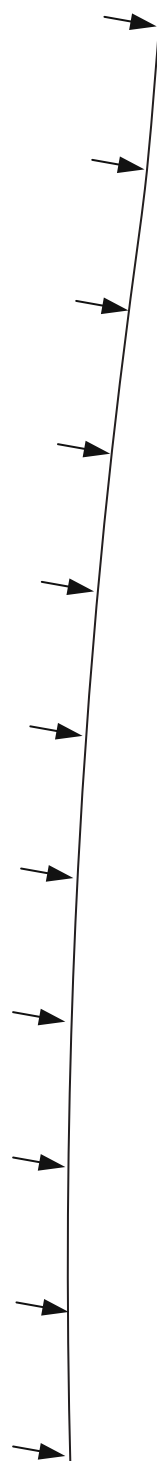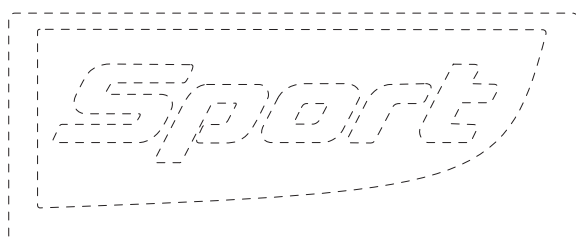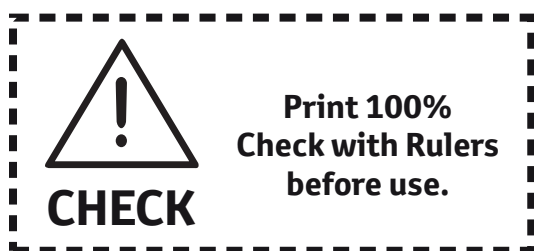

IS - Sport Badge
Model year: 2016/10
Vehicle code: A*E30* - AE**AW
Part number: PW189-60001

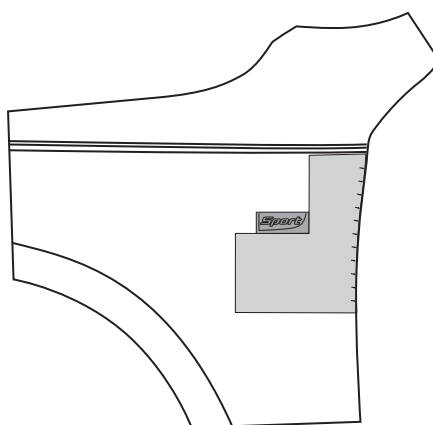



CHECK SHEET



Model / Year IS 2016/10

IS
Sport Badge

VIN n°


P/N = OK


☐





= OK


☐






= OK

☐

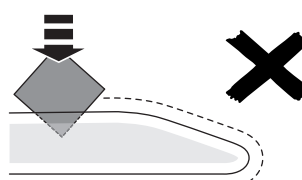


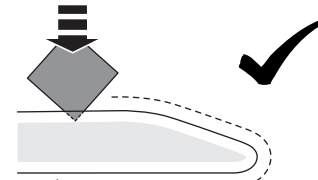

☐



= OK

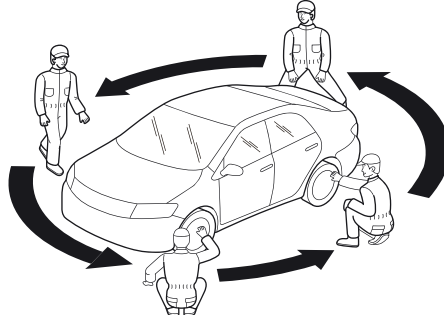

☐

Installation Date:

.. / .. / ..

Technician Name & Signature:

Stamp:

