
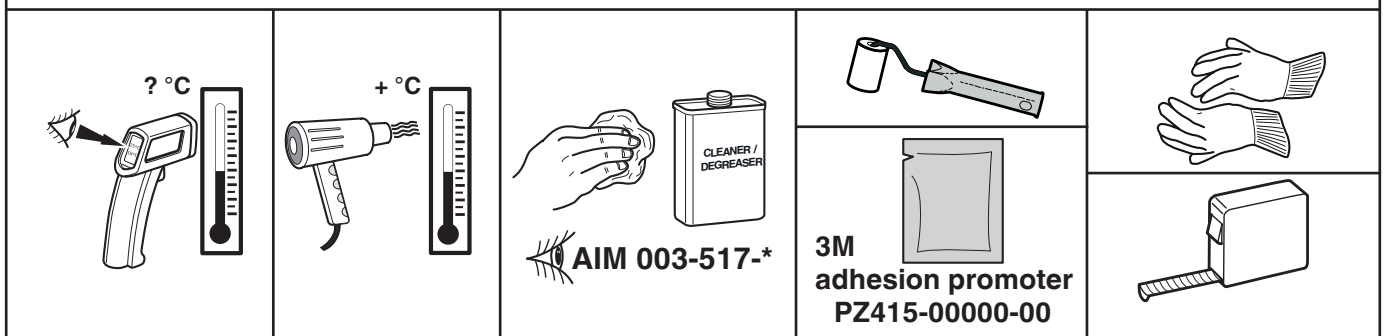
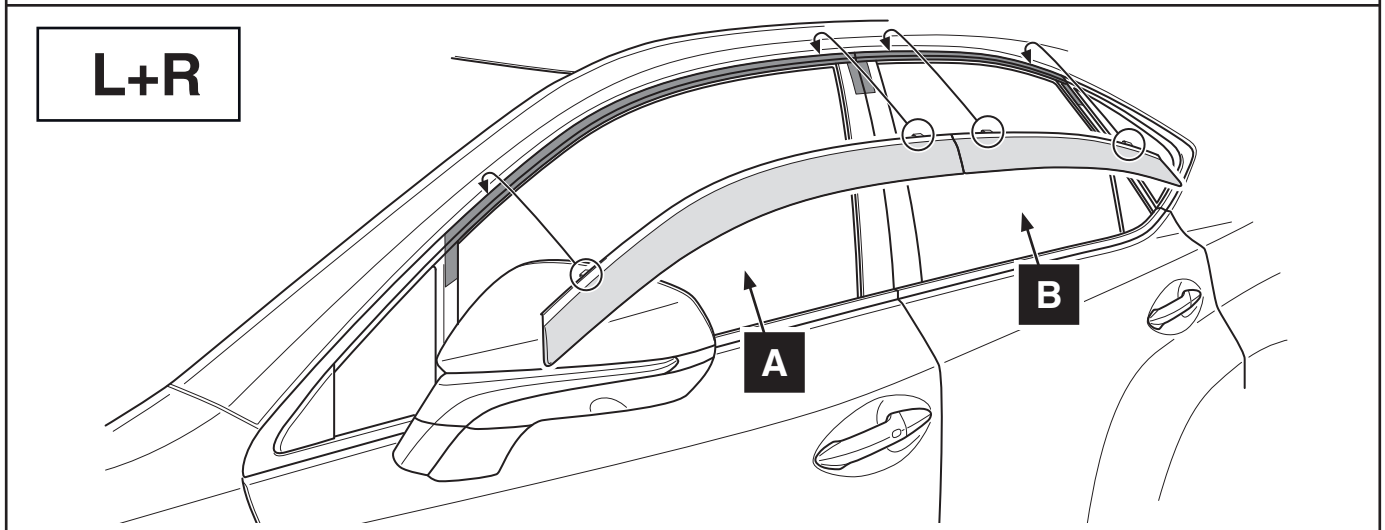


Wind deflector INSTALLATION INSTRUCTIONS RX

Model year	As from 2015/09
Vehicle code	**L2**-AW***W
Part number	08162-48810

Revision Record

Rev. No.	Date	Page	Steps	Remarks
1	29-05-19	1, 11		Model year added

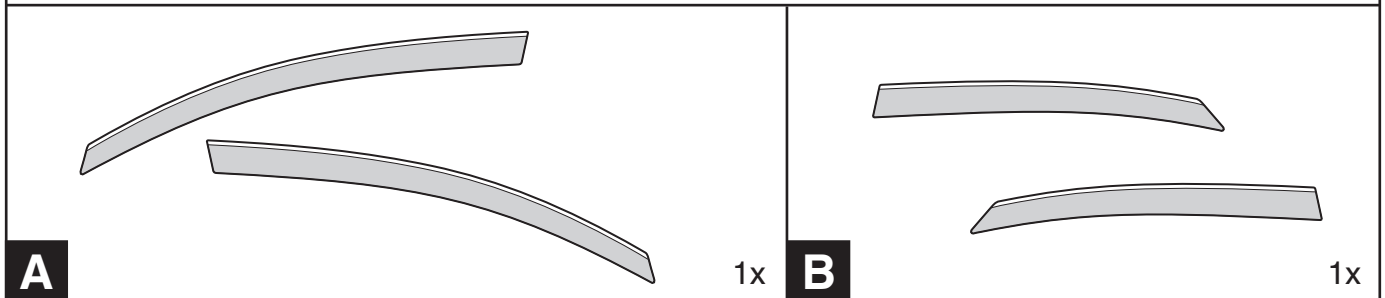

INFO












Material Safety Data Sheet



Technical Data Sheet


20°C - 40°C

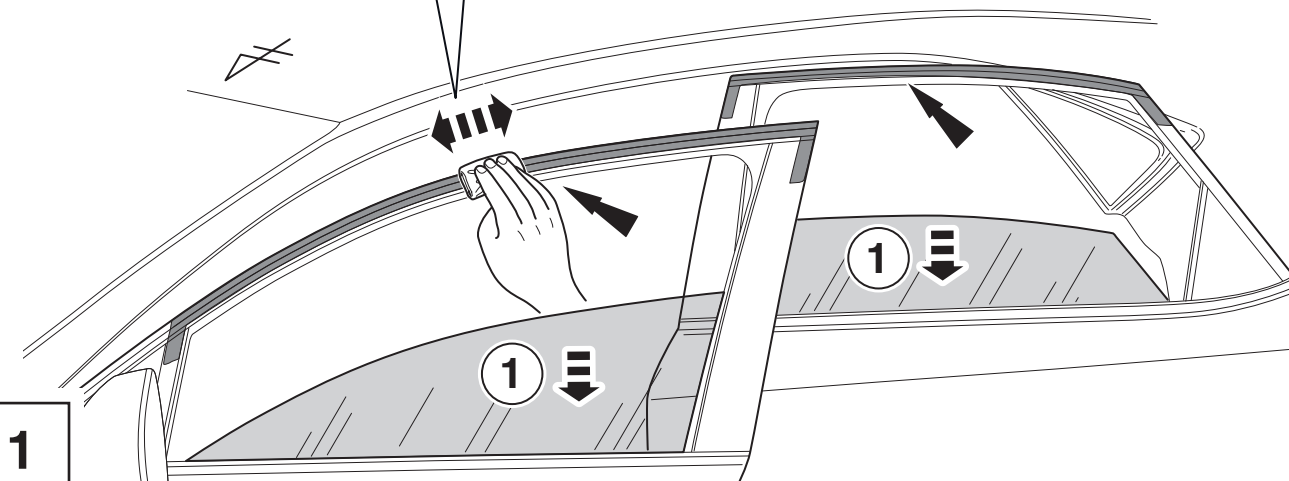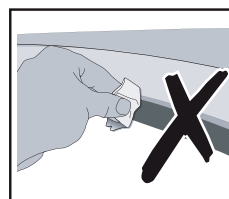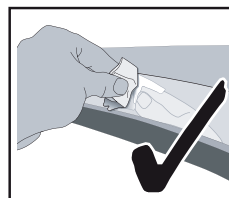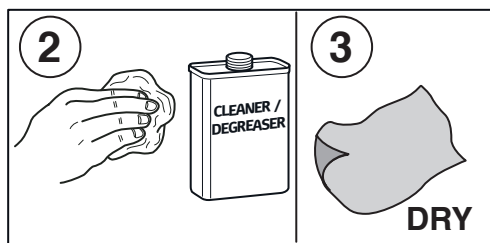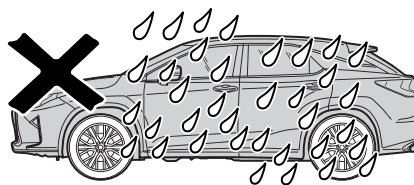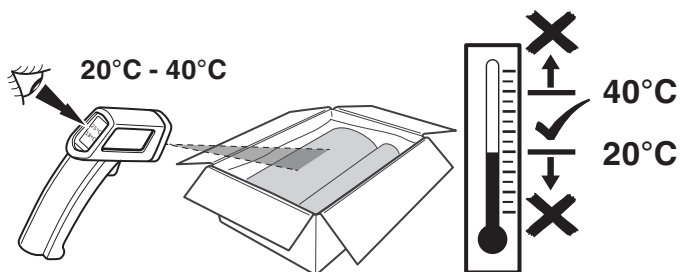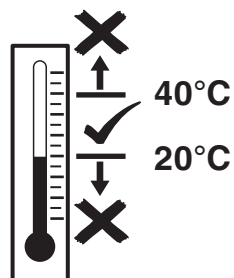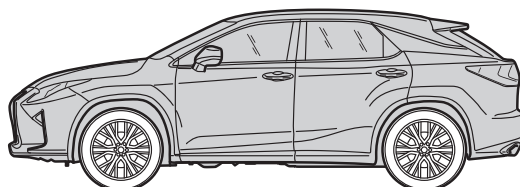

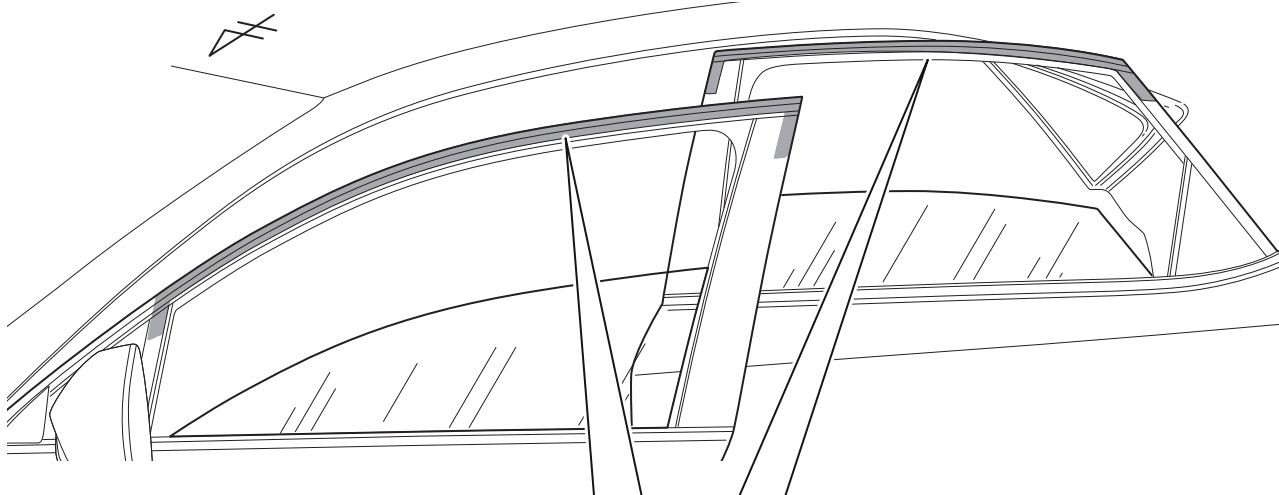


1	$< 20^{\circ}\text{C} \rightarrow \textcircled{2}$ $20^{\circ}\text{C} - 40^{\circ}\text{C} \rightarrow \text{3}$	2
3	$20^{\circ}\text{C} - 40^{\circ}\text{C} \rightarrow \text{3}$	INFO $\text{2} \rightarrow \text{9}$

2

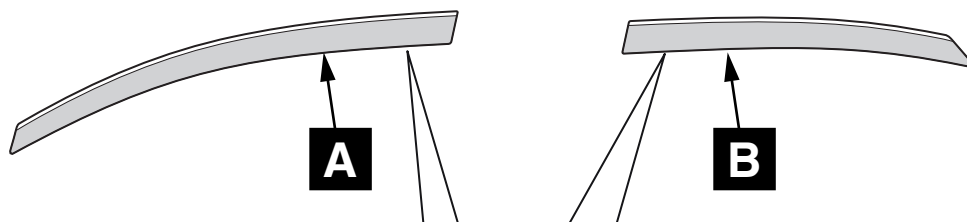


1	$< 20^{\circ}\text{C} \rightarrow \textcircled{2}$ $20^{\circ}\text{C} - 40^{\circ}\text{C} \rightarrow \text{4}$	2
3	$20^{\circ}\text{C} - 40^{\circ}\text{C} \rightarrow \text{4}$	INFO $\text{3} \rightarrow \text{9}$




3

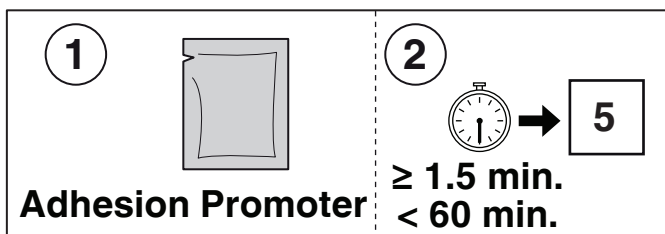


4

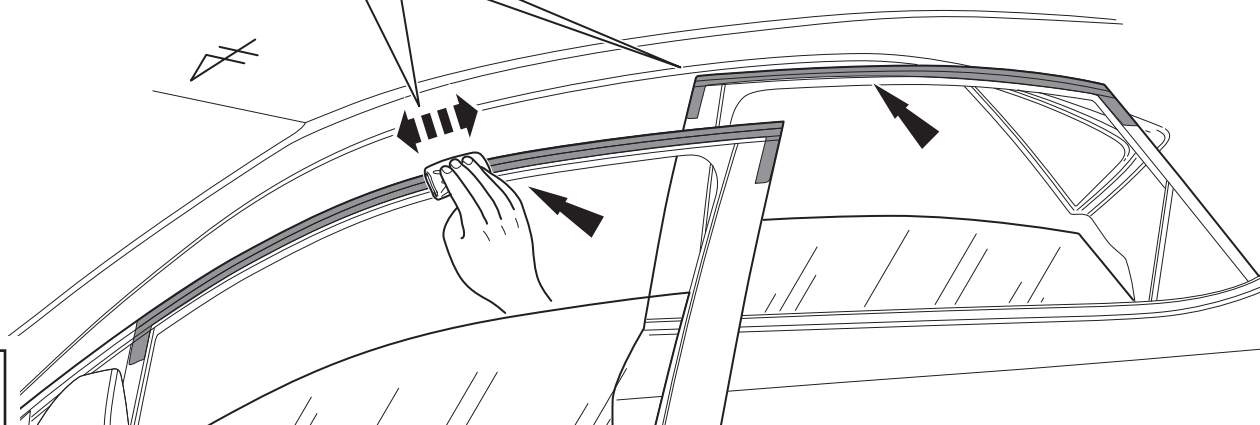


A

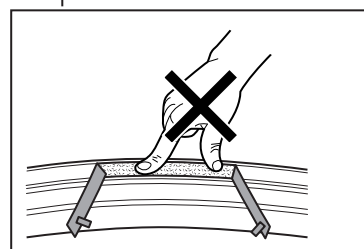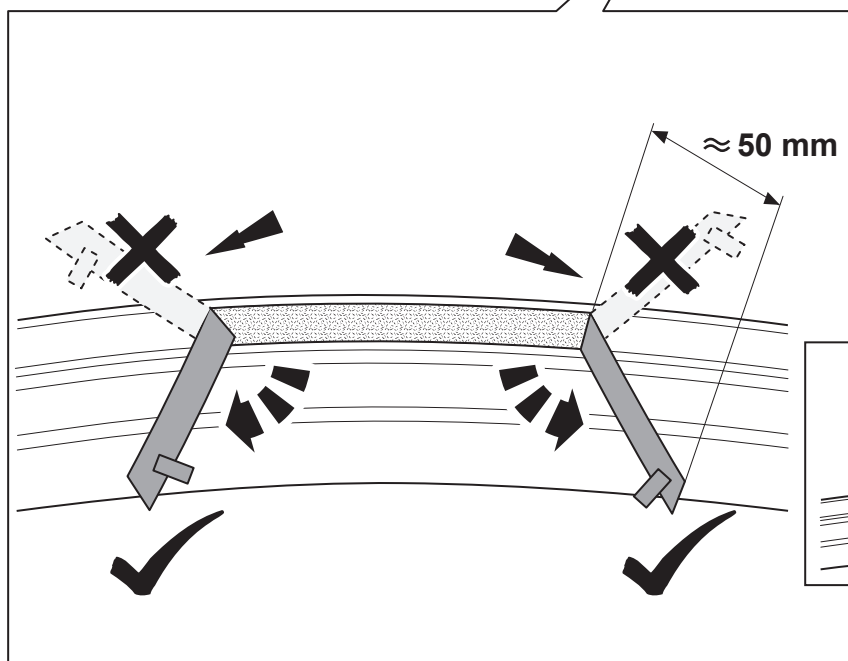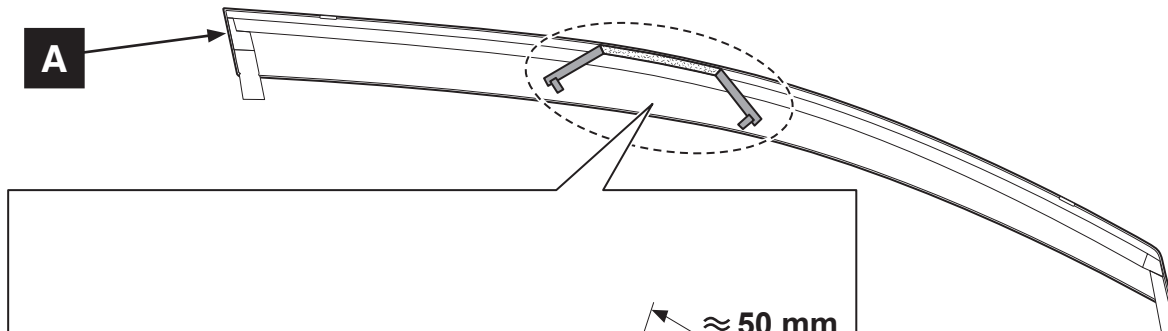


B

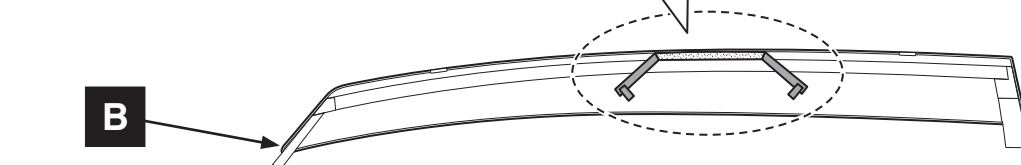







5

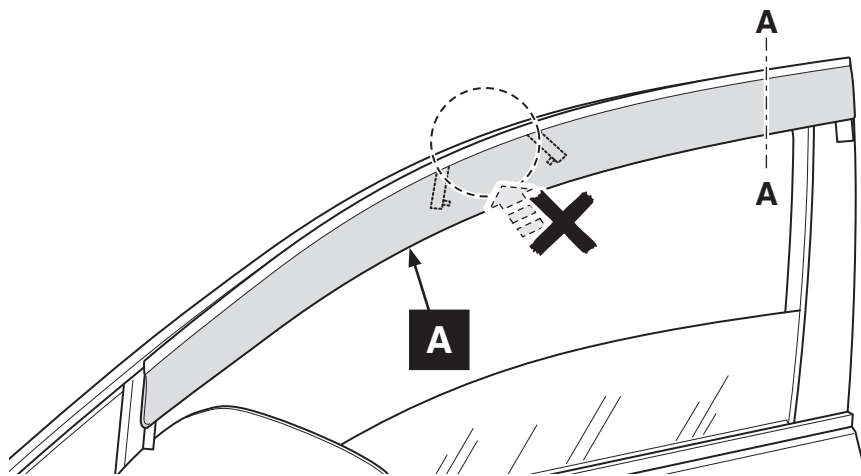



A-A

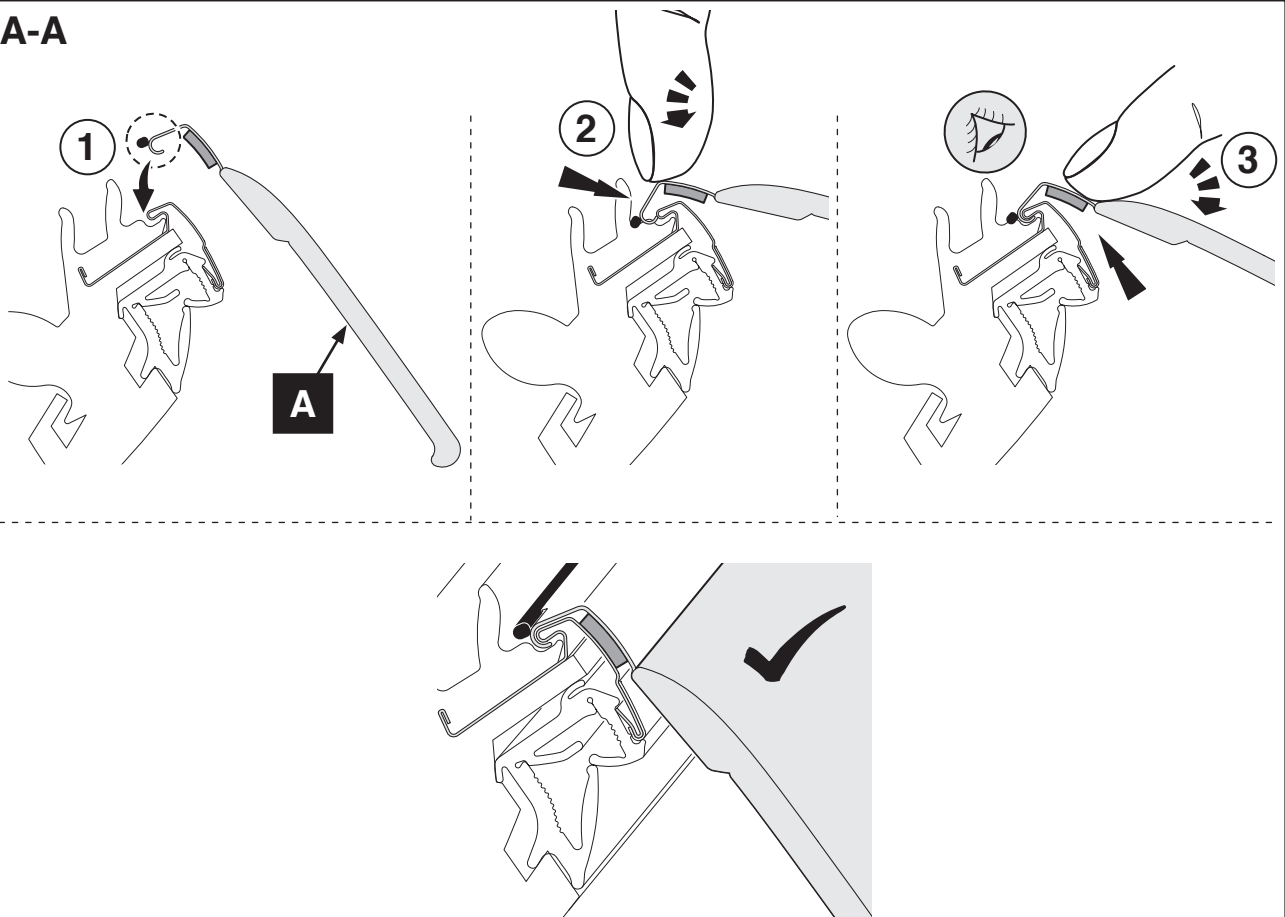

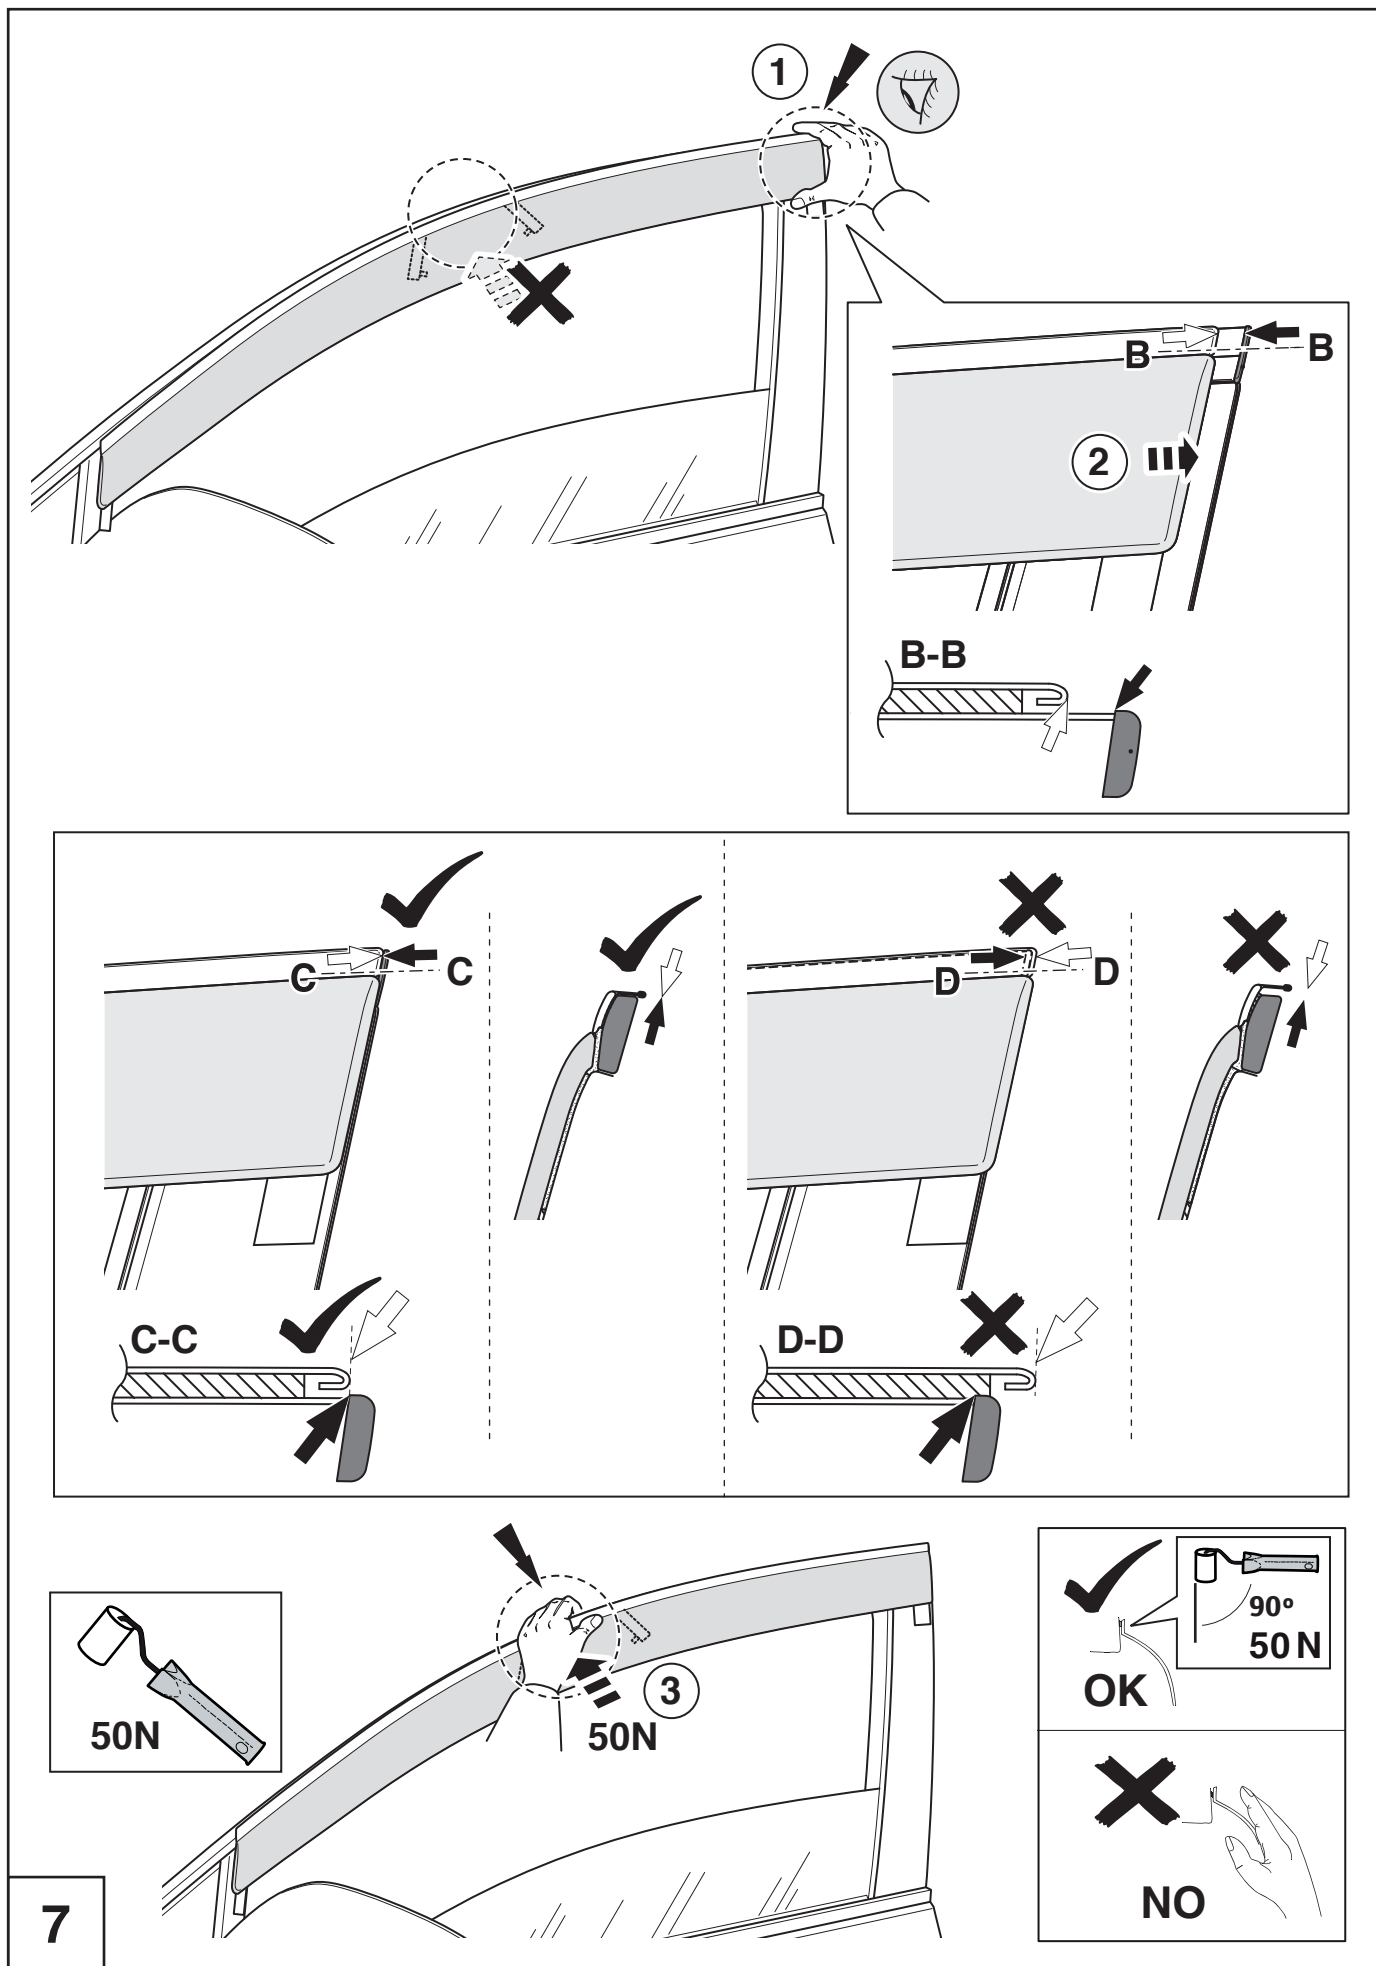


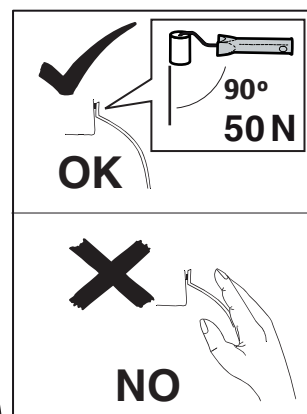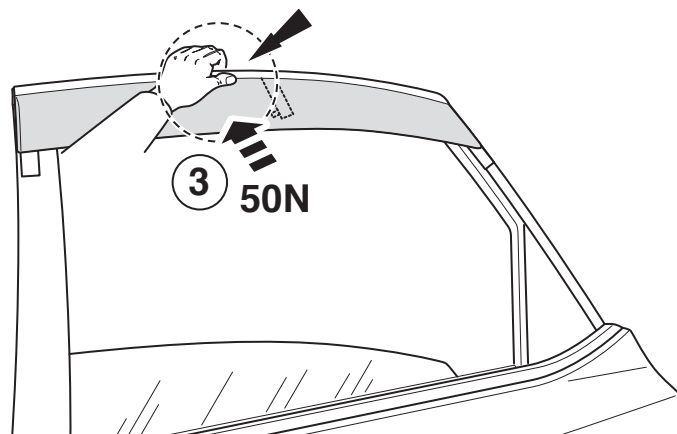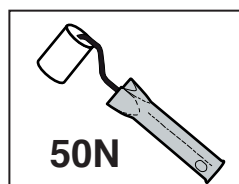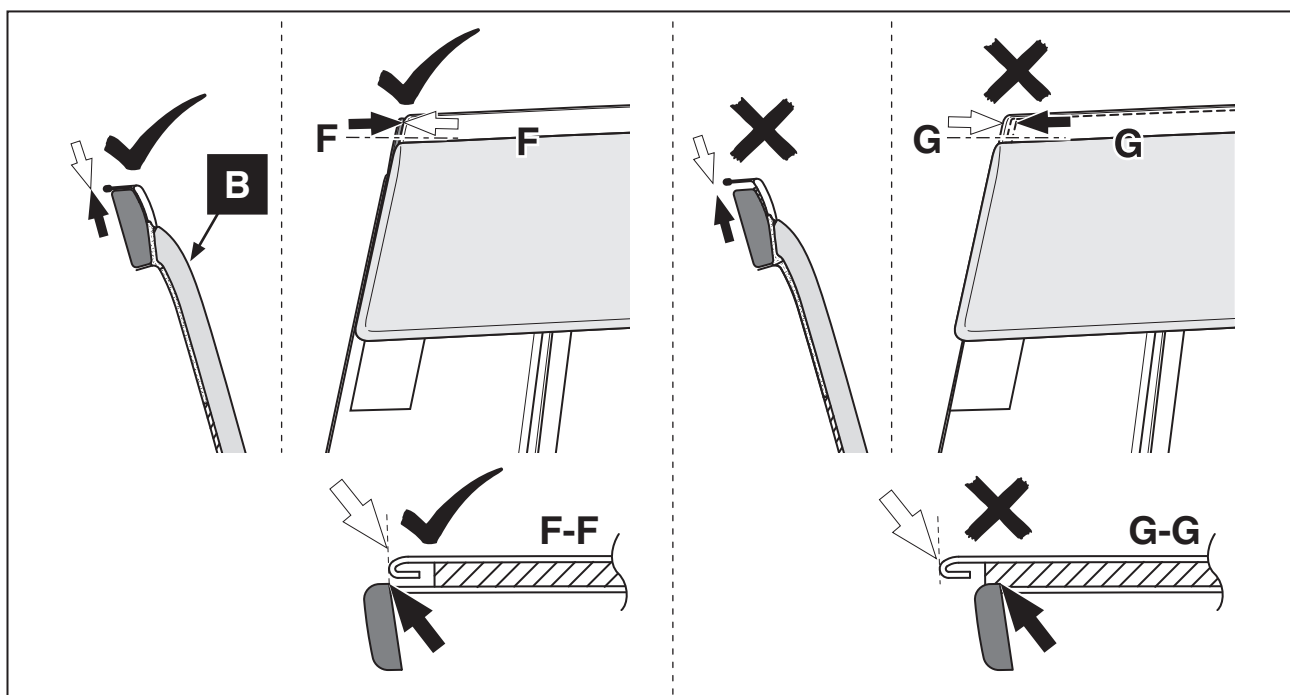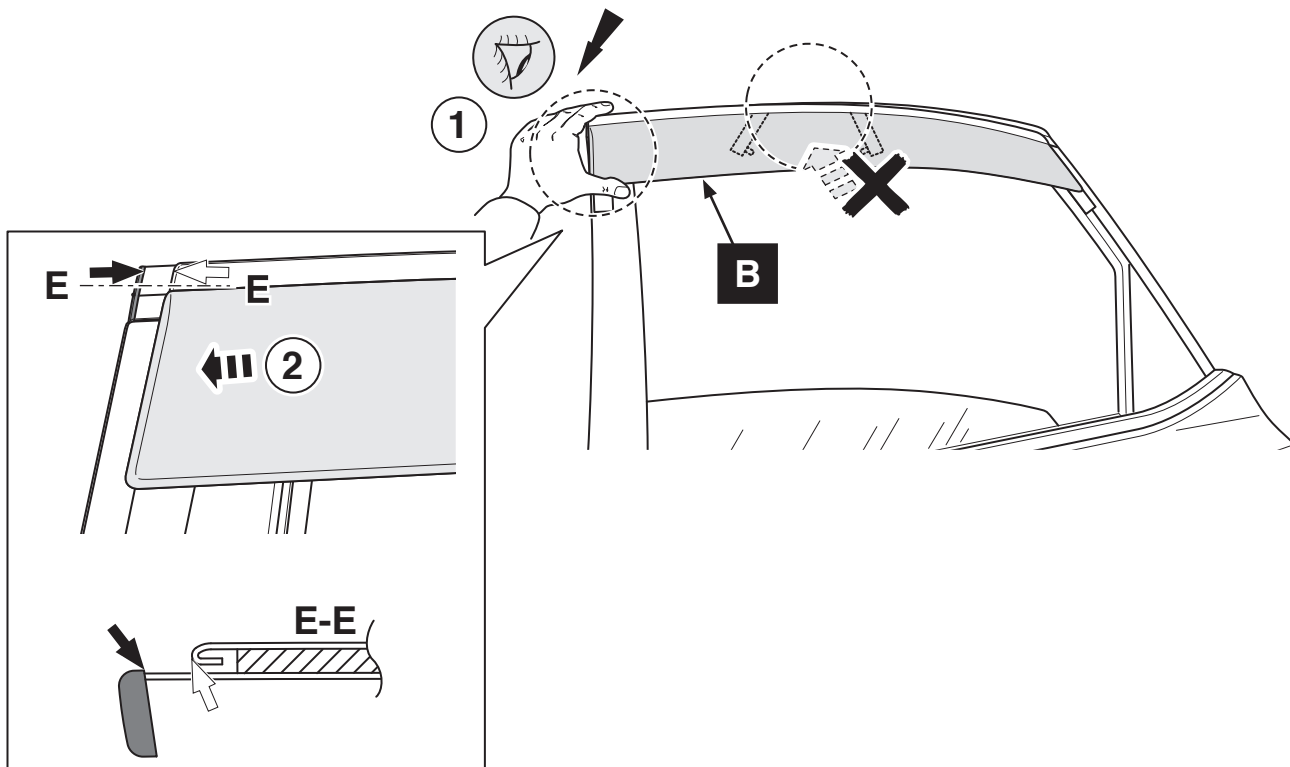


8

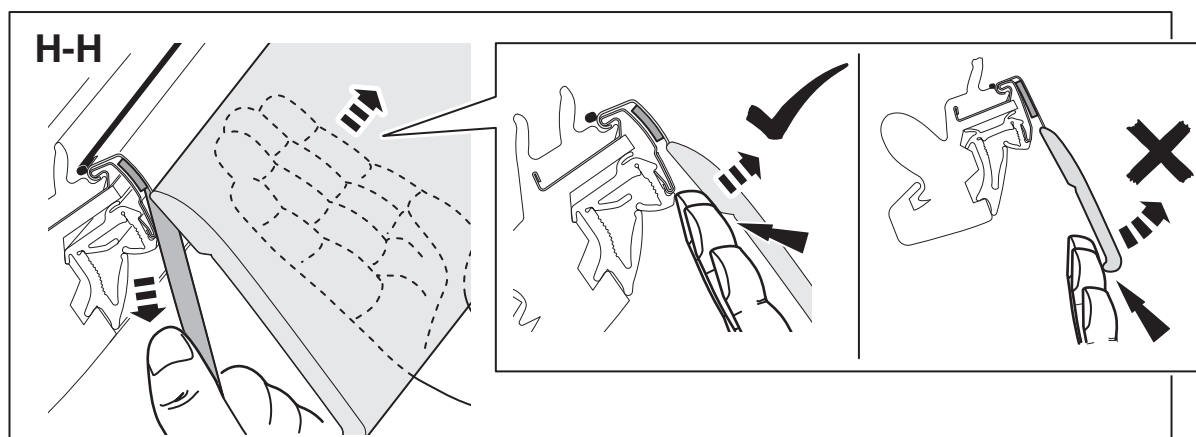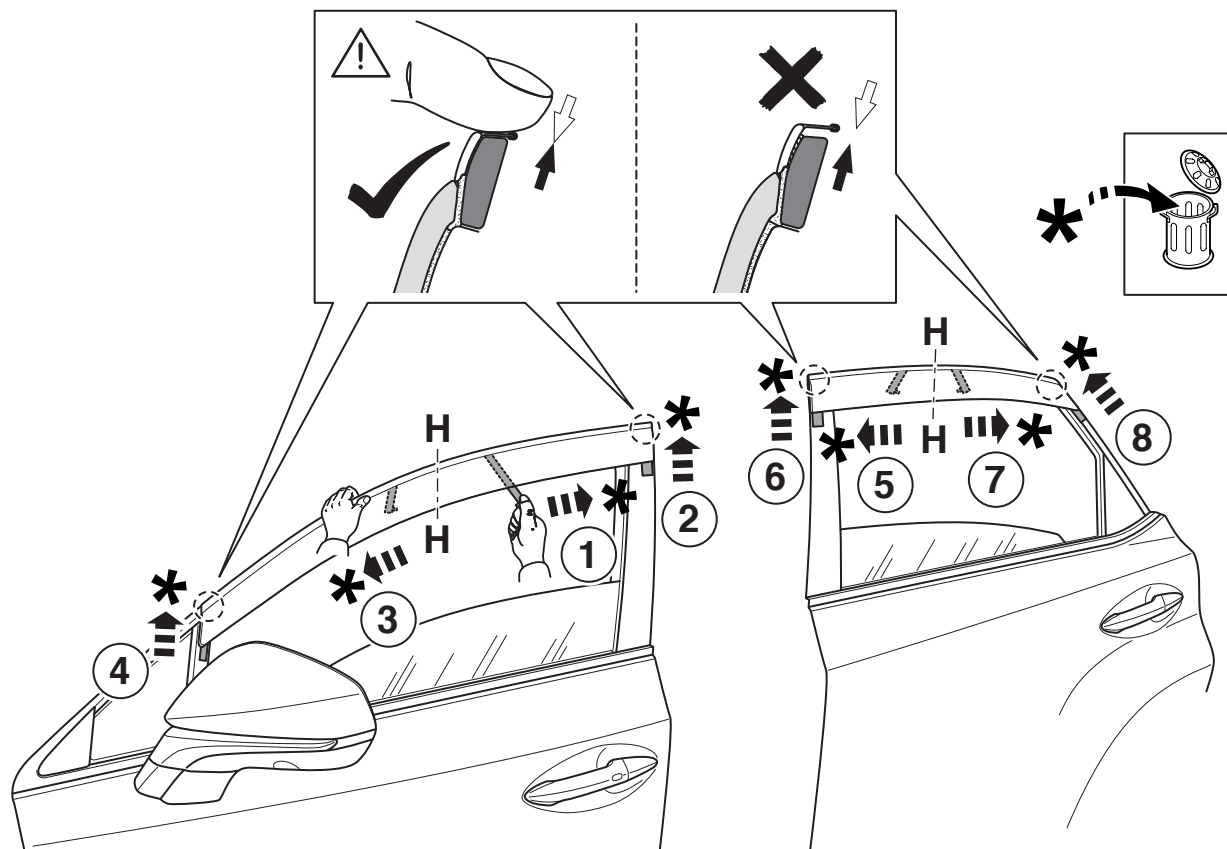

9






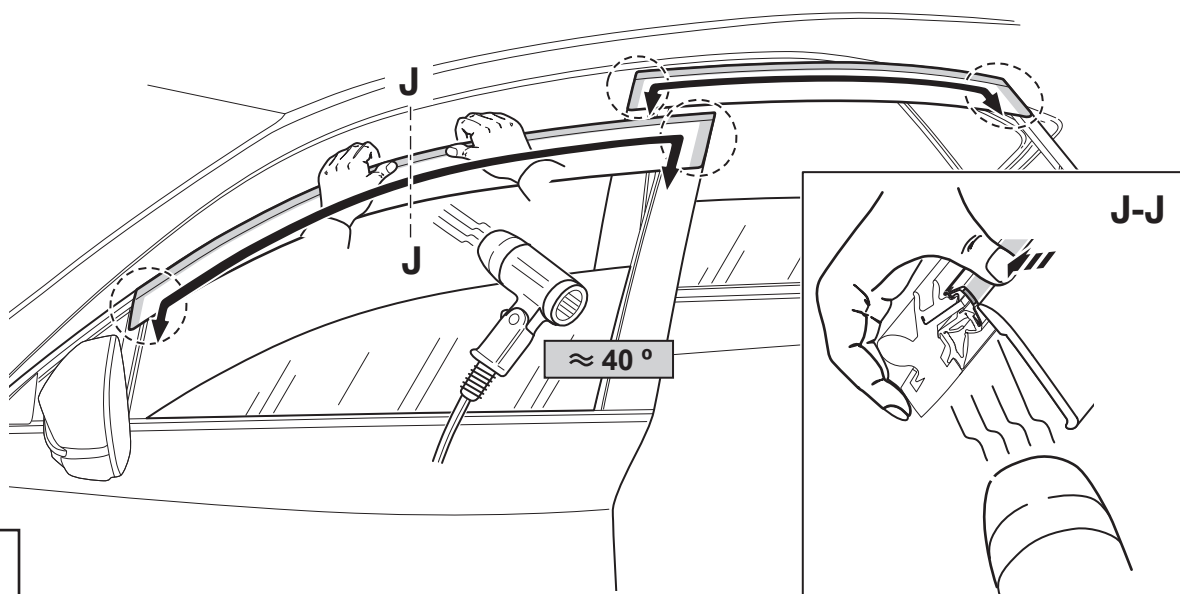


10

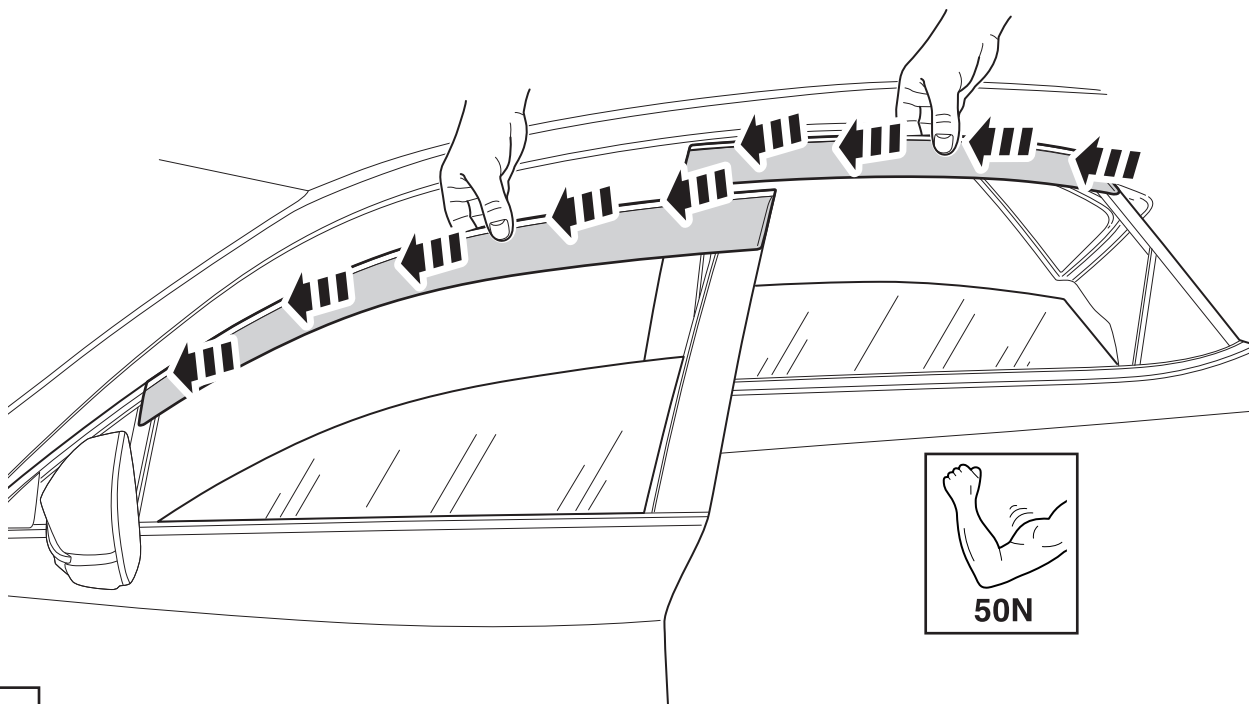

11

INFO

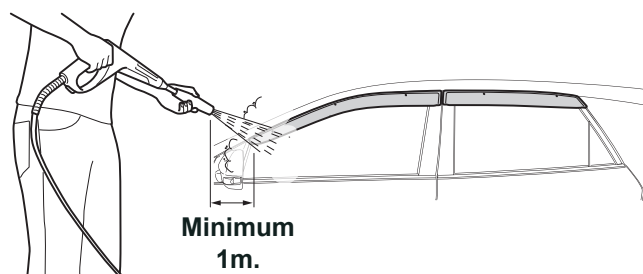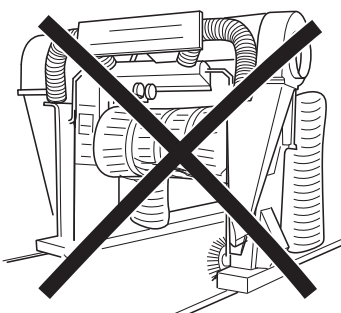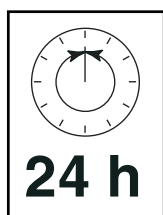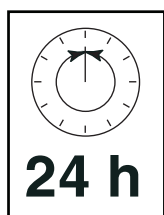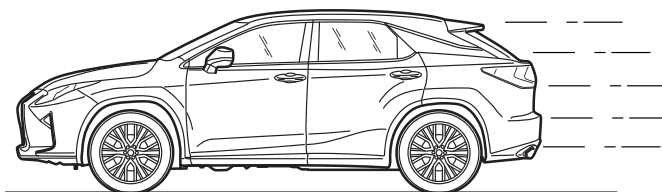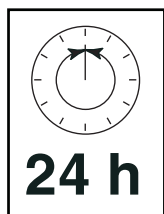

Model / Year **RX**
As from 2015/09


Wind deflector

VIN n°



DURING INSTALLATION



P/N = OK

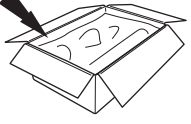


1

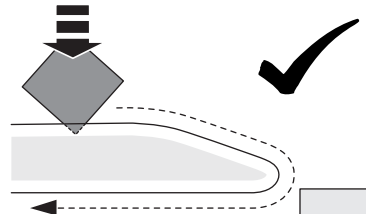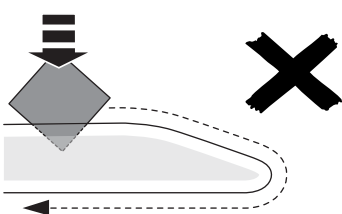


2




= OK

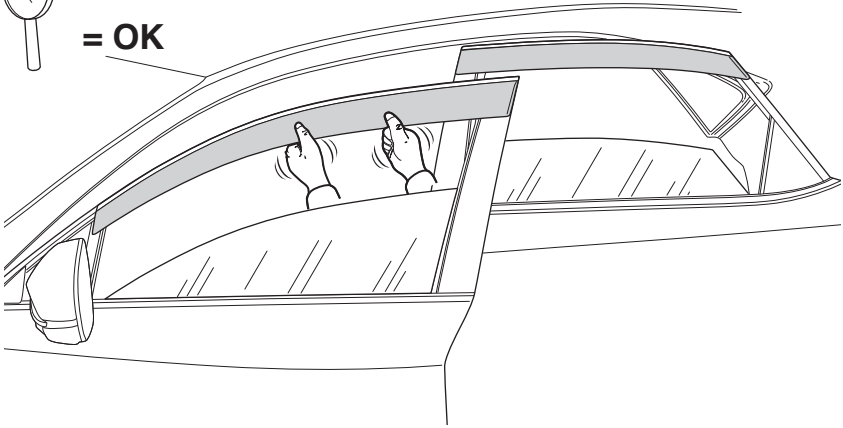

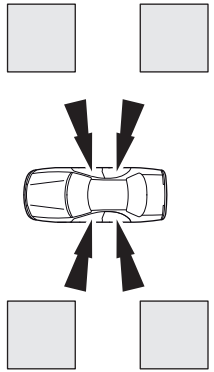

3

AFTER INSTALLATION

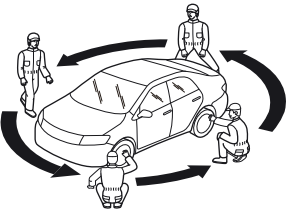

= OK



1

Installation Date:

.. / .. / ..

Technician Name & Signature:

Stamp: