


VERTICAL CARGO NET INSTALLATION INSTRUCTIONS IS

Model year	2013/04, 2016/10
Vehicle code	**E18**-DE***W
Part number	PZ416 - C0341 - ZA

Revision Record


Rev. No.	Date	Page	Picture	Update	New	Deleted
1	05-11-2013	3, 5	A, 6	X		
2	29-06-2016	1, 2, 5		X	CS	

A

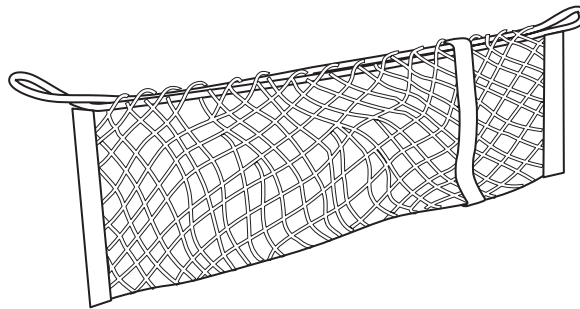


1x

B

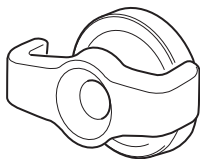

2x

C








2x

D




2x

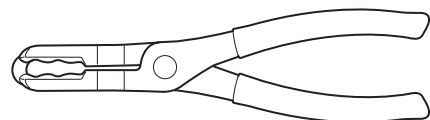


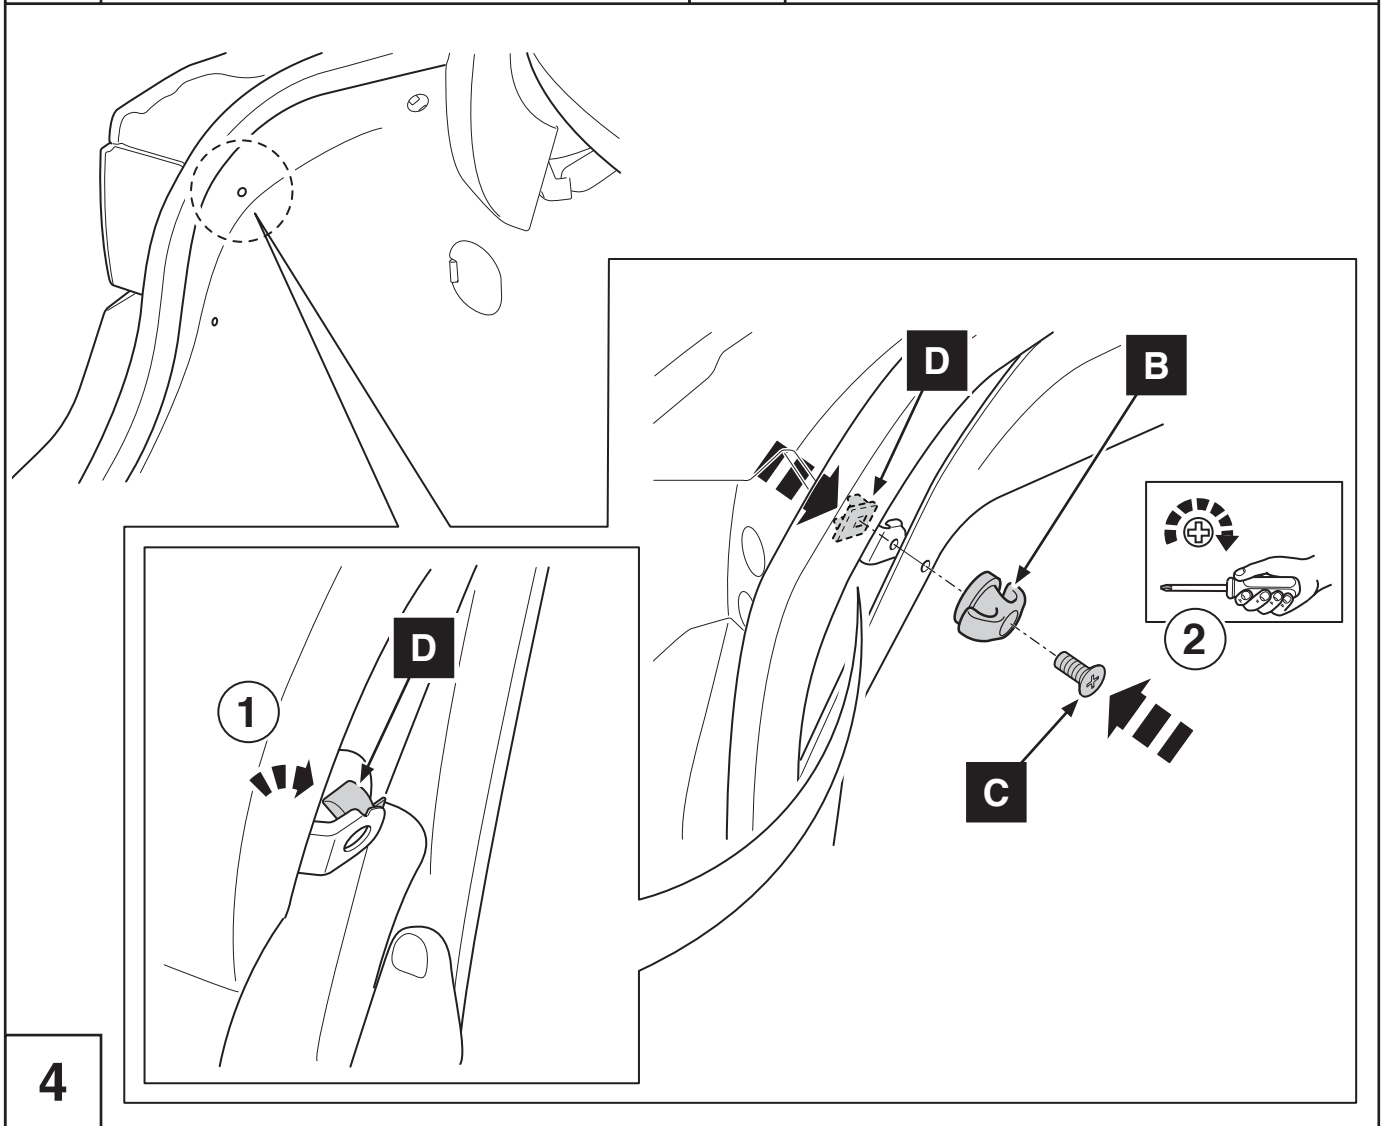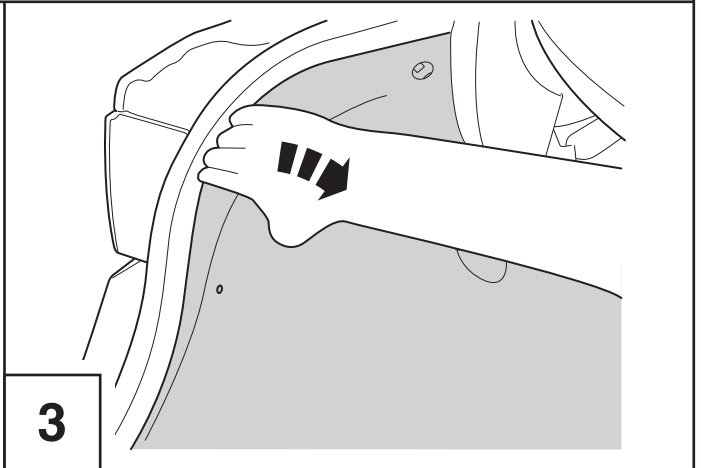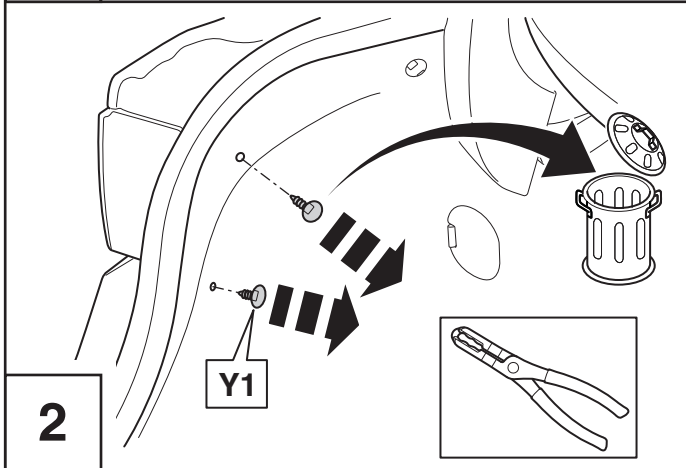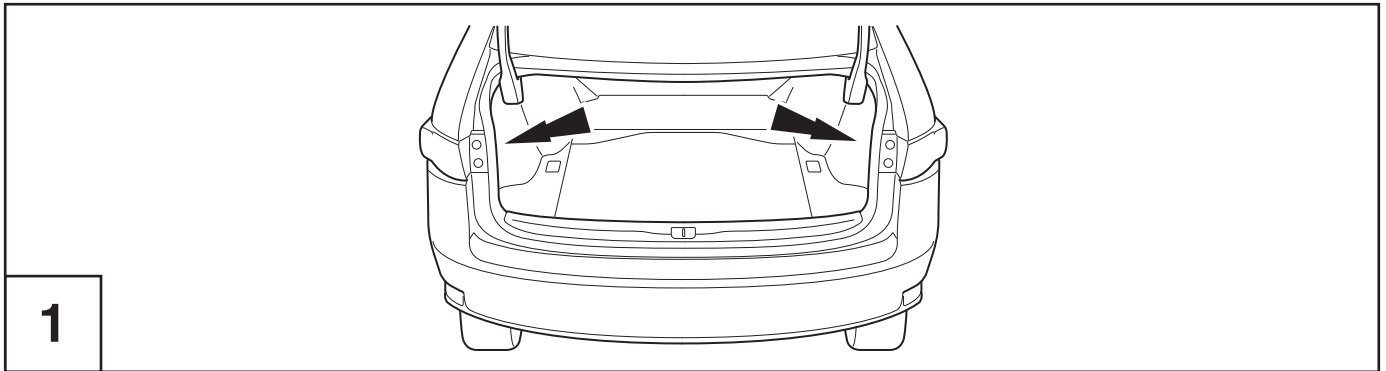

5

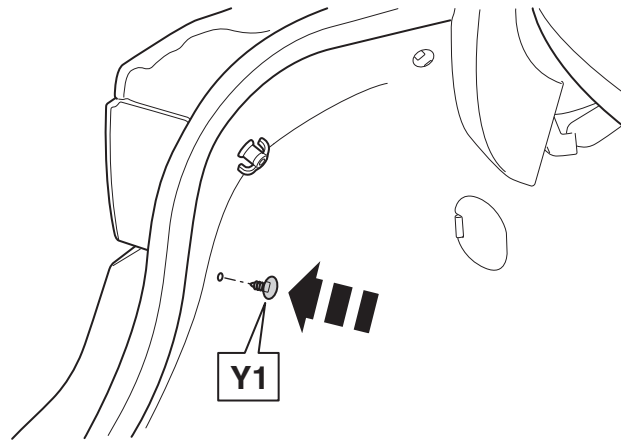

6

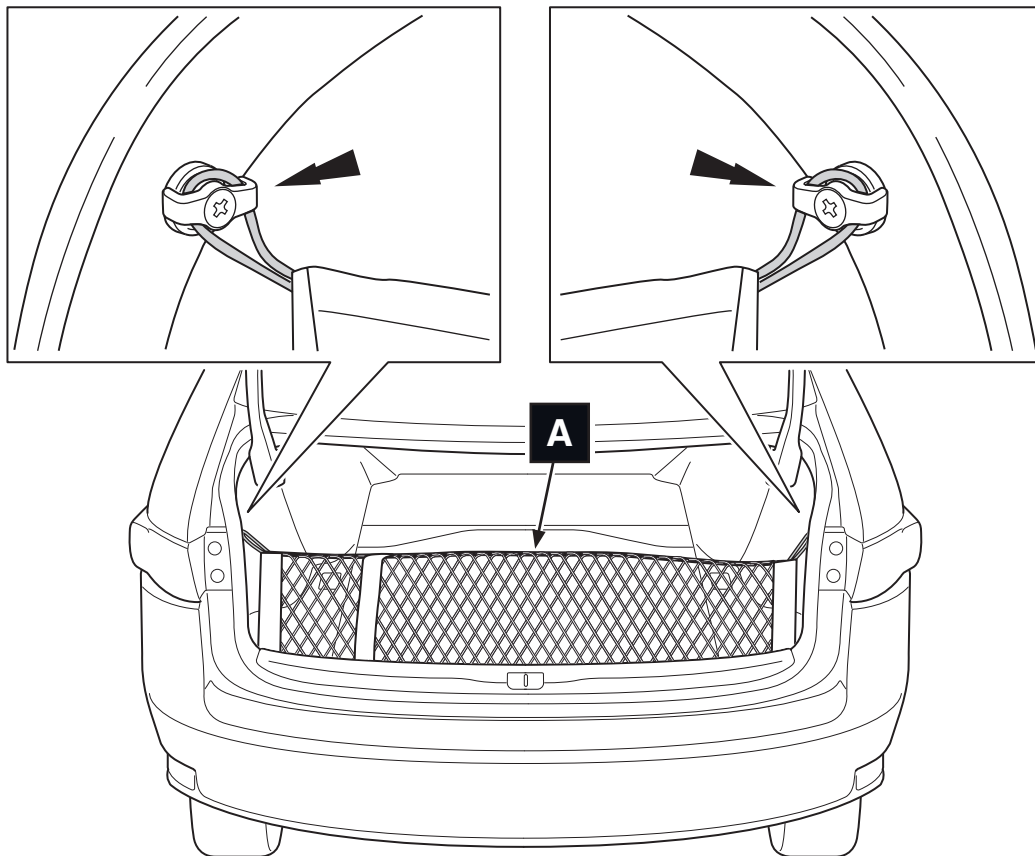

CHECK SHEET



Model / Year IS 2013/04, 2016/10

Vertical Cargo Net

VIN n°

P/N = OK

= OK

Installation Date:
. . / . . /

Technician Name & Signature:

Stamp: