


Wind deflector INSTALLATION INSTRUCTIONS UX

Model year	As from 2018/10 As from 2020/08 (UX300e)
Vehicle code	MZA*1**-AWXBBW KMA10*-AWDBSW
Part number	08162-76820



Revision Record

Rev. No.	Date	Page	Step	Remarks
①	08/01/2019	1, 2	-	P/N Change
②	28/04/2020	1, 13	-	Model year & Vehicle code updated

① 08162-76820

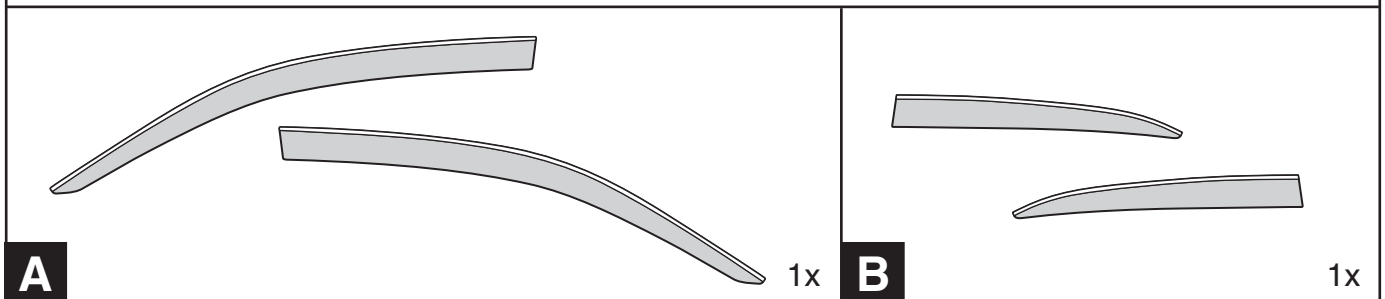

LHS=RHS

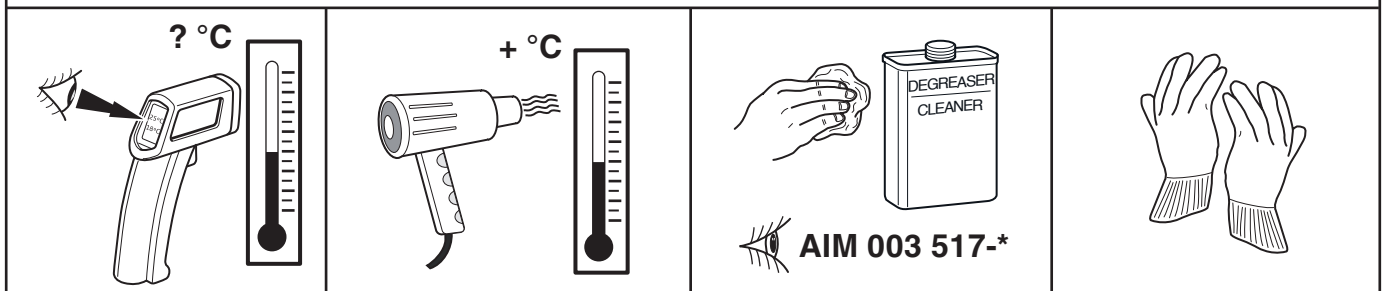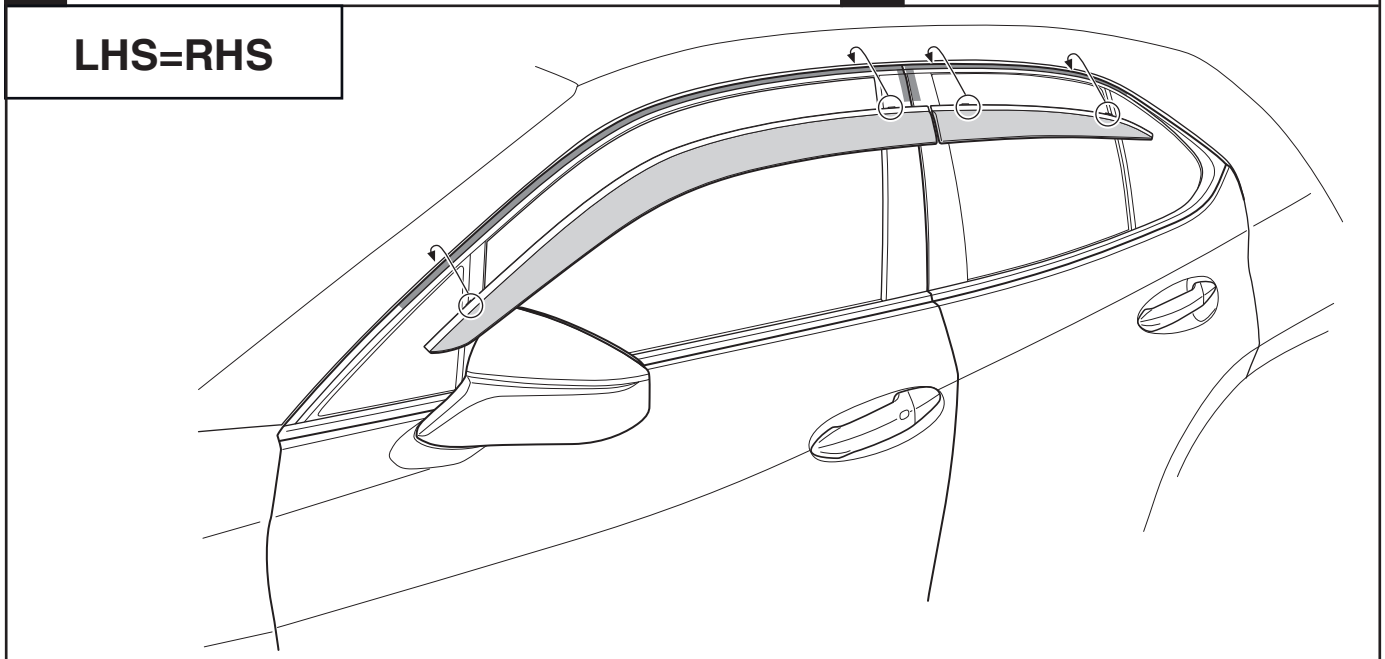






INFO





Material **S**afety **D**ata **S**heet




Technical **D**ata **S**heet

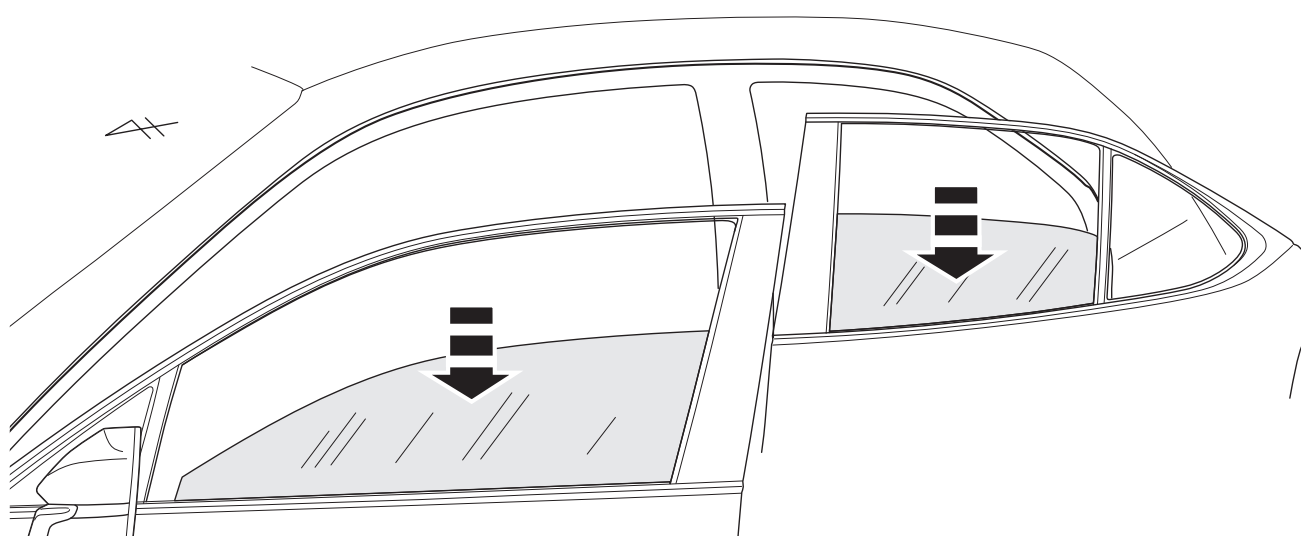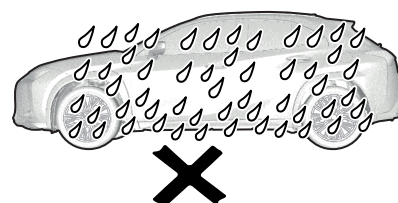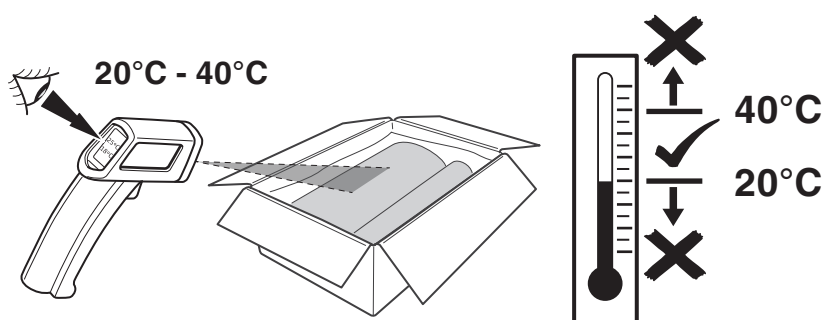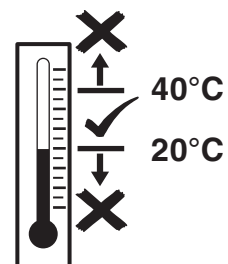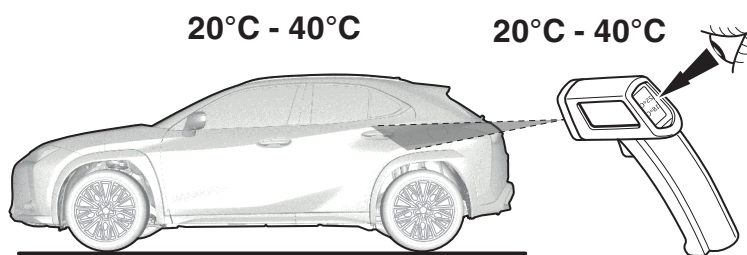




1

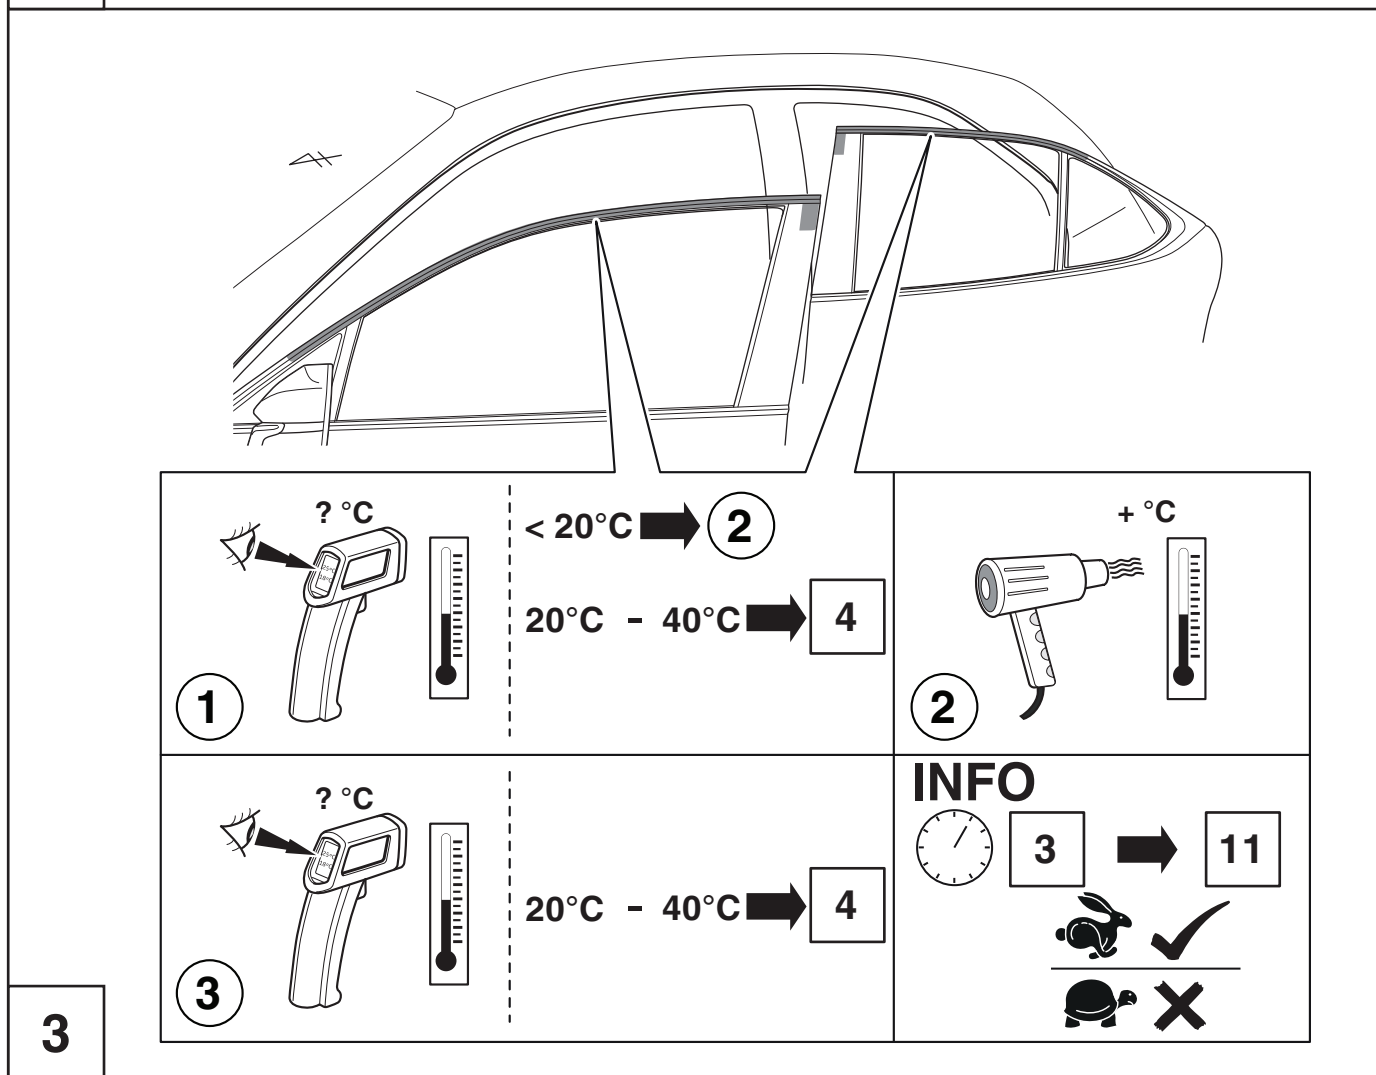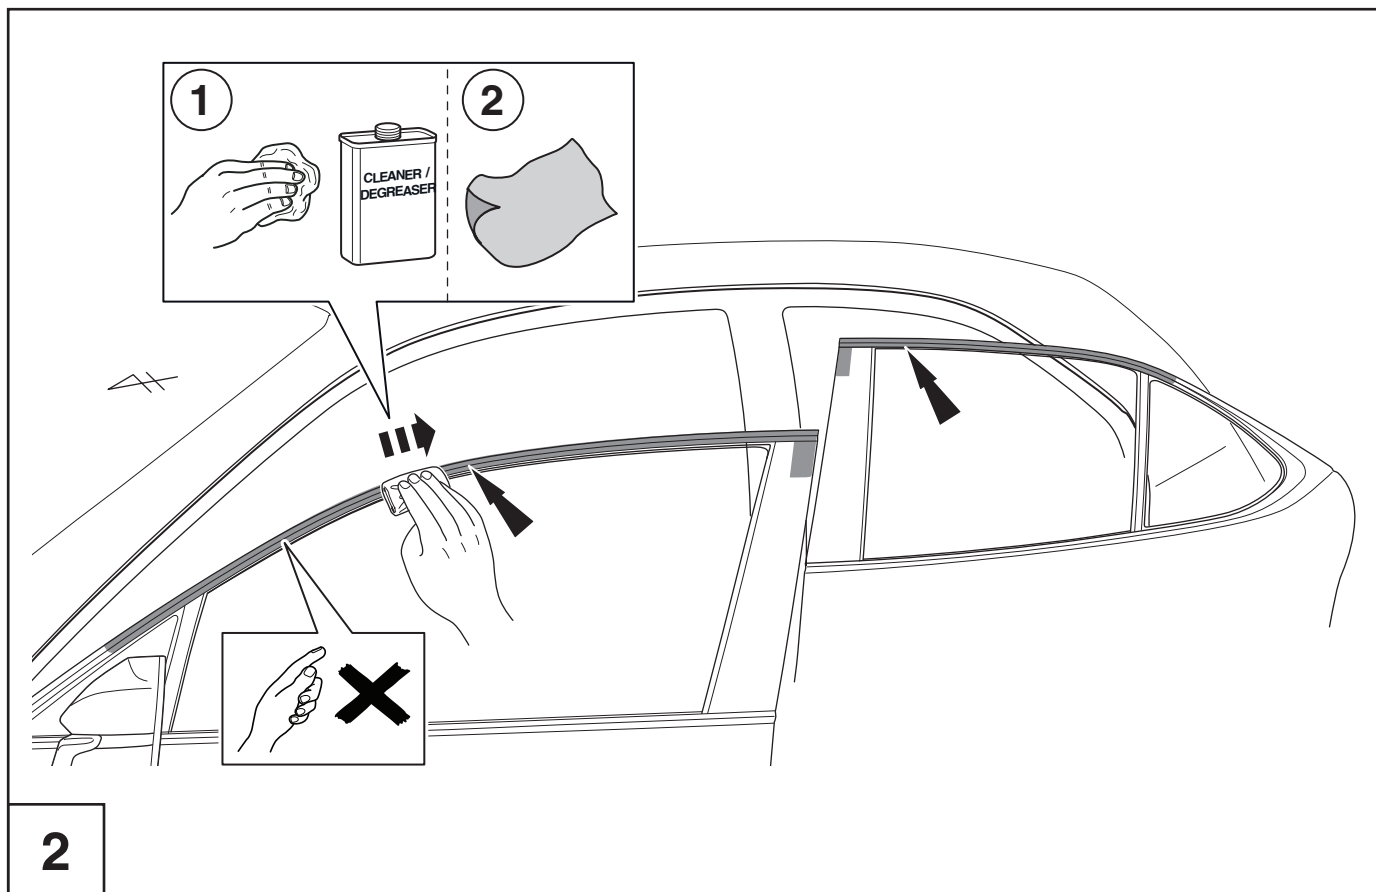

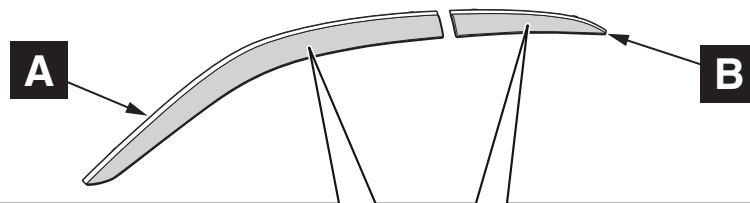


1	< 20°C → 2 20°C - 40°C → 5	2
3	20°C - 40°C → 5	INFO 4 → 11


4

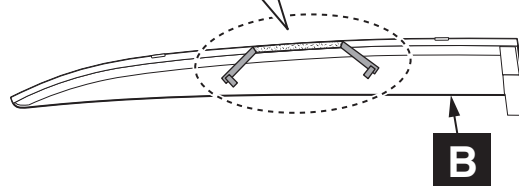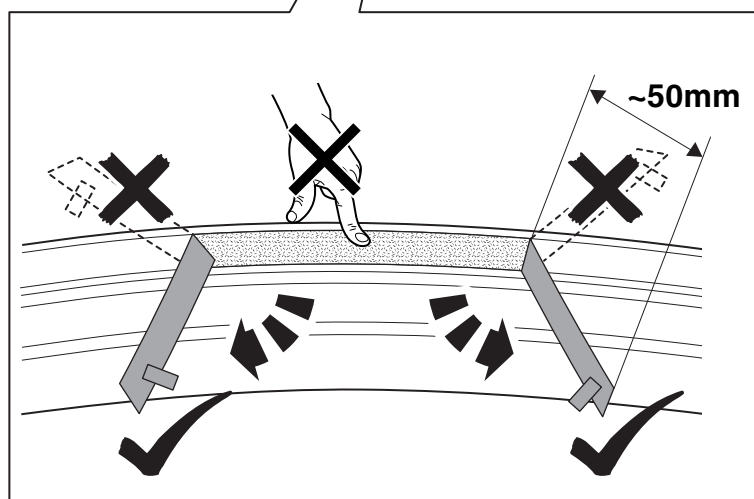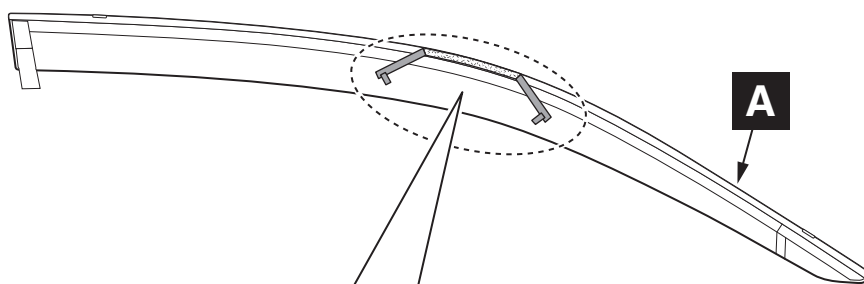



5



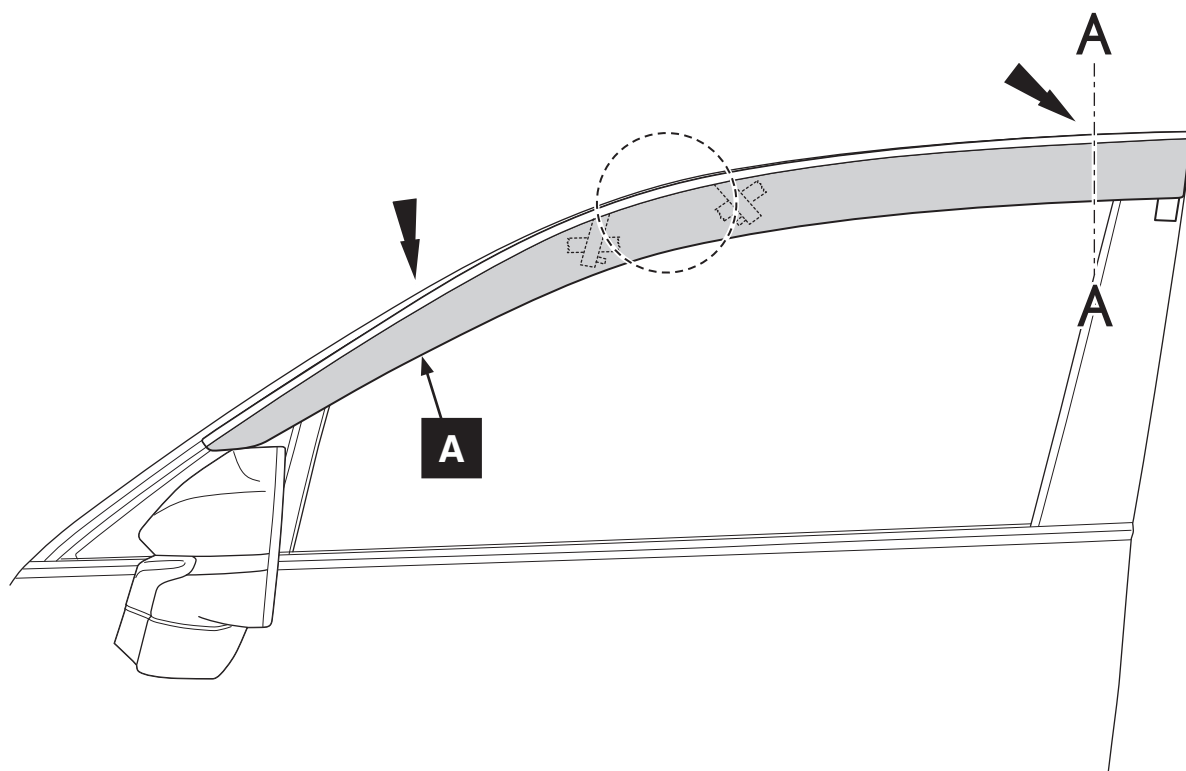




A-A


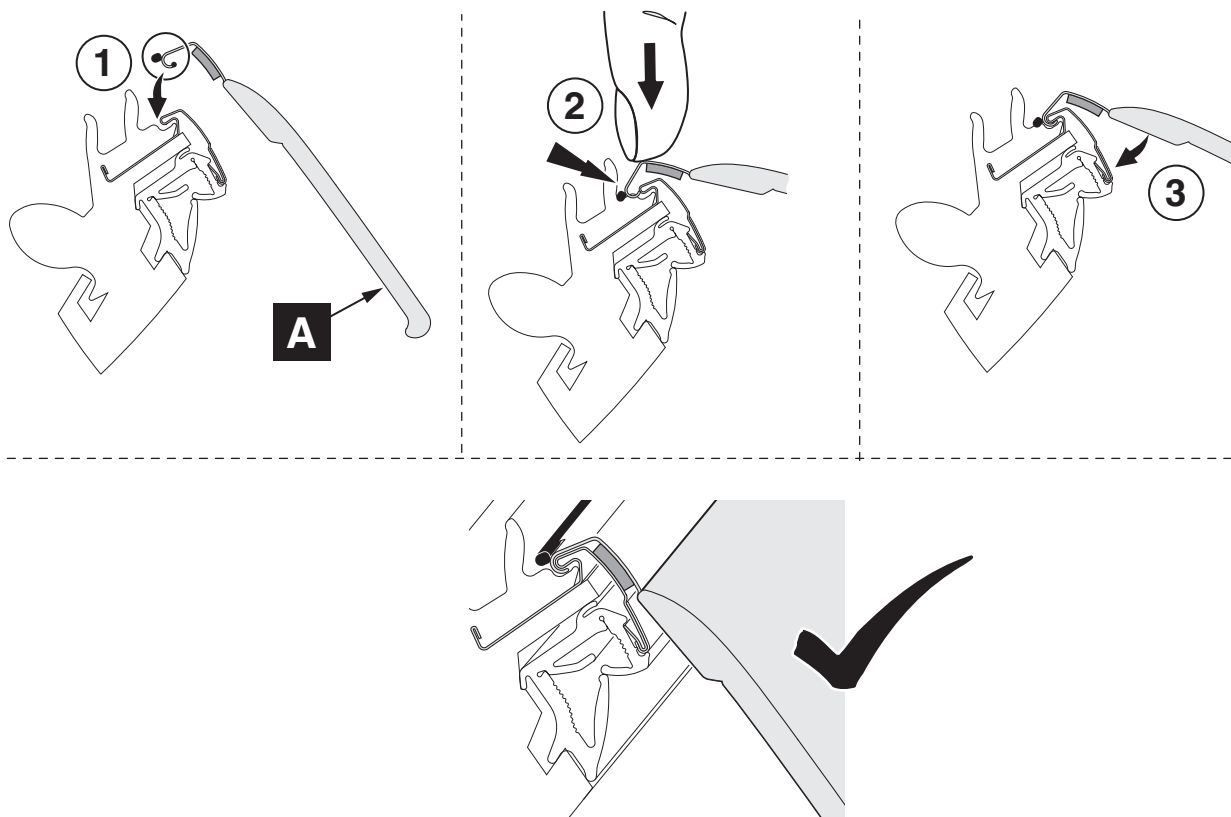


6

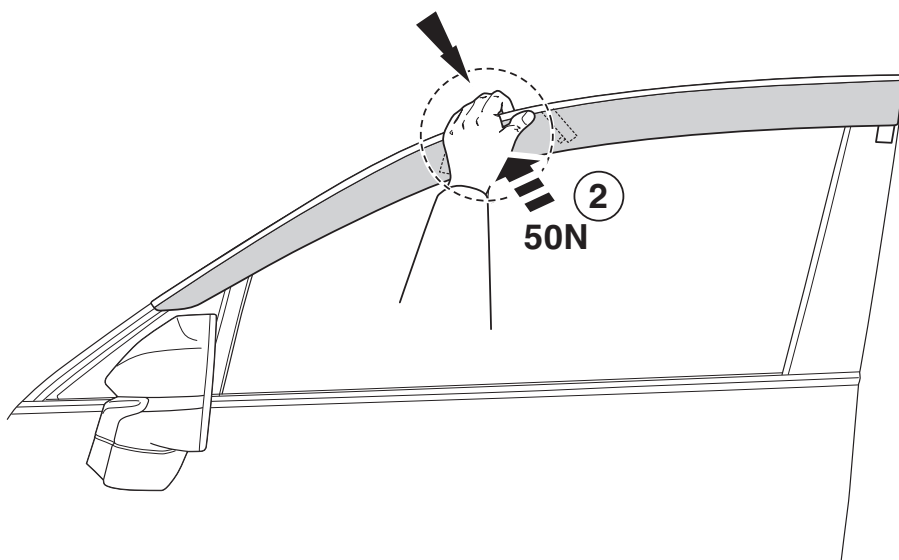
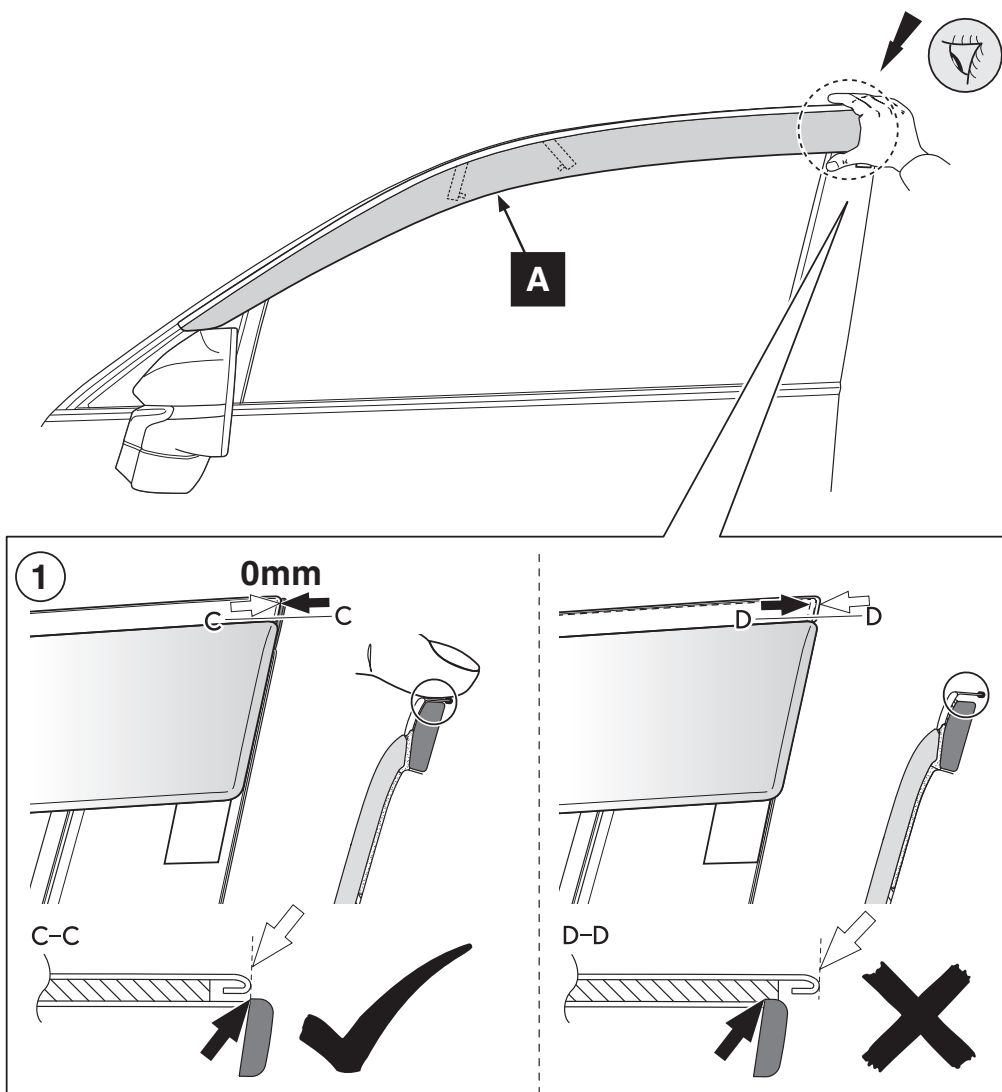


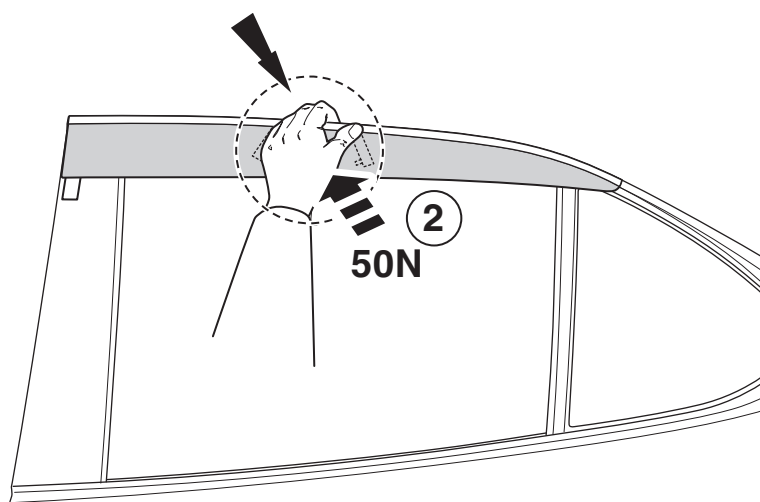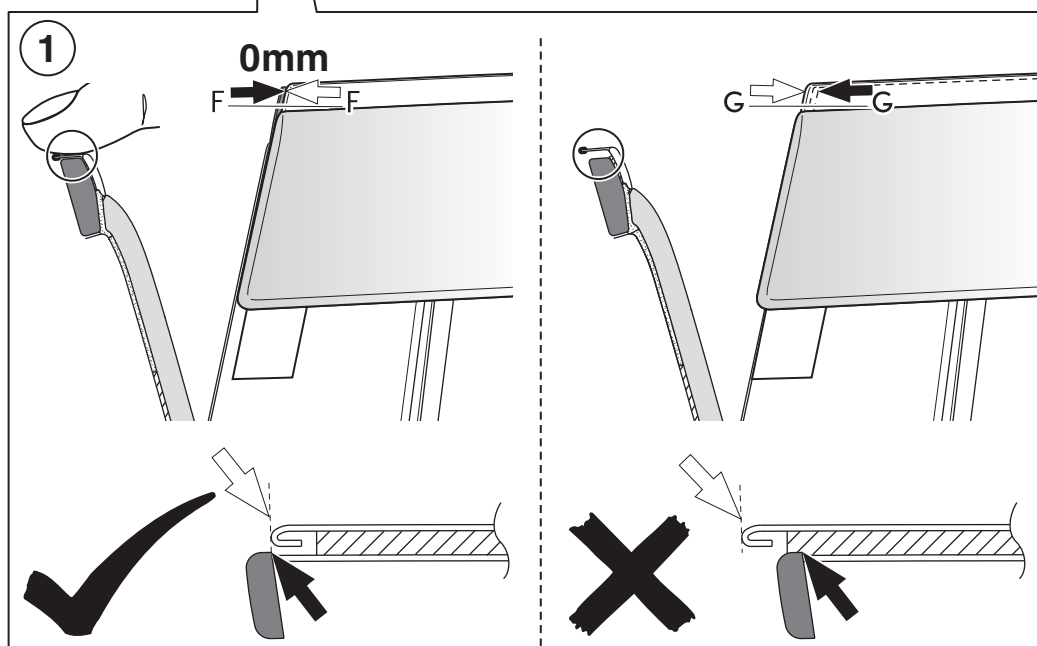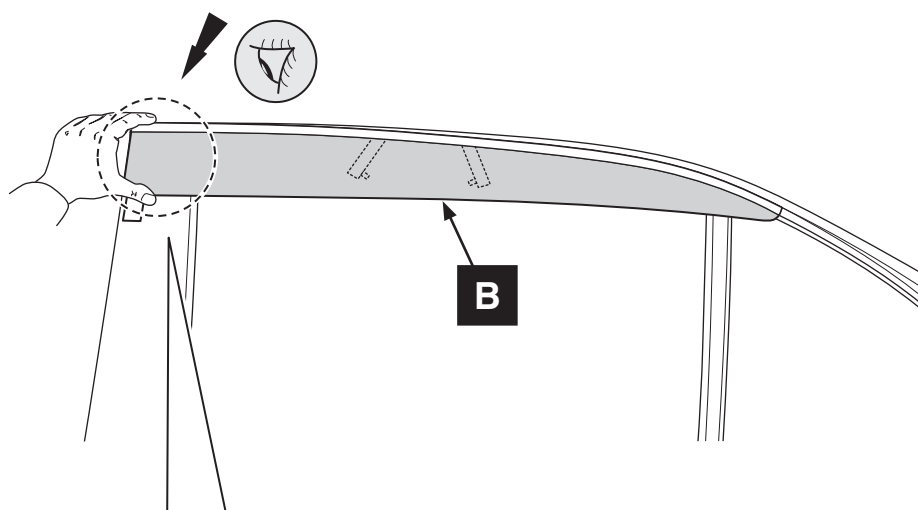

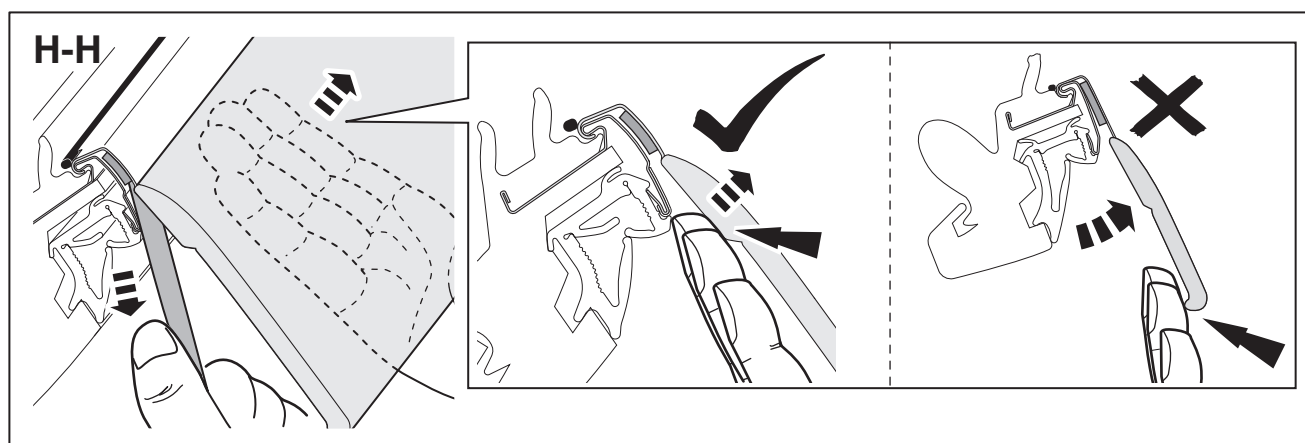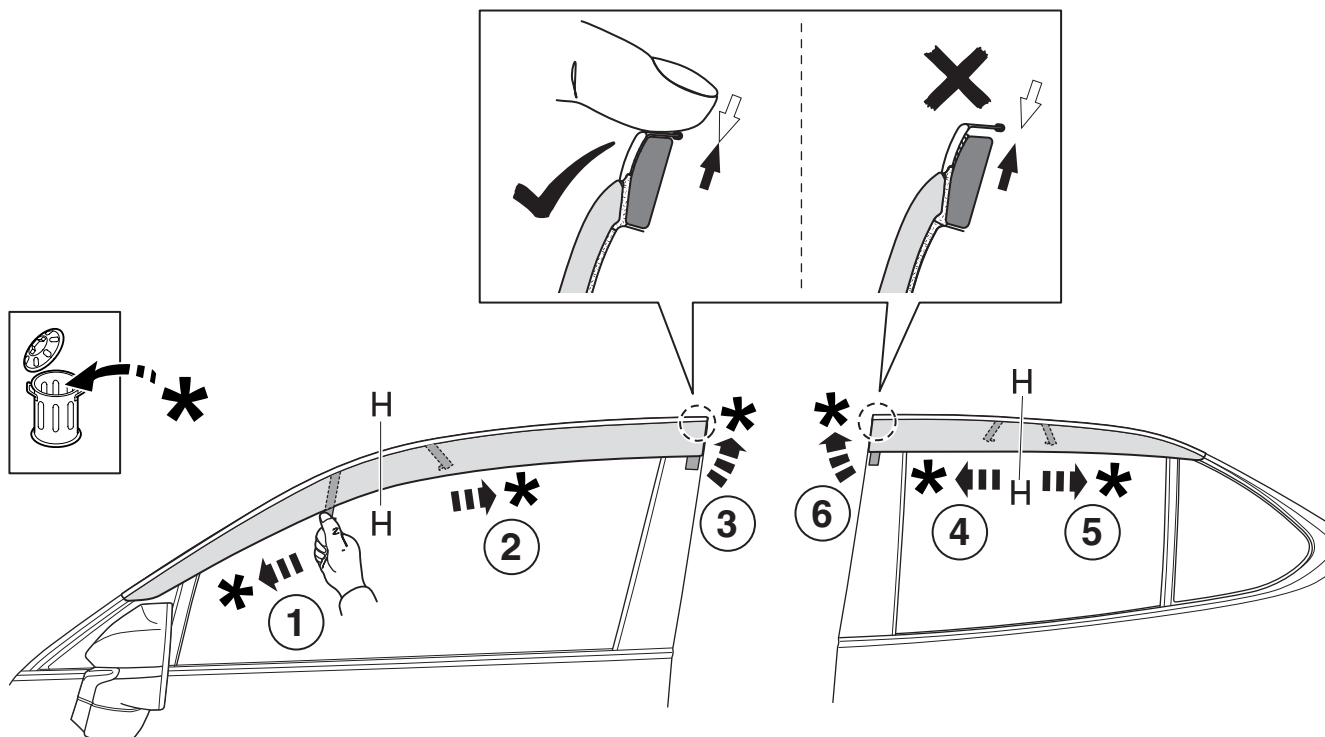


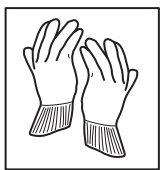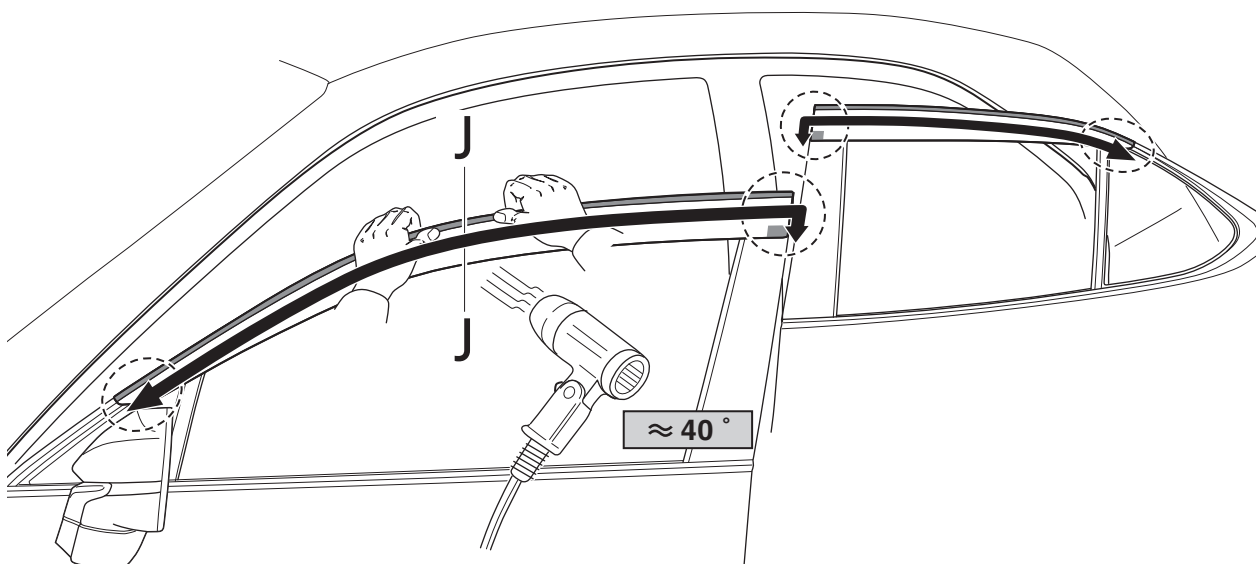

J-J

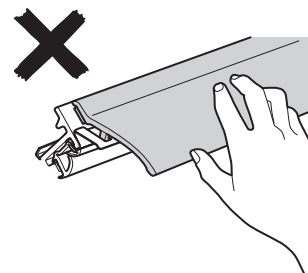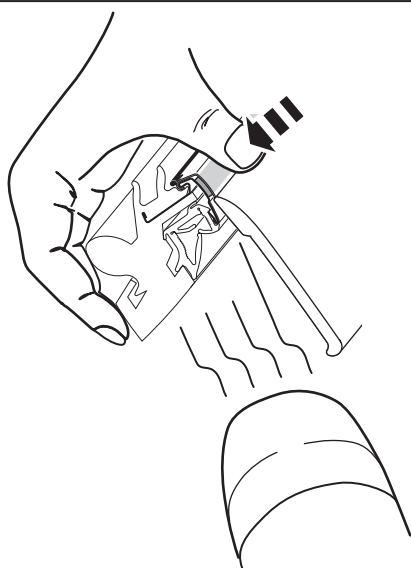


10

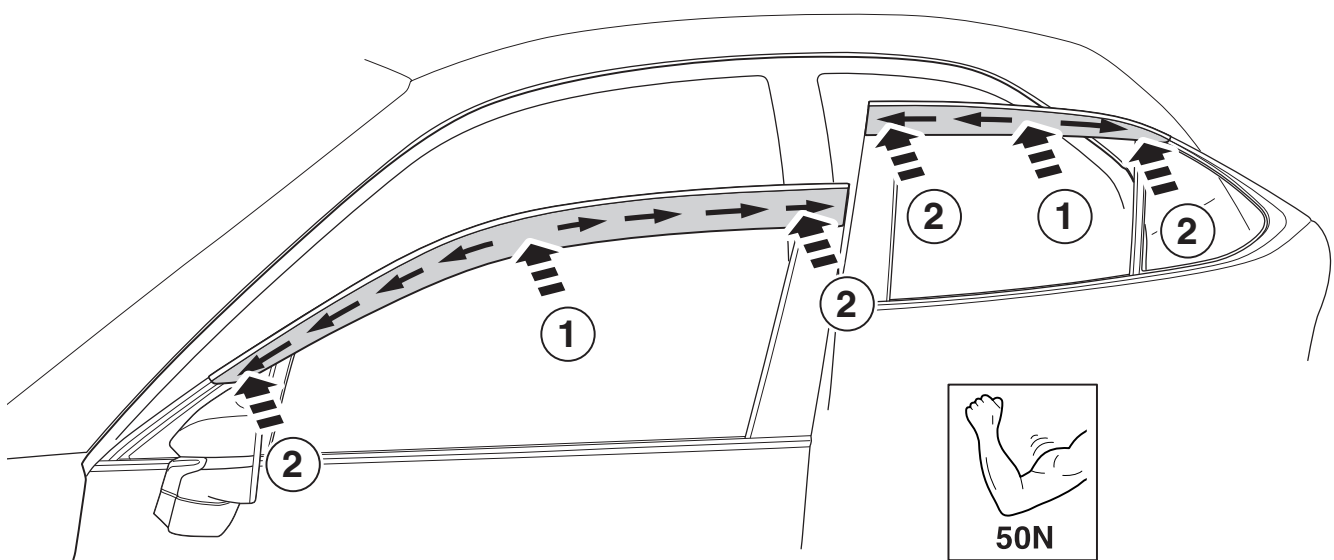


11

RHS = LHS


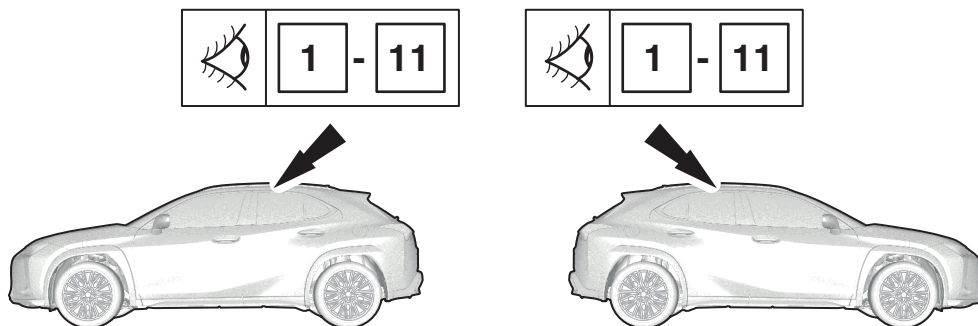


12


INFO

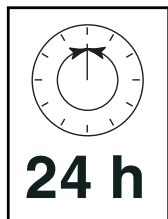



24 h

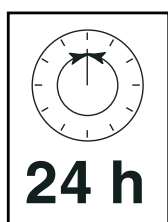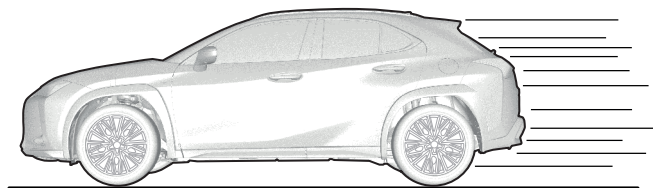

24 h

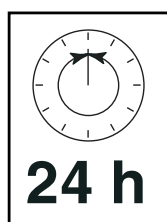

24 h

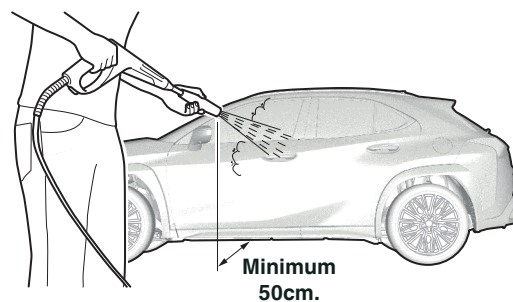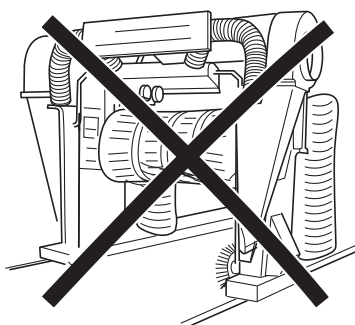



CHECK SHEET

Page 1 of 1

UX


Model/Year As from 2018/10

Scuff plates




As from 2020/08 (UX300e)

VIN n°

DURING INSTALLATION

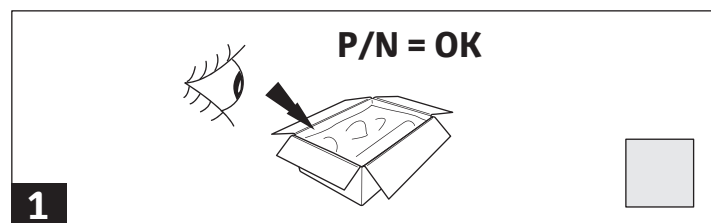

AFTER INSTALLATION

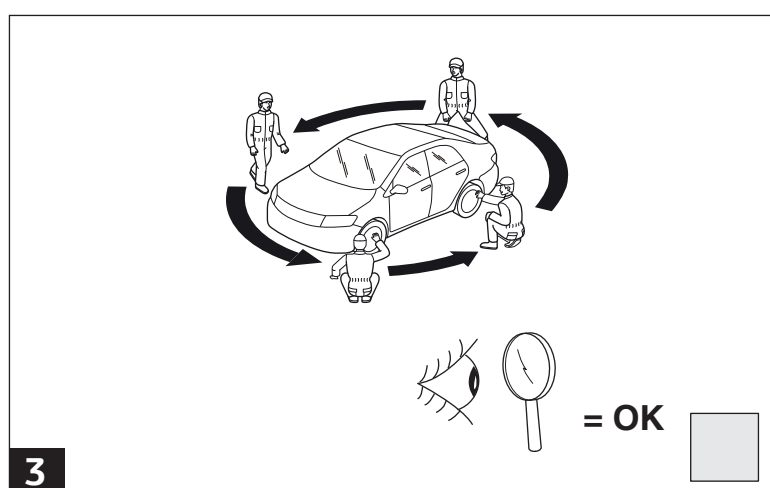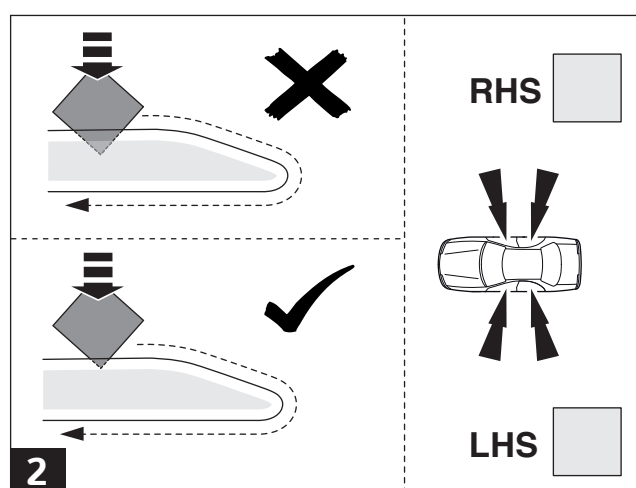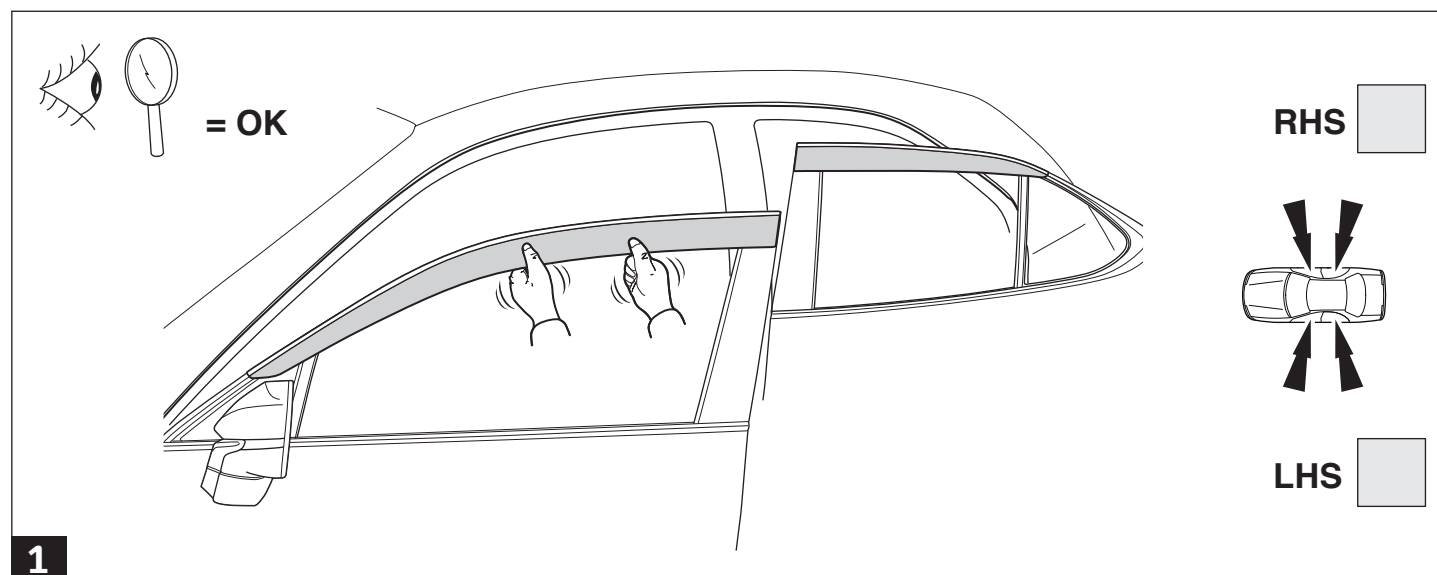

Installation Date:

.. / .. / ..

Technician Name & Signature:

Stamp: